



- 1 Power Button
- 2 MicroSD Lock/Unlock Button
- 3 Power Indicator – On
- 4 Battery Level Indicator
- 5 Charging Indicator
- 6 Wifi Status Indicator
- 7 Number of Wifi Users
- 8 MicroSD Copying Progress
- 9 MicroSD Lock/Unlock Indicator
- 10 Wifi Antenna Connector (Optional)
- 11 Micro USB Input (Charging Device)
- 12 MicroSD Port
- 13 USB Power Output (For Charging Other Devices)


POWER ON/OFF



Hold power button for **2 seconds**




To power WiFi on/off, hold SD lock button for **2 seconds**

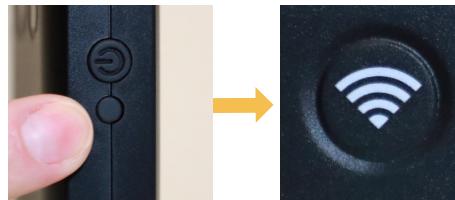


CONNECT TO WIFI

Ensure that Wifi is on

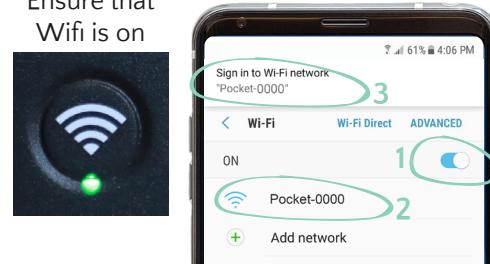

Note: Default WiFi name and homepage url are shown. Change in admin settings.

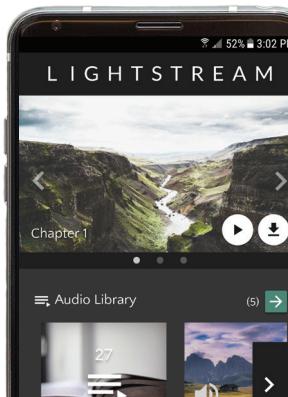

7+ WiFi Users




Model: RWOLSPV1
Input: DC 5V / 1.9A
Output: DC 5V / 500mA
Capacity: 5200mAh / 19.24Wh



Warning: Batteries should not be exposed to excessive heat such as sunshine or fire.

CHARGE BATTERY

Tap power button for battery level

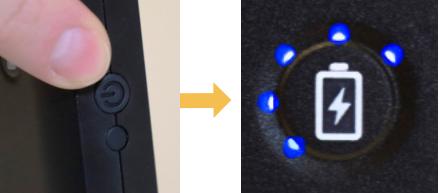

To Charge a Phone: Plug the phone into the USB port and tap the power button.

Full Charge




Charge Time = About **5 hours**
Runtime = **10 hours**



MICRO SD COPYING

Lights flash to show progress

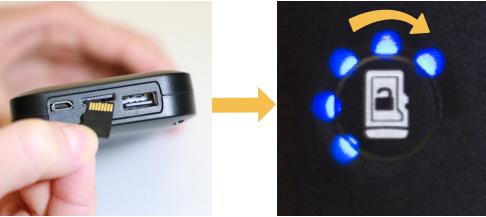

Green SD Light = Safe to remove SD card

All media copied sucessfully



Not enough space.
Only some media copied.




To lock or unlock SD card, quickly press SD lock button.
Button can be disabled in admin settings.



MANAGE MEDIA & SETTINGS



Ensure that Wifi is on

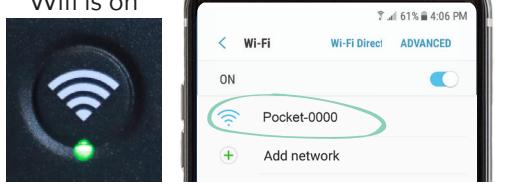

In web browser, navigate to
(By Default):

url: ConnectWifi.com/admin

Username: admin **Password:** admin

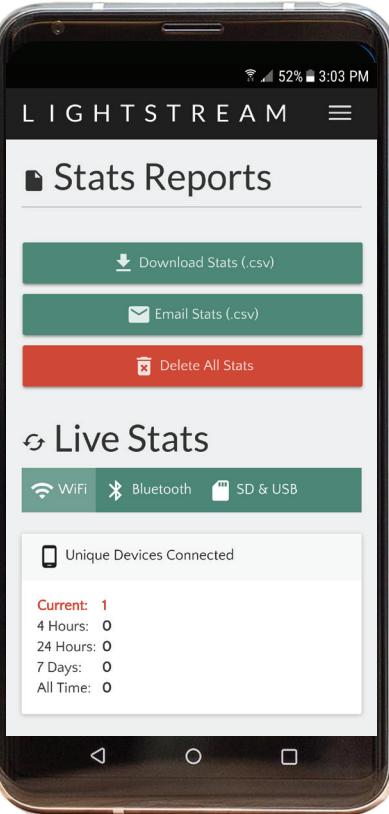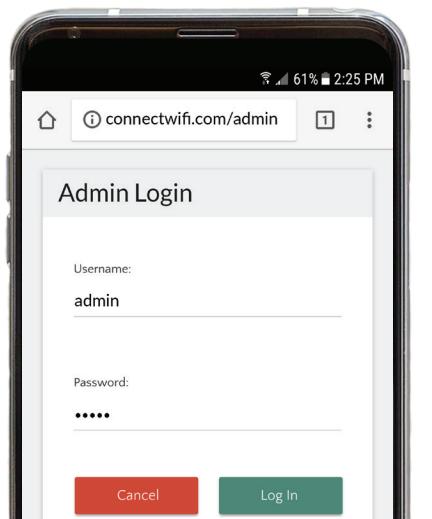

LIGHTSTREAM POCKET

QUICK START



RENEWWORLDOUTREACH
RENEWOUTREACH.ORG