

刀模线不印刷

尺寸:120\*190mm


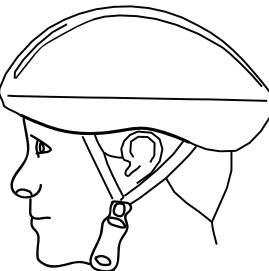
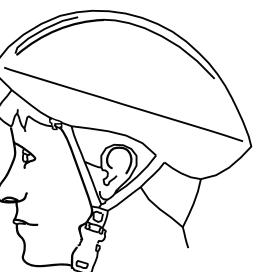

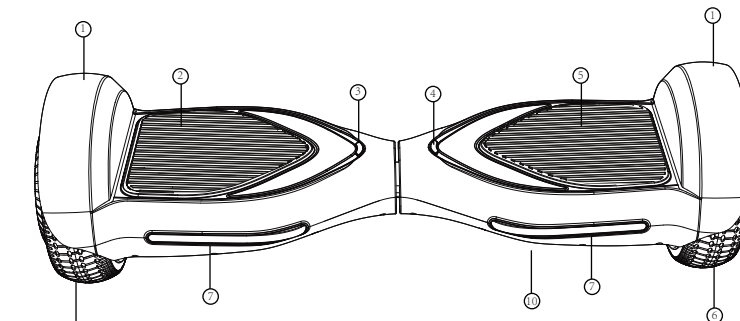
封面封底 200 g铜版纸,过哑胶,彩色印刷


封面封底的内页,保持空白,不要印刷

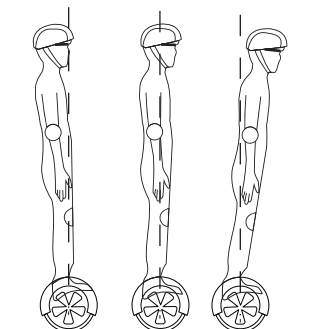
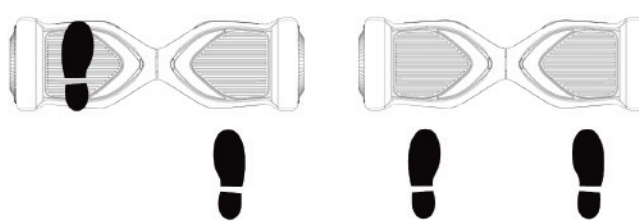
内页128g铜版纸,不过胶

按照页码顺序,骑马钉装订成册

封面

<div data-bbox="159 402 355 426">REPLAY</div> <div data-bbox="234 446 287 455">HB632-1</div> <div data-bbox="227 467 291 482">PULSE</div> <div data-bbox="155 490 361 502">Electronic Self Balancing Hoverboard</div> <div data-bbox="110 558 393 667">  </div> <div data-bbox="204 735 312 749">Instruction Manual</div> <div data-bbox="159 758 374 784">PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE</div>	<div data-bbox="442 393 638 405">HELMET SAVES LIVES!</div> <div data-bbox="442 429 715 470"> <p><b>Always wear a properly fitted helmet certified by CPSC (Consumer Product Safety Commission) when you ride your hoverboard.</b></p> </div> <div data-bbox="442 490 706 502">Correct Fitting: Make sure your helmet covers your forehead.</div> <div data-bbox="453 526 549 623">  </div> <div data-bbox="442 655 715 682">Incorrect Fitting: Forehead is exposed and vulnerable to serious injury.</div> <div data-bbox="453 702 549 799">  </div> <div data-bbox="578 837 589 846">1</div>	<div data-bbox="763 388 842 399">  <b>WARNING</b> </div> <div data-bbox="763 402 989 414"> <p><b>PLEASE READ THE INSTRUCTION MANUAL THOROUGHLY.</b></p> </div> <div data-bbox="763 417 1057 473"> <p>Thank you for purchasing the PULSE Hoverboard. Failure to follow the basic instructions and safety precautions listed in the instruction manual can lead to damage to your device, other property damage, serious bodily injury and even death. Please retain this manual for future use and reference.</p> </div> <div data-bbox="763 493 812 502">ATTENTION</div> <div data-bbox="763 508 1057 740"> <ol style="list-style-type: none"> <li>1. Use only the supplied charger with this hoverboard. Use of any other charger may create fire or explosion.</li> <li>2. The operating temperature range of the hoverboard is 32-104°F(0-40°C).</li> <li>3. Always wear shoes, helmet and appropriate safety gear such as knee and elbow pads.</li> <li>4. Do not operate under the influence of drugs or alcohol.</li> <li>5. You must comply with local laws and give way to pedestrians.</li> <li>6. Do not ride without proper training. Do not ride at high speeds, on uneven terrain, or on slopes.</li> <li>7. Do not ride on icy or slippery surfaces.</li> <li>8. Do not ride "double" with more than one rider on the hoverboard. Do not perform stunts or stop abruptly.</li> <li>9. Do not operate near swimming pools or other bodies of water.</li> <li>10. Read the instruction manual and warning labels before riding.</li> <li>11. Store the hoverboard in a dry, ventilated environment.</li> <li>12. When transporting the hoverboard, avoid violent crashes or impact.</li> </ol> </div> <div data-bbox="763 761 880 770">LOW TEMPERATURE WARNING</div> <div data-bbox="763 773 1057 814"> <p>Low temperature will affect the lubrication of moving parts inside the hoverboard, increasing internal resistance. At the same time, in low temperatures, the discharge capacity and the capacity itself of the battery will be significantly decreased.</p> </div> <div data-bbox="900 837 910 846">2</div>	<div data-bbox="1085 388 1368 399">Use caution when riding the hoverboard in cold temperatures (below 40 degrees F).</div> <div data-bbox="1085 417 1368 458"> <p>Doing so may increase the risk of mechanical failures of the hoverboard, which may lead to damage to your device, other property damage, serious bodily injury and even death.</p> </div> <div data-bbox="1085 476 1183 485">SAFETY INSTRUCTIONS</div> <div data-bbox="1085 488 1368 814"> <ul style="list-style-type: none"> <li>• Keep the device away from heat sources, direct sunlight, humidity, water and any other liquids.</li> <li>• Do not operate the device if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the device.</li> <li>• Do not use the device if it has been dropped or damaged in any way.</li> <li>• Repairs to electrical equipment should only be performed by the manufacturer. Improper repair voids the warranty and may place the user at serious risk.</li> <li>• Do not puncture or harm the exterior surface of the product in any way. Keep the device free from dust, lint, etc.</li> <li>• Do not use this device for anything other than its intended use or purpose. Doing so may damage the device or lead to property damage, injury or death.</li> <li>• This product is not a toy. Keep out of reach of children.</li> <li>• Do not expose batteries, battery pack, or batteries installed to excessive heat, such as direct sunlight, or open flame.</li> <li>• Do not allow hands, feet, hair, body parts, clothing or similar articles to come in contact with moving parts, wheels or drive train, while the engine is running.</li> <li>• Do not operate or allow others to operate the hoverboard, until the user understands all instructions, warnings and safety features described in this manual.</li> <li>• Check with your doctor if you have a medical condition that could affect your ability to use this hoverboard.</li> </ul> </div> <div data-bbox="1221 837 1232 846">3</div>	<div data-bbox="1730 388 1825 396">DESCRIPTION OF PARTS</div> <div data-bbox="1738 408 2002 523">  </div> <div data-bbox="1738 564 1991 640"> <table border="1"> <tr> <td>1 Fender</td> <td>8 Tire</td> </tr> <tr> <td>2 Right Foot Mat</td> <td>7 LED Light</td> </tr> <tr> <td>3 Battery Indicator</td> <td>6 Power Button (located in rear)</td> </tr> <tr> <td>4 System Indicator</td> <td>9 Charge Port (located in rear)</td> </tr> <tr> <td>5 Left Foot Mat</td> <td>10 Speaker (bottom)</td> </tr> </table> </div> <div data-bbox="1730 661 1825 667">INSTRUCTIONS FOR USE</div> <div data-bbox="1730 673 1893 685">Please read the following instructions carefully.</div> <div data-bbox="1730 705 1836 711">BATTERY SPECIFICATIONS</div> <div data-bbox="1730 717 1893 773"> <p>Battery Type: Rechargeable lithium-ion battery          Fully Charging Time: 5 hours          Voltage: 25.2V          Initial Capacity: 4.0 Ah</p> </div> <div data-bbox="1730 793 1806 802">BATTERY POWER</div> <div data-bbox="1730 808 2021 834"> <p>You must stop driving your Hoverboard, if it displays low power, otherwise it may affect performance.</p> </div> <div data-bbox="1866 837 1874 846">5</div>	1 Fender	8 Tire	2 Right Foot Mat	7 LED Light	3 Battery Indicator	6 Power Button (located in rear)	4 System Indicator	9 Charge Port (located in rear)	5 Left Foot Mat	10 Speaker (bottom)
1 Fender	8 Tire													
2 Right Foot Mat	7 LED Light													
3 Battery Indicator	6 Power Button (located in rear)													
4 System Indicator	9 Charge Port (located in rear)													
5 Left Foot Mat	10 Speaker (bottom)													

<p>• Do not use the battery if it emits an odor.</p> <p>• Do not use the battery if it is leaking.</p> <p>• Do not allow children or animals near the battery.</p> <p>• Remove the charger prior to driving.</p> <p>• The battery contains dangerous substances. <b>DO NOT OPEN THE BATTERY. DO NOT INSERT ANYTHING INTO THE BATTERY.</b></p> <p>• Only use the charger that was provided with the Hoverboard. <b>DO NOT USE ANY OTHER CHARGERS.</b></p> <p>• Do not charge a battery that has been overly discharged.</p> <p>• Dispose of the battery in accordance with local laws.</p> <p><b>CHARGING</b></p> <p>Only use the charger that was provided with your Hoverboard.</p> <ul style="list-style-type: none"> <li>• Ensure that the charging port is dry.</li> <li>• Plug the charging cable into the Hoverboard.</li> <li>• Connect the charging cable to the power supply.</li> <li>• The red light indicates that it has begun charging. If the light is green, check whether the cable is connected correctly.</li> <li>• When the indicator light turns from red to green, this indicates that the battery is fully charged. At this time, please stop charging. Overcharging will affect performance.</li> <li>• Use a standard AC outlet.</li> <li>• Charging time up to 5 Hours.</li> <li>• Keep the charging environment clean and dry.</li> </ul> <p><b>TURNING ON/OFF THE HOVERBOARD</b></p> <p><b>Power On:</b> Place the hoverboard on a flat surface. To turn on your hoverboard, Press the power button (located in rear) once, check the battery indicator light should be lit, indicating the device is powered on.</p> <p><b>Power Off:</b> Press the power button once.</p>	<p><b>MAT SENSOR</b></p> <p>There are four sensors under the foot mats. When you steps on the mats, the Hoverboard will automatically initiate self-balance mode.</p> <p>While driving the Hoverboard, you must be sure to step on the foot mats every. <b>DO NOT STEP ON ANY AREA OTHER THAN THE MATS.</b></p> <p>Please do not put items on the mats. This will make the Hoverboard switch on, which could potentially cause injury to people, or damage to the unit.</p> <p><b>BATTERY DISPLAY</b></p> <p>The display board is located in the middle of the hoverboard.</p> <ul style="list-style-type: none"> <li>• Solid Green LED light indicates the hoverboard is fully charged.</li> <li>• Red LED light and beeping indicates low battery.</li> <li>• Yellow light indicates the board is charging.</li> </ul> <p>When the LED light turns red, please recharge the device.</p> <p><b>SYSTEM INDICATOR</b></p> <p>When the user triggers the foot mats , the system indicator will light up, which means that the system enters the running state.</p> <p>When the system has an error during operation, the system indicator will turn red (for more details see SAFETY ALERTS).</p> <p><b>PAIRING THE SPEAKER WITH BLUETOOTH DEVICE</b></p> <ol style="list-style-type: none"> <li>1. Turn on the hoverboard and you would hear an indication tone that indicates the unit's speaker is now in pairing mode.</li> <li>2. Place the hoverboard and the Bluetooth device so that they are no further than 3 feet apart.</li> <li>3. Activate the Bluetooth function on your device, select the "PULSE" from the device's list of available Bluetooth devices.</li> </ol> <p>4. You might be prompted with "Pair with <b>PULSE</b>" message on your source device, with "Cancel" and "OK" options. Please click "OK".</p> <p>5. If required, enter the password "0000" to confirm &amp; finalize pairing.</p> <p>6. Once paired successful, an indication tone will be heard, and you can now start to use the device.</p> <p>7. If pairing is unsuccessful, turn off the device first and then re-pair following the above steps.</p> <p>8. Once you have paired the speaker with a device, the speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.</p> <p>9. Once the speaker is paired with your device, the music will transmit through the speaker. Volume and controls will be made using your music device.</p> <p>You should encounter any problems while streaming, please refer to your device's instruction manual for further information.</p> <p><b>BEFORE RIDING</b></p> <p>It is important that you fully understand all elements of your hoverboard. If these elements are not used correctly, you will not have full control of your hoverboard. Before you ride, learn the functions of the various mechanisms on your hoverboard.</p> <p>Practice using these elements of your hoverboard at slower speeds in a flat, open area before taking the device out in public areas.</p> <p><b>PRE-RIDE CHECKLIST</b></p> <p>Ensure that your hoverboard is in proper working order each and every time you ride, if a part of the hoverboard does not function correctly, please contact our customer support center.</p> <ul style="list-style-type: none"> <li>• Ensure the battery is fully charged before riding your hoverboard.</li> <li>• Please wear all appropriate safety and protective gear as previously mentioned in the instruction manual before operating your hoverboard.</li> </ul>	<p>• Make sure to wear comfortable clothes and flat closed-toe shoes when operating your hoverboard.</p> <p>• Please read carefully the Instruction Manual, which will assist in explaining the basic working principles and provide tips on how to best enjoy your experience.</p> <p><b>SAFETY PRECAUTIONS</b></p> <p>Different localities and countries have different laws governing riding on public roads, and you should check with local officials to ensure you are complying with these laws.</p> <p>REPLAY is not liable for tickets or violations given to riders who do not follow local laws and regulations.</p> <ul style="list-style-type: none"> <li>• For your safety, always wear a helmet and wrist guards that meet CPSC safety standards. In the event of an accident, a helmet and wrist guards can protect you from serious injury and in some cases, even death.</li> <li>• Obey all local traffic laws. Obey red and green lights, one-way streets, stop signs, pedestrian crosswalks, etc.</li> <li>• Give pedestrians the right-of-way.</li> <li>• Do not ride too close to pedestrians and alert them if you intend to pass them from behind.</li> <li>• Your hoverboard is not equipped with reflectors. It is not recommended that you ride in conditions of low visibility.</li> </ul> <p>Think about safety when you ride. You can prevent many accidents if you think about safety. Below is a helpful checklist for compact riders.</p> <p><b>SAFETY RIDING</b></p> <p>Carefully review the following safety precautions prior to operating your Hoverboard.</p> <ul style="list-style-type: none"> <li>• When you are driving the Hoverboard, make sure to take all necessary safety measures, such as wearing a CPSC certified helmet, knee pads, elbow pads, and other protective gear.</li> </ul>	<ul style="list-style-type: none"> <li>• The Hoverboard should only be used for personal use and is not designed for commercial applications, or for use on public roads or pathways.</li> <li>• You are prohibited from using the Hoverboard on any roadway. Check with your local authorities to confirm where you can safely ride. Obey all laws that apply.</li> <li>• Do not allow children, the elderly, or pregnant women to ride the Hoverboard.</li> <li>• Do not drive the Hoverboard under the influence of drugs or alcohol.</li> <li>• Do not carry items when driving your Hoverboard.</li> <li>• Be alert of obstacles in front of you.</li> <li>• Legs should be relaxed, with your knees slightly bent to help you balance.</li> <li>• Make sure your feet are always on the mats.</li> <li>• The Hoverboard should only be driven by one person at a time.</li> <li>• Do not exceed the maximum load.</li> <li>• Keep a safe distance from others while driving your Hoverboard.</li> <li>• Do not engage in distracting activities while driving your Hoverboard, such as talking on the phone, listening to headphones, etc.</li> <li>• Do not drive on slippery surfaces.</li> <li>• Do not make reverse turns at high speeds.</li> <li>• Do not drive in dark places.</li> <li>• Do not drive over obstacles (twigs, litter, stones, etc.).</li> <li>• Do not drive in narrow spaces.</li> <li>• Avoid driving in unsafe locations (around flammable gas, steam, liquid, etc.).</li> <li>• Check and secure all fasteners prior to driving.</li> <li>• The Hoverboard is recommended for riders ages 15 and older.</li> </ul>	<p>Stand directly behind your device and place one foot on the corresponding foot mat (as described in the diagram below). Keep your weight on the foot which is still on the ground, otherwise the device may begin to move or vibrate, making it difficult to step on evenly with your other foot. When you are ready, shift your weight to the foot already placed on the device and step on with your second foot quickly and evenly (as described in the diagram below).</p>  <p>Find your center of gravity. If your weight is distributed correctly on the foot mats and your center of gravity is level, you should be able to stand on your device just as if you were standing on the ground.</p> <p>On average, it takes 3-5 minutes just to get comfortable standing on your device and maintaining proper balance. Having a spotter will help you feel more secure. The hoverboard is an incredibly intuitive device; it senses even the slightest bit of motion, so having any anxiety or reservation about stepping on may cause you to panic and trigger unwanted movement.</p> <p>When you first begin using your device, the fastest way to move in your desired direction is to focus in that direction. You will notice that just thinking about which way you would like to go will shift your center of gravity, and that subtle movement will propel you in that direction.</p> <p>Your center of gravity determines which direction you move, accelerate, decelerate, and come to a complete stop. As described in the diagram below, tilt your center of gravity in the direction you wish to move.</p> <p>To turn, focus on the direction you wish to turn and stay relaxed.</p> <p>As you get comfortable on the device, you will notice it becomes easier to maneuver. Remember at higher speeds, it is necessary to shift your weight to overcome the</p>
--	--	---	---	---

<p>centrifugal force.</p> <p>Bend your knees if you are encountering bumps or uneven surfaces, then dismount and carry your hoverboard to a safe operating surface.</p>  <p>Dismounting your hoverboard can be one of the easiest steps, yet when done incorrectly, may cause you to fall. To properly dismount, from a stopped position, lift one leg up and set your foot back down on the ground (STEPPING BACK). Then step off completely as described in the following diagram.</p>  <p><b>WEIGHT AND SPEED LIMITATIONS</b></p> <p>Speed and weight limits are set for your own safety. Please do not exceed the limits listed here in the manual.</p> <ul style="list-style-type: none"> <li>• Maximum Weight: 220 lbs.</li> <li>• Minimum Weight: 44 lbs.</li> <li>• Maximum Speed: Up to 7 mph</li> </ul>	<p><b>OPERATING RANGE</b></p> <p>The hoverboard can travel a distance up to 6 miles on a fully charged battery in ideal conditions. The following are some of the major factors that will affect the operating range of your device.</p> <ul style="list-style-type: none"> <li>• Terrain: Riding distance is highest when riding on a smooth, flat surface. Riding uphill and/or on rough terrain will reduce distance significantly.</li> <li>• Weight: A lighter user will have further range than a heavier user.</li> <li>• Ambient temperature: Please ride and store the device under recommended temperatures, which will increase driving distance, battery life, and overall performance of your device.</li> <li>• Speed and riding style: Maintaining a moderate and consistent speed while riding produces maximum distance. Traveling at high speeds for extended periods, frequent starts and stops, idling and frequent acceleration or deceleration will decrease overall distance.</li> </ul> <p><b>BALANCE &amp; CALIBRATION</b></p> <p>If your hoverboard is unbalanced, vibrating, or not turning properly, you can follow below steps to calibrate it.</p> <ul style="list-style-type: none"> <li>• First, place the hoverboard on a flat, horizontal surface such as the floor or a table. The foot mats should be even with each other and not tilted forward or backward. Make sure the charger is not plugged in and the hoverboard is turned off.</li> <li>• Press and hold the power button for a total of 15 seconds when you hear a beep sound. The hoverboard will turn on, lighting the battery indicator on the board.</li> <li>• Turn the hoverboard off and then turn it back on. Calibration will now be completed.</li> </ul>	<p><b>SAFETY ALERTS</b></p> <p>While riding your hoverboard, if there is a system error or illegal operation performed the device will prompt the user in a variety of ways.</p> <p>You will notice the system indicator will turn Red and you will hear a beep sound alerting you to take precaution and cease operation, which may make the device stop suddenly.</p> <p>The following are common occurrences where you will hear the safety alerts. These notices should not be ignored, but appropriate action should be taken to correct any illegal operation, failure or errors.</p> <ul style="list-style-type: none"> <li>• Unsafe riding surfaces (uneven, too steep, unsafe, etc.)</li> <li>• When you step on the device, if the platform is tilted more than 10 degrees forward or backward.</li> <li>• Battery voltage is too low.</li> <li>• The device is still under charging.</li> <li>• During operation, the platform self initiates to tilt due to excess speed.</li> <li>• Overheating, or motor temperature is too high.</li> <li>• The device has been rocking back and forth over 30 seconds.</li> <li>• If the system enters protection mode, the alarm indicator will light up and the board will vibrate. This typically occurs when the battery is about to run out of power and stop abruptly.</li> <li>• If the platform is tilted forward or backward more than 10 degrees, your hoverboard will power off and stop suddenly, possibly causing the rider to lose balance or fall off.</li> <li>• If any or both tires are blocked, the device will stop after 2 seconds.</li> <li>• When the battery level has depleted below protection mode, the device engine will power off and stop after 15 seconds.</li> <li>• While sustaining a high discharge current during use (such as driving up a</li> </ul>	<p>steep slope for a long period of time), the device engine will power off and stop after 15 seconds.</p> <p><b>CARE &amp; MAINTENANCE</b></p> <ul style="list-style-type: none"> <li>• Do not expose the device to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.</li> <li>• Do not use abrasive cleaning solvents to clean the device.</li> <li>• Do not expose the device to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.</li> <li>• Do not dispose of the device in fire as it may explode or combust.</li> <li>• Do not expose the device to contact with sharp objects as this will cause scratches and damage.</li> <li>• Do not allow the device fall from high places, as doing so may damage the internal circuitry.</li> <li>• Do not attempt to disassemble the device.</li> </ul> <p><b>SPECIFICATIONS</b></p> <p>Product size: (W)23.54x(D)7.87x(H)7.2inch (59.7x20x18.3cm)  Net Weight: 15.43 lbs. (7.0 kg)  Max supported weight: 220 lbs. (100 kg)  Max Speed: Up to 7 mph (11.3 km/h)  Max Distance Range: 6 miles (9.7 km) (88 lbs./40kgs rider)  Max Climbing Angle: 10°  Battery Type: Lithium-ion  Battery Voltage: 25.2V  Battery Capacity: 4.0-Ah  Power Requirement: AC 100-240V, 50/60 Hz  Wheel Size: 6.5 inches (16.5 cm)  Tire Type: Non-Pneumatic Solid Tires  Bluetooth Range: 27-33 feet</p>	<p><b>FCC INSTRUCTIONS</b></p> <p><b>Caution:</b> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.</p> <p><b>NOTE:</b> This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>- Reorient or relocate the receiving antenna.</li> <li>- Increase the separation between the product and receiver.</li> <li>- Connect the product into an outlet on a circuit different from that to which the receiver is connected.</li> <li>- Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p><b>LIMITED WARRANTY</b></p> <p><b>This product comes with a 120-day limited parts and labor warranty for manufacturer's defects.</b> This includes defects to the motor, gyroscopic sensor, battery, motherboards, lights, controller and Bluetooth® module.</p> <p><b>The conditions of this warranty and our responsibilities under this warranty are as follows:</b></p> <p>Manufacturer's warranty is non-transferable and is limited to the original purchaser only. Manufacturer warranty applies only to products purchased through an authorized REPLA Y retailer. Items purchased from private sellers, online auction sites, including eBay, liquidators, sold "as-is" or "final sale" or from clearance or going-out-of-business sales, are not covered by warranty. The warranty period begins on date of purchase, not date of first use. Please retain a copy of your receipt as this will be required to prove date of purchase should a warranty claim be needed.</p> <ul style="list-style-type: none"> <li>• The warranty is not applicable if the product has been subject to improper use along with physical abuse, improper installation, modification or repair by unauthorized third party.</li> <li>• The responsibility of manufacturer should be limited to the repair or replacement of the product at its sole discretion.</li> <li>• The manufacturer will not take any responsibility if the failure of the unit has resulted from accident, abuse, misuse, or any unauthorized repair, modification or disassembly.</li> <li>• This warranty gives you specific legal rights, and you may also have other rights which vary under local laws. The following conditions comprises the requirements and scope of our warranty conditions and do not affect our legal and contractual warranty obligations.</li> </ul>	<p><b>We offer a warranty on our products in accordance with the following conditions:</b></p> <p>1) The warranty does not cover over-charging, or damages due to improperly maintaining lithium-ion battery installed in unit. The warranty does not cover tires, charge ports and other parts, which are considered consumables, parts that break easily such as glass or plastic or defects based on normal wear and tear. There is no warranty obligation in the event of marginal differences compared to the target appearance and workmanship provided these have a negligible effect on the</p>
---	--	---	--	--	---

<p>products fitness for use, in the event of damage caused by chemical or electrochemical effects, by water, moisture, debris or generally from abnormal conditions.</p> <p>2) The warranty will be performed in such a way that we shall decide whether to repair the defective parts or to replace them with working parts. REPLAY reserves the right to exchange the product for a replacement product of equal or greater value if the product cannot be repaired within a reasonable time or at a reasonable cost. Products and/or parts that have been replaced or exchanged become property of REPLAY.</p> <p>3) The warranty is voided if repairs or modifications are performed without the written consent of REPLAY or if our products are equipped with additional parts or accessories that are not approved for the REPLAY. Using any charger, other than a genuine REPLAY charger, or a charger for a different model, voids the warranty and is a serious fire hazard. Exposure to water, moisture, mud, dirt or debris, voids the warranty.</p> <p>4) Warranties that have been activated do not cause the warranty period to be extended, nor do they trigger a new warranty period. The warranty period for any replacement parts installed ends with the warranty period for the entire product.</p> <p>5) Any other further claims are excluded, especially those for replacement due to damage caused to the outside of the product, provided there is no obligatory legal liability.</p> <p>We therefore accept no liability for accidental, indirect or other consequential damage of any kind, which leads to usage restrictions, data loss, and loss of earnings or interruption to business. If you have purchased an extended warranty, you will need to contact the retailer it was purchased from for assistance.</p> <p><b>Asserting a warranty claim:</b></p> <p>1) To make use of the warranty services, you must contact the REPLAY Service Center by visiting <a href="http://www.thereplay.com">www.thereplay.com</a>. Please contact Replay Customer Service at <a href="mailto:info@thereplay.com">info@thereplay.com</a> or by calling (888) 451-0954.</p> <p>2) REPLAY will try to diagnose and solve your problem. We may require photos</p>	<p>and/or videos to properly diagnose the issue and verify warranty eligibility. A copy of your receipt or online order confirmation, with purchase date visible, is required.</p> <p>REPLAY reserves the right to verify purchases with the retailer and/or asset protection databases, and will deny warranty claims if the receipt is invalid, cannot be verified, or if the item has been returned or exchanged. If it is determined that a warranty claim exists, at our sole discretion, REPLAY may send replacement parts and or issue an RMA number (Return Material Authorization) to send the product to REPLAY. If an RMA is issued, the package must be shipped within 14 days of the RMA issuance or the package will be refused and returned to sender. If, at the sole discretion of REPLAY's technicians, the item is found not to have a manufacturer defect, has been subject to abuse, the malfunction is due to water, debris or moisture exposure, or the item has been improperly maintained, customer will be charged for return shipping and no repairs will be completed.</p> <p><b>IMPORTANT: REPLAY will only accept parcels that have an RMA number.</b></p> <p>The limited warranty stated above is only valid for products sold in the Contiguous U.S. by REPLAY or its authorized resellers. Items purchased in Alaska, Hawaii and Puerto Rico have shipping restrictions on batteries and we cannot ship replacement units or batteries outside of the Contiguous U.S.</p> <p>YOU EXPRESSLY UNDERSTAND AND AGREE THAT, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, REPLAY'S TOTAL LIABILITY IN CONNECTION WITH THE APPLICABLE REPLAY PRODUCTS OR THIS WARRANTY POLICY WILL NOT EXCEED THE AMOUNT YOU ACTUALLY PAID FOR THE PRODUCT.</p> <p><b>Remarks:</b> REPLAY reserves the right, at its sole discretion, to interpret, modify and amend this warranty policy at any time.</p> <p>PARTS AVAILABILITY IS NOT GUARANTEED</p>				
---	---	--	--	--	--