

# Front



## USER MANUAL


TWS function supported  
(Pair 2 earphones to play as one)

## WIRELESS EARPHONES

Thank you for purchasing these **WIRELESS GEAR**® True Wireless Earphones. For best use of this device, we recommend carefully reading this user manual and keeping it for your records.

### Package contains

- a. Charging Case
- b. TWS Earphones
- c. Charging cable
- d. User manual

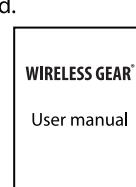

## INSTRUCTION GUIDE



### Multifunction button

- 1: Power on /Off: Long press for power on/off
- 2:Play/Pause:hort press for play/pause
- 3:Previous song: Double press the vice earbuds
- 4:Next Song:Double press the host earbuds
- 5:Volume down: Press 3 times the vice earbuds
- 6:Volume Up: Press 3 times the host earbuds
- 7:SIRI assist: Long press the button for few seconds

### CHARGING DEVICE

After the earphone alarm low power alarm sound, it is put into the charging bin for charging. After charging, it is automatically turned off. When charging, the red light is long and the lamp is off when it is fully charged.

Answer calls When calling, press the function button to answer the call and then press the button again to hang up the call.

1. Please do not overuse this earphone or put it under heavy pressure, keep away from wet and heat.

2. Far-high WIFI router and other high-frequency transmitting equipment will affect the signal reception of the unit, resulting in the sound card breaking and disconnection.

3. Please use this product in the working environment (10m), and there should be no physical barriers (such as wall, etc.) between the bluetooth device and the headset.

## PRODUCT INFORMATION

Bluetooth version V5.0 + EDR  
Bluetooth protocol A2DP1.3/HFP1.6/HSP1.2/AVRCP1.6/D11.3  
Bluetooth Frequency 2.4GHz  
Battery capacity The headset 30 mAh, 200 mAh rechargeable storehouse  
Bluetooth Range 10-15metres with no obstacles

# Back

## PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR NEW PORTABLE POWER BATTERY KEEP THIS INSTRUCTIONS FOR FUTURE REFERENCE

Improper use or exposure to conditions of abuse may cause the Portable Power Battery to become hot, ignite or explode, which can result in serious injury. Be sure to follow all safety warnings listed below:

1. Do not disassemble, throw away or damage the True Wireless Earbuds.
2. Store the True Wireless Earbuds in a dry place, keeping it away from damp materials and environments such as salt air.
3. Keep the True Wireless Earbuds away from direct sunlight, fire and high voltage equipment. Do not store the battery inside a car during hot weather. Do not expose to temperature exceeding over 200F.
4. The True Wireless Earbuds is not a toy. Please keep it out of the reach of children.
5. Please do not discard the Wireless Speaker. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877.273.2925 or online at [call2recycle.org](http://call2recycle.org) for battery recycling drop off location near you.

## Bluetooth® PAIRING

Pick up the charging bin and start up automatically. After starting up, the main and secondary engines will pair up automatically. After successful pairing, the host machine will flash red and blue alternately. This time the phone search bluetooth name connection.

## Bluetooth® Connect with a new device

1. Long press the power button to "ON".
2. Activate Bluetooth of mobile phone and search for device name "WG-BT-EB" then connect it. The unit will beep three times once connected successfully.
3. Play the music from your mobile phone and enjoy.

## Battery Information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.

Do not leave fully charged battery connected to a charger, overcharging may shorten their lifetime.

If left unused, fully charged Speaker batteries will lose their charge over time. Never use any charger or cord that is damaged. Leaving the device in hot or cold places will reduce the capacity and

lifetime of the batteries. Optimal temperature for the batteries is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold batteries may not work temporarily, even when the batteries are fully charged.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged.

Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

All other trademarks are property of their respective companies. Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

  
BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.

## FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

### Federal Communications Commission (FCC) Statement

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## WARNING:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.