

IMPORTANT SAFETY INSTRUCTIONS

Model No: LNKSO-220/11-D-C-SU

When using electrical products, basic precautions should always be followed including the following:

a) READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
- h) This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product is equipped with push-in type lamps. Do not twist lamps.
- n) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- o) Read and follow all instructions that are on the product or provided with the product.


p)SAVE THESE INSTRUCTIONS

CAUTION: To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and b) Do not mount or support strings in a manner that can cut or damage wire insulation.

CONNECTING SETS END TO END

Connect only LED sets of the same type end to end.

When multiple products are connected together, do not exceed the lowest of the maximum wattage on the cord tag near the connected product's receptacle.

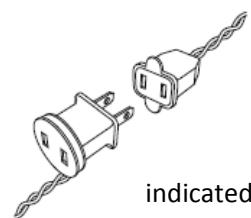

CAUTION: This lighting string is rated 21 Watts (0.3 Amps), do not overload. Connect other lighting strings or decorative outfits end-to-end up to a maximum of 96 Watts (0.8Amps) total. If connecting to a lighting string that does not have a Wattage (W) rating {found on the tag within 15.2 cm / 6 inches of the plug}, calculate the wattage as follows: Multiply the current (A) which is on the flag-type tag by 120.

For Example: Lighting string is rated 120V, 60Hz, 0.5 Amps.

$$0.5 \times 120 = 60 \text{ Watts}$$

TOTAL AMOUNT OF WATTAGE THAT CAN BE CONNECTED

$$210W - 60W = 150W$$

USE AND CARE INSTRUCTIONS

- a) When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- b) If the product is placed on a tree, the tree should be well secured and stable.
- c) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- d) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- e) When not in use, store neatly in a cool, dry location protected from sunlight.


IMPORTANT INFORMATION ABOUT YOUR LIGHTS

- 1) This light set will continue to operate if an LED is burned out, loose or missing. LED's that are burned out, loose or missing should be replaced promptly.
- 2) It is important to replace burned out LED's with those included with this set (3.3 Volt, 20 mA). If an incorrect LED is used, the set may not operate properly.

USER SERVICING INSTRUCTIONS

TO REPLACE THE FUSE

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- c) Remove fuse carefully.
- d) Risk of fire. Replace fuse only with 3 Amp, 125 Volt fuse (provided with product).
- e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

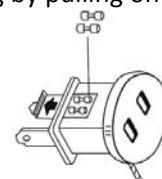


TO REPLACE THE LED BULB

Use the LED bulbs provided with this product. Follow these steps:

Step 1: Make sure the light set is unplugged. Grasp plug and remove from receptacle or other outlet device. Do not unplug by pulling on cord.

Step 2: Grip the base of the burned out LED and pull lamp and plastic base straight out of lampholder. Hold replacement LED by its base and insert into the correct position inside the socket. Push base into socket all the way.

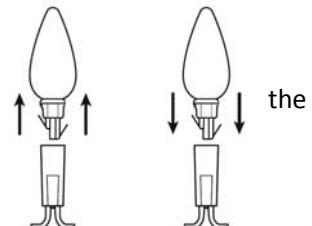

CAUTION: a) To reduce the risk of overheating, replace burned out lamps promptly. b) Replace lamps only with 3.3 Volt, 20mA LED type lamps (provided with product) c) Risk of Fire: This product does not contain lamp shunts in order to allow the product to operate if one lamp burns out. Do not replace lamps with other than the spare lamps provided with this product. d) DO NOT OPERATE WITH BULBS MISSING FROM SOCKETS. MISSING BULBS SHOULD BE REPLACED PROMPTLY

FCC Warning

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

120V, 60Hz, 0.3A, 36W
06/2017

FOR INDOOR AND OUTDOOR USE

MADE IN CHINA