 



Smart IP Camera with Battery

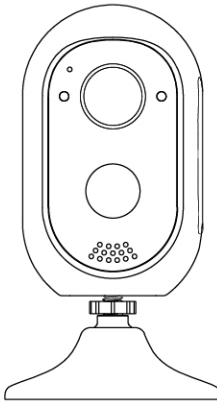

Please read the Quick Guide carefully before using the product and keep it in a safe place.


1. Packing list

 1.1 Battery camera

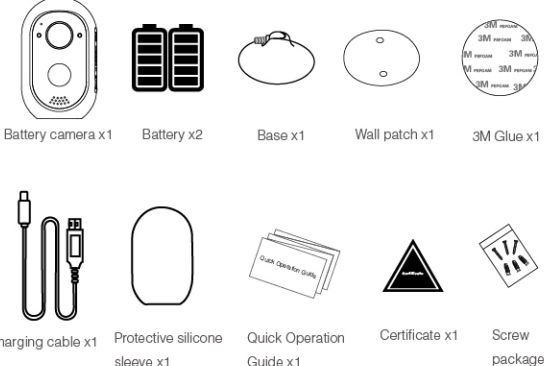

2. Interface description

 1.1 Battery camera

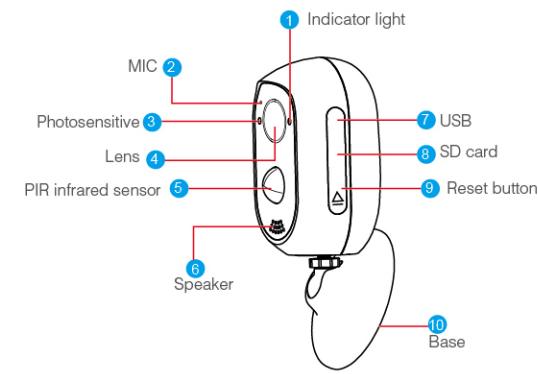

The instruction of battery camera LED light :

 
- Green light + red light is always on: The camera is being previewed remotely (privacy light)
- Green light is on for 1s: The device is turned on or is woken up
- The green light flashes continuously: Upgrading
- Green light: Charging
- Red light flashes 3 times: Power off
- Red light flashes continuously: Matching code
- Red light flashes continuously: Connecting to the internet
- Red light is always on: Low battery

Keys operation:

- Press and hold 2s in the off state: Power on (green light for 1s)
- Continue to press for 3 times: Power off (red light flashes 3 times)
- Press and hold for 8s: Reset to enter the pairing state (red light flashes)

3. The working network diagram

The battery camera supports two working networking modes:
1. Directly connected to the home router (As shown of blue box 2 in the figure below);
2. Pair to a wireless NVR (base station, NVR, touch screen monitor) (As shown of blue box 1 in the figure below).
When directly paired to the home router, the video is stored in the local SD card; when working with the wireless NVR, the video is stored in the wireless NVR and connected to the Internet through the wireless NVR.

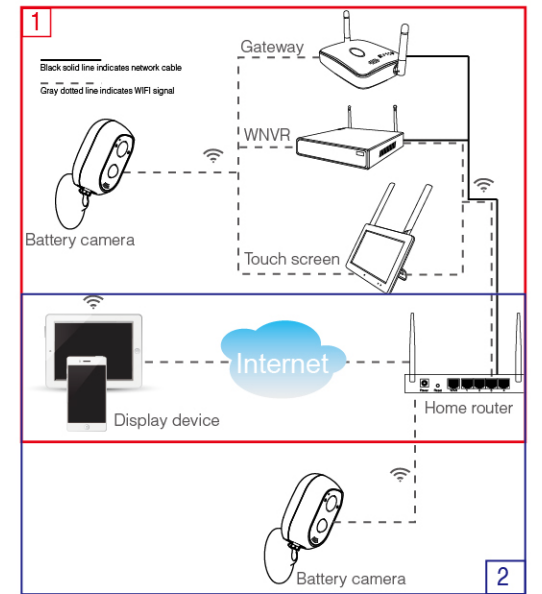


4. Setup and installation

4.1 Boot

When using a directly connected router, please insert the SD card first and then turn it on; when pairing a wireless NVR, make sure that the storage (SD card, hard disk, etc.) of the wireless NVR is ready.

4.1.1 battery camera

 First check whether the battery is installed in the camera. If it is installed, press the button for 2s to turn it on; if it is not installed, follow the steps below to load the battery and start it automatically.

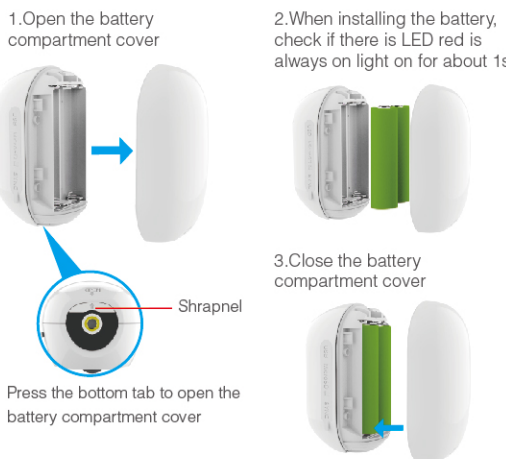

If you cannot turn it on when you press the the button or insert the battery, please plug in the charging power cord.

4.1.2 Solar Camera

Plug the power cord of the solar panel into the tail cable of the solar battery camera.

4.2 Install App

 
Download app "Eseecloud" application

Scan the QR code on the right to download and install the "EseeCloud" APP; or search for the "EseeCloud" App in the Apple App store and Android Google play store to download and install.

(Apple and Android users use the same QR code)



Download "EseeCloud" APP

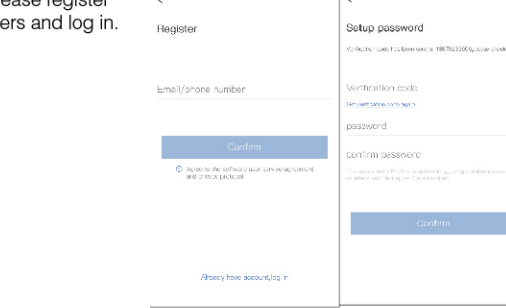

4.3 Add Camera to App Account

When pairing directly to the router, you need to configure the router name and password to connect the camera to the network through the App, and add the camera to the App account. When used with a wireless NVR, the camera from the kit is already paired with the wireless NVR, just power on the wireless NVR. After connecting to the Internet, use the APP to add a wireless NVR, and the App can access the camera.

4.3.1 Add directly via connecting to the home router

- Place the mobile phone and camera near the router, and the distance between them is 0.3 ~ 1m.
- When the battery camera is turned on, it will prompt "Start match code", and the red LED will flash. Open the mobile WIFI hotspot to search, select the IPCxxxxx wifi connection, and the password is 11111111.

7. Troubleshooting

Trouble	Solution
1 Unsuccessful network configuration	Make sure your phone, camera, and router are close enough. Note that the camera cannot support connection to a 5G router. Check that the router name and password are correct. Check the Internet settings of the wireless NVR.
2 Device is offline	Check your router's Internet connection. Check the connection between the camera and the router. If you change the router or change the WIFI password, you need to reset the camera and reconfigure the network. Check the connection between the wireless NVR and the router and the connection between the camera and the wireless NVR. If you change the router or change the wifi password, you may need to reconfigure the WNVr's network. Check if the camera battery is exhausted, you can try to plug in the power and try again.
3 No preview	The server may be congested, try restarting the app.
4 No push notification	Make sure the app has notification permissions. Please confirm that the alarm message push switch is turned on in the App Personal Center settings. Please confirm that the alarm message push switch is turned on in the camera settings.
5 No recording	For direct connection to the router, please insert SD card before booting. Make sure the camera PIR (monitoring) switch is turned on. Please make sure the camera recording switch is turned on. Please check the recording settings on the wireless NVR.

8. FAQ

Q: Why does the battery run out quickly?

A: The App will count the daily recording time when playback video. Please check if there are more videos every day. If there are many false triggers, please try to lower the trigger sensitivity setting.
Check if the WIFI signal between the camera and the wireless NVR or router is weak. You can try to change the WIFI channel of the wireless NVR or router; or adjust the position of the wireless NVR, router or camera to improve the signal transmission.

Q: How to confirm that the network connection between the camera and the router or wireless NVR is normal?

A: Actively trigger PIR in front of the camera and wait for about 10s. If the camera flashes red, it means that the camera cannot connect to the router or wireless NVR smoothly.
If it is connected to a wireless NVR, you can click play from the corresponding channel of the NVR / touch screen. If the video can be played, the connection is normal.
Whether the indicator of the corresponding channel on the base station is always on. The blinking of the indicator indicates that the base station and the battery camera have been disconnected.

Q: Under what circumstances do wireless NVR (wireless NVR / touch screen monitor / base station) and battery cameras need to be paired?

A: Matching code is to make the camera wifi connect to the wireless NVR automatically. The devices purchased in the entire package is already matched code in the factory, and no match code operation is required.
You need to match code when a new battery camera need to be added to the wireless NVR;
The battery camera needs to be code matched after being reset to factory settings;
The wireless NVR needs to be code matched after being restored to the factory settings;
After deleting the paired cameras on the wireless NVR channel through the App, you need to match code again.

Q: What should I do if I forget my password?

A: If you have forgotten the login password of the App account, please reset the password through the "Forgot Password" option in the login interface as instructed.

The device's access password is set after the device is added or modified by the App, and the App remembers it. Subsequent access does not need to be re-entered. If the password is changed through other methods (such as WNVr changed the password in the local interface), please fill in the new password to access in the corresponding device column of the device list-> More -> Edit menu.
If you have lost the password saved by the App, you need to restore the camera or wireless NVR to the factory settings, and then reset the password.

 
FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
FCC NOTICE
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

Caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.)

材质: 128克双铜彩印, 风琴折
成品折后尺寸: 79.5x125mm
成品展开尺寸: 795x125mm

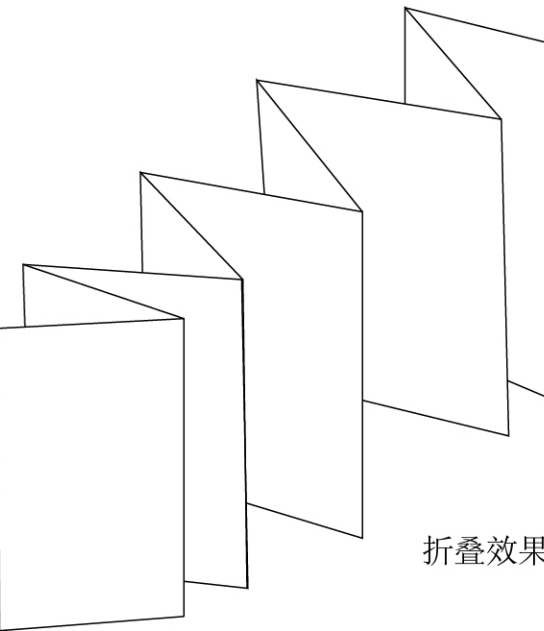

折叠效果