

Material: 128g art paper , Size: 70 x 108mm
Note : folding but without nail

COVER

 


EUCLID BLUETOOTH CABLE
USER GUIDE





CONNECT
RELIER

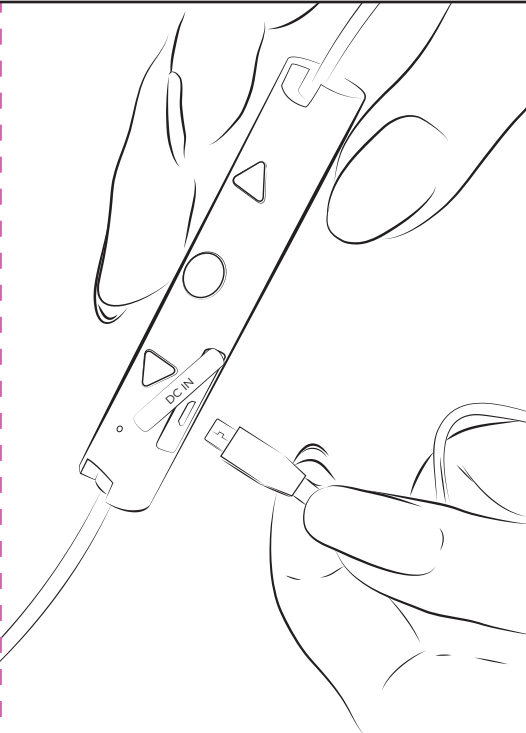

CHARGE



1. "To prevent possible hearing damage, do not listen at high volume levels for long periods."
2. "Fully understand user manual before use."
3. "Ensure your player at low volume levels or power off before you leaving."



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 
⚠ WARNING!

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Never disassemble, hit with force, squeeze batteries or dispose of batteries in fire.
- Do not expose batteries in conductive materials, liquid, fire or heat.
- Do not let metal object contact two battery poles. If the battery looks swollen, leaking, discolored, having odor or any abnormal appearance, stop using it.
- Do not use the battery after immersed in water.
- Improper use of battery may lead to explosion or leakage, causing skin burn or other injuries; in the event of battery leakage, handle it with care and immediately dispose of the battery in the manner in compliance with applicable laws and regulations in your locality.
- The battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

BACK

www.audeze.com


EUCLID FUNCTIONS

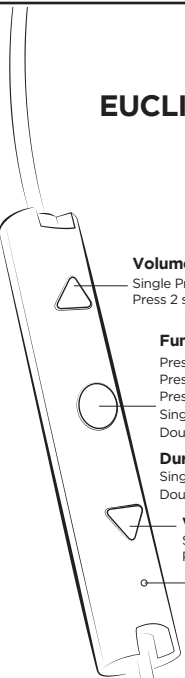

- Volume Up Button**
Single Press: Volume Up
Press 2 seconds: Next Track
- Function Button**
Press 3 seconds: Power On
Press 5 seconds: Bluetooth Pairing Mode
Press 3 seconds: Power Off
Single Press: Play/Pause/Answer Call
Double Press: Voice Assistant Mode
- During Call**
Single Press: End Call
Double Press: Answer Incoming/Switch Call
- Volume Down Button**
Single Press: Volume Down
Press 2 seconds: Previous Track
- LED**

POWER ON Press second button and hold	HOLD 3 SECONDS • ◀ ○ ▶
POWER OFF Press second button and hold	HOLD 3 SECONDS • ◀ ○ ▶
BLUETOOTH PAIRING Press second button and hold	HOLD 5 SECONDS • ◀ ○ ▶
PLAY / PAUSE Press second button	PRESS • ◀ ○ ▶
VOLUME UP Press third button	PRESS • ◀ ○ ▶
VOLUME DOWN Press first button	PRESS • ◀ ○ ▶
PREVIOUS TRACK Press first button and hold	HOLD 2 SECONDS • ◀ ○ ▶
NEXT TRACK Press third button and hold	HOLD 2 SECONDS • ◀ ○ ▶
ANSWER / END CALL Press second button	PRESS • ◀ ○ ▶
REJECT CALL Press second button and hold	HOLD 2 SECONDS • ◀ ○ ▶
DURING CALL - END CALL Press second button	PRESS • ◀ ○ ▶
DURING CALL - ANSWER INCOMING Press second button twice	PRESS 2X • ◀ ○ ▶
DURING CALL - SWITCH CALL Press second button twice	PRESS 2X • ◀ ○ ▶
VOICE ASSISTANT Press second button twice	PRESS 2X • ◀ ○ ▶

 EUCLID FUNCTIONS

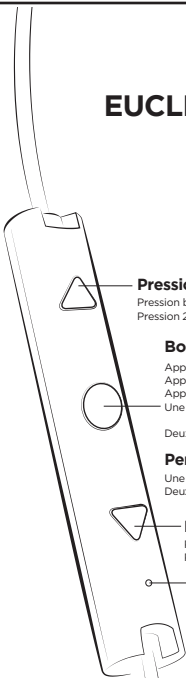

- Pression brève: volume augmenté**
Pression brève: Volume augmenté
Pression 2 secondes: Piste suivante
- Bouton de fonction**
Appuyer dessus 3 secondes: Allumer
Appuyer dessus 5 secondes: Mode d'appariement Bluetooth
Appuyer dessus 3 secondes: Éteindre
Une seule pression dessus: Lecture / pause / répondre à un appel
Deux pressions dessus: Mode assistant vocal
- Pendant l'appel**
Une pression: Fin d'appel
Deux pressions: Répondre à un appel entrant / supprimer l'appel entrant
- Bouton de réduction du volume**
Pression brève: Volume réduit
Pression 2 secondes: Piste précédente
- LED**

ALLUMER Appuyez sur le deuxième bouton et maintenez-le enfoncé	PRESSION 3 SECONDES • ◀ ○ ▶
ÉTEINDRE Appuyez sur le deuxième bouton et maintenez-le enfoncé	PRESSION 3 SECONDES • ◀ ○ ▶
BLUETOOTH PAIRING Appuyez sur le deuxième bouton et maintenez-le enfoncé	PRESSION 5 SECONDES • ◀ ○ ▶
JOUER / PAUSE Appuyez sur le deuxième bouton	PRESSION BRÈVE • ◀ ○ ▶
MONTER LE SON Appuyez sur le troisième bouton	PRESSION BRÈVE • ◀ ○ ▶
BAISSER LE VOLUME Appuyez sur le premier bouton	PRESSION BRÈVE • ◀ ○ ▶
PISTE PRÉCÉDENTE Appuyez sur le premier bouton et maintenez-le enfoncé	PRESSION 2 SECONDES • ◀ ○ ▶
PISTE SUIVANTE Appuyez sur le troisième bouton et maintenez	PRESSION 2 SECONDES • ◀ ○ ▶
RÉPONSE / FIN D'APPEL Appuyez sur le deuxième bouton	PRESSION BRÈVE • ◀ ○ ▶
REJETER UN APPEL Appuyez sur le deuxième bouton et maintenez-le enfoncé	PRESSION 2 SECONDES • ◀ ○ ▶
PENDANT L'APPEL - FIN D'APPEL Appuyez sur le deuxième bouton	PRESSION BRÈVE • ◀ ○ ▶
PENDANT L'APPEL - REPONSE ENTRANT Appuyez deux fois sur le deuxième bouton	DEUX PRESSIONS • ◀ ○ ▶
PENDANT UN APPEL - SUPPRIMER L'APPEL ENTRANT Appuyez deux fois sur le deuxième bouton	DEUX PRESSIONS • ◀ ○ ▶
ASSISTANT VOCAL Appuyez deux fois sur le deuxième bouton	DEUX PRESSIONS • ◀ ○ ▶

V1.0
© 2020 Audeze LLC All Rights Reserved.

ACC1085