



Panasonic is a Trademark of Panasonic Corporation

©Copyright 2019 Panasonic Corporation

All Rights Reserved.

Panasonic Corporation reserves the right to alter  
material or technical specifications without prior notice.

EB-90F18G1S

# Quick Start Guide

## Panasonic GD I00S

All trademarks, logos, mark symbol and offer details mentioned here are trade names, trademark or service marks of their prespective owners.Panasonic holds no responsibility of the partner logos and content. All image are for representation purpose only.

## Table of Contents

---

|    |                                    |   |
|----|------------------------------------|---|
| I. | KNOW YOUR DEVICE -----             | 4 |
| 2. | GETTING STARTED -----              | 5 |
| 3  | PROPER DISPOSAL -----              | 8 |
| 4. | REGULATIONS AND SAFETY USAGE ----- | 8 |

Before you do anything else, please read this:

**CHARGE THE BATTERY:** The battery in your phone hasn't been charged yet. While your phone is charging, it's important that you do not remove the battery pack. Doing so can damage your phone. Also, please don't try to take your phone apart. (If you do, it may invalidate your warranty.)

**CHOOSE A RATE PLAN WISELY:** Depending on how you use your phone, it can use up a lot of Internet bandwidth really quickly. Before you use your phone, we strongly recommend that you talk to your mobile operator about data rates.

**KNOW ABOUT PRIVACY LAWS:** Some countries have strict laws about how and when you can record phone conversations and share your own or someone else's personal data. It's a good idea to find out what the laws are where you live before you use your phone for such activities.

And finally, a few important words from our legal team (LIMITATION OF DAMAGES)

"To the maximum extent permitted by applicable law, in no event shall Panasonic or its affiliates be liable to you, any user, or third party for any indirect, special, consequential, incidental or punitive damages of any kind, arising in contract, tort, or otherwise, including, but not limited to, injury, loss of revenue, loss of goodwill, loss of business opportunity, loss of data, and/or loss of profits, regardless of the foreseeability thereof or whether Panasonic or its

affiliates have been advised of the possibility of such damages. And in no event shall the total liability of Panasonic or its affiliates exceed the amount received from you, regardless of the legal theory under which the cause of action is brought. The foregoing does not affect any statutory rights which may not be disclaimed".

#### DISCLAIMER

Thanks for choosing this Panasonic mobile device. Please read this guide carefully and keep it for future use.

- The content and pictures in this manual may differ from the product, or from the software provided by service providers or carriers, and are subject to change without prior notice.
- The items supplied with your device and available accessories may vary depending on your region or service provider.
- Other accessories may not be compatible with your device, likewise the supplied items are designed only for your device and may be incompatible with other devices.
- Panasonic is not liable for performance issues or incompatibilities caused by edited registry settings or modified operation system software.
- If a device is rooted, it is liable to lose its guarantee and warranty.

## English

### KNOW YOUR DEVICE

**GENERAL INFO:** Panasonic GD100S is a multi SIM phone provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called SIM1, and the other one in the slot2 is known as SIM2. You can select to operate SIMs as per your personal and professional needs.

### DEVICE OVERVIEW:



| Panasonic GD100S |               |    |                  |
|------------------|---------------|----|------------------|
| 1                | Torch         | 7  | Micro USB Port   |
| 2                | Receiver      | 8  | Navigation Key   |
| 3                | Screen        | 9  | OK Key           |
| 4                | Shortcut Keys | 10 | 3.5mm Audio Jack |
| 5                | Function Keys | 11 | Camera           |
| 6                | Number Keys   | 12 | Speaker          |

## English


### GETTING STARTED

**INSTALLING CARDS:** Please switch off your device before inserting or removing the battery/ SIM card or memory card.

### INSTALLING SIM CARD

Your device is provided with two SIM slots for two different SIM cards. In order to install battery and SIM card in the device, please follow the steps mentioned below:

- Remove the back cover of the device.
- Hold the device with the front facing downwards and pull the battery cover.
- Insert the SIM cards in the device.

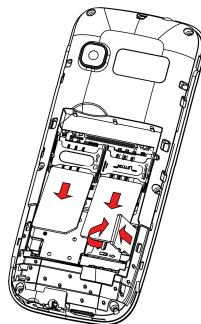

### INSTALLING MEMORY CARD

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-Flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage. Please follow the steps mentioned below to install the memory card in the device:

- Switch off your device.
- Remove the battery cover.
- Slot the T-Flash memory card into the slot.

### CHARGING THE BATTERY

The device prompts a warning tone and message stating insufficient battery when the battery power is low. Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging..... Fully Charged.....

You should fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

Please note that if your battery is completely drained, it may require a few minutes of charging before your device can power on

### POWERING ON & SWITCHING OFF

Turning On the Device:

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- If the screen turns off, then short press the Power Key to turn on the display.

Turning Off the Device:

- Press and hold the Power Key for 3 seconds.

## PROPER DISPOSAL



This symbol (with or without a solid bar) on the device, batteries (if included), and/or the packaging, indicates that the device and its electrical accessories (for example, a headset, adapter or cable) and batteries should not be disposed of as household garbage. These items should not be disposed of as unsorted municipal waste and should be taken to a certified collection point for recycling or proper disposal.

For the purpose of recycling to facilitate effective utilization of resources, please return this product to a nearby authorized collection center, registered dismantler or recycler, or Panasonic service center when disposing of this product.

Please see the Panasonic website for further information on collection centers, etc.  
<http://www.panasonic.com/in/corporate/sustainability/panasonic-india-i-recycle-program.html>

## REGULATIONS AND SAFETY USAGE

To prevent any damage to the device or any injury to you, please read the safety information before using the device

- Do not use the device with wet hands.
- Use the Device carefully while inserting SIM or Battery, as battery terminal may get damaged by force.
- Do not use damaged power cords, never try to pull the charger from the cord.

- Avoid using charger other than from Panasonic.
- Keep the device dry. Precipitation, humidity, liquids or moisture can contain minerals that will corrode the electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.

Please follow all safety warnings and regulations when using your device in restricted areas.



### On The Road

Avoid using phone while driving, please follow the traffic rules



### Near Sensitive Electronics

Your phone may cause interference when used near TVs, radios or automated office equipments.



#### While Flying

Your phone can cause interference with the aircraft equipment. So it's essential you follow airline regulations.



#### In Hospital

Your phone may interfere with the normal operation of a medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.



#### At a Petrol Station

Don't use your phone at petrol stations.



#### Disassembled Product

Never take your phone apart. Unauthorized repairs could break the terms of your warranty.



#### Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.



#### Original Accessories

Only use the original accessories supplied with your phone or those approved by the manufacturer.



#### Near Explosives

Turn off your phone in or near areas where explosive materials are used.



#### Emergency Calls

To make an emergency call your phone must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.



#### Working Temperature

The working temperature for the phone is between 0 Degree and 40 Degree Celsius. Please don't use the phone outside the range. Using the phone under too high or too low temperature might cause problems.



At very high volume, prolonged listening to a mobile phone can damage your hearing.



To prevent possible hearing damage, do not listen at high volume levels for long periods.



**FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

**Specific Absorption Rate (SAR) information**

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, tests for each phone are performed in positions and locations as required by the FCC.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.