



USER GUIDE

BumpOut[®]

Please read these instructions before use.
Retain for future reference.

Safety Instructions

Ventilation and heat sources

Do not place the speaker in direct sunlight or near heat sources such as radiators or fires.

Candles and open flames

Do not place lit candles or tealights on top of, or at the sides of the speaker. Do not allow any naked flames near the product.

Cleaning and care

Use a soft dry cloth, or for stubborn stains use a soft cloth with a dilute mild detergent. Do not use alcohol-based fluids or abrasive materials.

Care for the battery

Do not store the speaker for extended periods with the battery completely discharged.

Keep the battery charged as much as possible to extend the life of your speaker.



Do not open, or attempt to open, the casing. There are no user-serviceable parts inside. Failure to adhere to the instructions provided will invalidate the warranty.

This product features an internal Lithium-ion battery, please treat with care. Improper charging or use may result in fire, personal injury and damage to property.

Safety Instructions



This appliance complies with European Safety & Electrical Directives



Correct disposal of this Product

Waste Electrical & Electronic Equipment (WEEE)

The crossed out wheeled bin is intended to show that this appliance must not be placed with ordinary household waste at the end of its useful life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please keep separate from other household waste and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where you purchased the product, or their local government office for details of where and how you can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product must not be mixed with other commercial wastes for disposal.

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC Warning statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
-

BumpOut Setup

A. Operating BumpOut



1. POWER ON/OFF

- **Turn on:** Press the power button for 1 second. A tone will indicate the system is on.
- **Turn off:** Press and hold the power button for 2 seconds. A tone will indicate the system is off.

2. BLUETOOTH PAIRING

- To pair a device, double tap the power button. A tone will indicate the speaker is in pairing mode.
- Find the Bluetooth settings on your device and select BumpOut from the device list. A tone will indicate that BumpOut is successfully paired with your device.

3. VOLUME

- To adjust the volume of BumpOut, use the volume up (+) and volume down (-) buttons located next to the power button.

4. EXPANSION

- To initiate & retract Expansion Mode, press the Expansion Button.
-

BumpOut Setup

5. CHARGING & BATTERY

- To charge BumpOut, open the port cover located on the bottom of the speaker.
- Plug the micro USB cable into the micro USB port.

6. POWER INDICATOR

- A red light indicates that the speaker is in charging mode.

7. BLUETOOTH INDICATOR

- Flashing Blue Light: Ready to Connect
- Flashing Red Light: In Pairing Mode
- Blue Light: Successfully Paired

B. Coin Mounting

1. ATTACHING COIN

- Remove clear cover on back of Coin.
- Place Coin on smooth surface with logo aligned straight.




Make sure logo is straight when mounting Coin

BumpOut Setup

2. MOUNTING BUMPOUT TO COIN


- Press and hold Coin Release button.

Coin Release Button

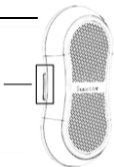

- Mount BumpOut on top of Coin.
- Test that BumpOut is secured to Coin before letting go.

*Continue holding Coin Release button while mounting speaker to Coin.

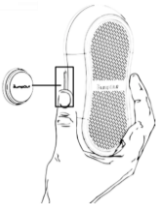

3. Removing BumpOut from Coin

- Press Coin Release Button and remove BumpOut from Coin.
- Always use Coin Release button to mount and remove BumpOut from Coin

Recommended Surfaces:

- Mirrors, Windows, Glass, Stainless Steel, Metal, Plastics

Don't Attach Coin to:

- Wallpaper, Brick, Drywall, Natural Wood, Painted Walls


Specifications

Dimensions (mm)	120x61x22 mm
Speaker	3.2W
Battery	Lithium-ion 700mAh
Power	Micro USB 5V DC
Wireless Distance	~ 10m
Bluetooth	Ver 4.2
Charging time	~ 1.5 hours

Technical specifications are subject to change without notice.
Errors and omissions are exempted.

Country of origin: China

A. en fonctionnement BumpOut

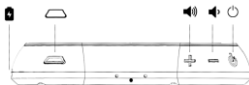

1. MARCHE / ARRÊT

- **Allumer:** appuyez sur le bouton d'alimentation pendant 1 seconde. Une tonalité indiquera que le système est allumé.
Éteindre: appuyez sur le bouton d'alimentation et maintenez-le enfoncé pendant 2 secondes. Une tonalité indiquera que le système est éteint.

2. BLUETOOTH PAIRING

- Pour jumeler un appareil, appuyez deux fois sur le bouton d'alimentation. Une tonalité indiquera que l'enceinte est en mode d'appariement.
- Trouvez les paramètres Bluetooth sur votre appareil et sélectionnez BumpOut dans la liste des appareils. Une tonalité indiquera que BumpOut a été couplé avec votre appareil avec succès.

3. LE VOLUME

- Pour régler le volume de BumpOut, utilisez les boutons d'augmentation du volume (+) et de réduction du volume (-) situés à côté du bouton d'alimentation

4. EXPANSION

- Pour lancer et rétracter le mode Expansion, appuyez sur le bouton Expansion.

5. Charging de la Batterie

- Pour charger BumpOut, ouvrez le couvercle du port situé en bas de l'enceinte..
- Branchez le câble micro-USB dans le port micro-USB.

6. INDICATEUR DE PUISSANCE

- Un voyant rouge indique que l'enceinte est en mode de charge.

7. BLUETOOTH INDICATEUR

- Lumière bleue clignotante: Prêt à se connecter
- Lumière rouge clignotante: en mode couplage
- Lumière bleue: jumelé avec success

B. Montage de pièces

1. PIÈCE JOINTE

- Retirez le couvercle transparent à l'arrière de la pièce..
- Placez la pièce sur une surface lisse avec le logo aligné




Assurez-vous que le logo est droit
lors du montage Coin

2. MONTAGE BUMPOUT À MONNAIE

- Appuyez et maintenez le bouton de dégagement monnaie.

Bouton de déblocage

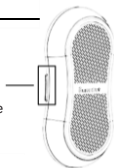


- Mont BumpOut sur le dessus de pièce.
- Vérifiez que BumpOut est sécurisé sur Coin avant de partir

* Continuez à tenir le bouton de dégagement des pièces pendant le montage du haut-parleur sur la pièce

3. Retirer BumpOut de la pièce

- Appuyez sur le bouton de déblocage des pièces et retirez BumpOut de la pièce
- Toujours utiliser le bouton de dégagement de pièce pour monter et retirer BumpOut de Coin

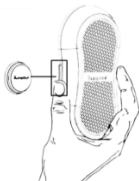

Surfaces recommandées:

- Miroirs, Fenêtres, Verre,
Acier inoxydable, Métal,
Plastique

Ne pas joindre de pièce à:

Papier peint, brique,
cloison sèche, bois
naturel, murs peints

Caractéristiques

Dimensions (mm)	120x61x22 mm
Orateur	3.2W
Batterie	Lithium-ion 700mAh
Power	Micro USB 5V DC
Distance sans fil	~ 10m
Bluetooth	Ver 4.2
Temps de charge	~ 1.5 hours

Les spécifications techniques sont sujettes à changement sans préavis. Les erreurs et omissions sont exemptées. Pays d'origine: Chine