




CADY WILE


2.4GHZ INTELLIGENT REMOTE CONTROL ROBO-ADVISOR

*Please read the user manual carefully before operation and
keep the manual in proper place for future reference.


ACCESSORIES

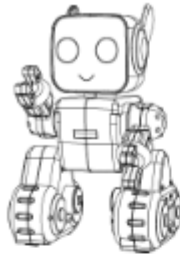

Robot x1

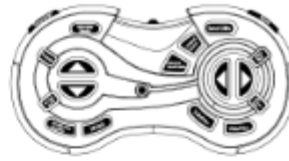

Remote Control x1

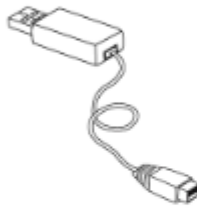


USB Charger x1



User Manual x1



Tray x1

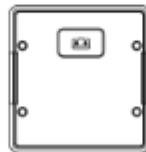

Battery x1



Key x1


Notes:

Please check the number of accessories carefully (as shown above).

Please provide proof of purchase and contact the store for replacement if any missing parts.

Battery Assembling and Charging

1. Battery Assembling for Remote Control

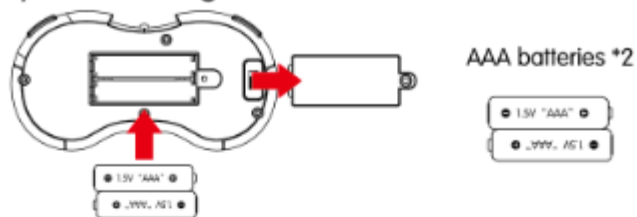


Open the cover of battery compartment, insert two AAA batteries (not included).

Notes:

1. Ensure the polarity symbols on the batteries match the symbols inside the battery compartment.
2. Do not mix new and old batteries.
3. Do not mix different types of batteries.

2. Battery Charging for Robot

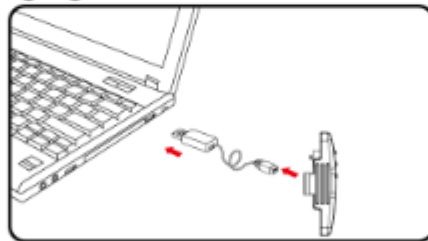

Connect USB charging cable with robot at one end and USB charging interface at the other end.

Option One



Connect with USB interface of computer.

Option Two



Connect with USB interface of portable charger.

Option Three



Connect with USB interface of USB charging plug.

Notes:

It takes about 55–70 minutes to charge up to full, and the run time of robot is about 60–80 minutes after it is fully charged.

▲ Battery Instructions

- There is a certain risk when using lithium battery. It may cause fire, body injury or property loss. Users must be aware of the risks and take full responsibility of using battery improperly.
- If battery leakage occurs, please avoid contacting your eyes or skin with electrolyte. Once it happens, please wash your eyes with clean water and seek medical care immediately.
- Please remove the plug immediately if you sense any peculiar smell, noise or smog.


Battery Charging

- Please use the charger from original factory to ensure your safe usage.
- Do not charge dilutant or outworn battery.
- Do not over charge battery. Please unplug the charger once fully charged.
- Do not charge the battery next to inflammables, such as carpet, timber floor or wood furniture or on the surface of electro-conductive objects. Please always keep an eye on the battery when charging.
- Do not charge battery which not cool down yet.
- The charging temperature should be between 0°C to 40°C.

Battery Recycling

- Do not dispose the battery as daily rubbish. Please familiarize yourself with the local garbage disposal method and dispose it according to the special requirement.

KNOW YOUR REMOTE CONTROL

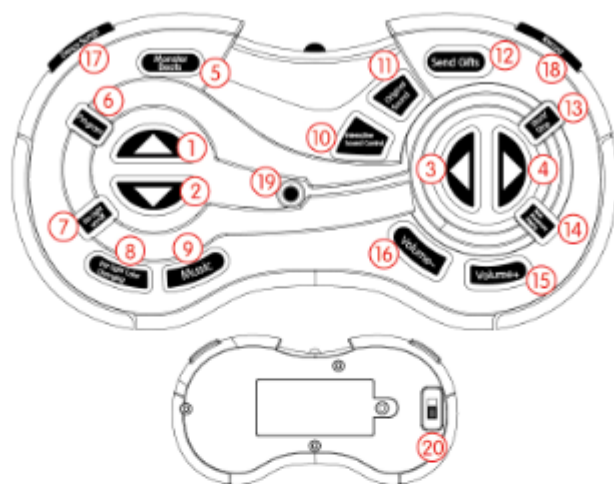

- | | |
|-----------------------------|--------------------------|
| ① Forward | ⑪ Original Sound |
| ② Backward | ⑫ Send Gifts |
| ③ Turn Left | ⑬ Start/Stop |
| ④ Turn Right | ⑭ Basic Movement Display |
| ⑤ Monster Beats | ⑮ Volume+ |
| ⑥ Program | ⑯ Volume- |
| ⑦ Ear Light On/Off | ⑰ Dance Songs |
| ⑧ Ear Light Color Changing | ⑱ Record |
| ⑨ Music | ⑲ LED Indicator Light |
| ⑩ Interactive Sound Control | ⑳ Power Switch |

CONTROL YOUR ROBOT

1.Power Switch

Hello, my name is Robot Cady Wile. I am your personal financial advisor. You will find me helpful and talented, because I can not only sing and dance well, but also tell stories and play music. I am willing to offer almost everything you expect and beyond, such as perform a monster beat, send gifts or run errands if you need. You'll like me. I'm going to show you a dance performance first. Join me and dance with me. Music!

2.Stand-by

The robot would speak to you every 20 seconds in Stand-by Mode.

- ①Hello? Is there anyone there? ②Come and play with me!
- ③Let's dance together.

3.Shutdown


The system is going to shut down. See you next time. Bye!

4.Basic Movement Display

Start: I am going to display the basic movements. Ready, go!

Stop: Performance finished! Join me and let us play together!

5.Slide Forward/Backward

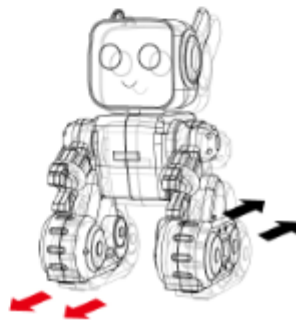


6. Turn Left/Turn Right

Turn Left



Turn Right

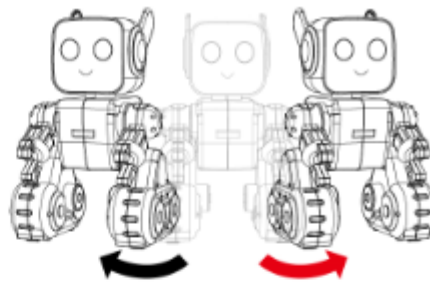

7. Record

Press the "Record" button to start recording, and press again to finish and replay.

8. Monster Beats

Press the "Monster Beats" button, the recording content in order to change three ways.

9. Start/Stop

Press "Start/Stop" button to stop and enter standby mode. Press again to restart.

10. Volume+/-

There are five levels of volumes (default volume at 3rd level). Increase the volume of sound, while voice prompts.

11. Program

Press the "Program" button to start program (Six buttons to program movements, including Forward, Backward, Turn Left, Turn Right, Music, Dance Songs, and other buttons to halt the program), and press again to display the programmed movements.

12. Ear Light Color Changing

After the robot is turned on, its RGB eye lights would turn multicolor and gradually change colors. Once the pairing has been successful, press the "Ear Light Color Changing" button to control the ear light to change colors. Press once to control the ear light to change from one color to another, and press more than twice to turn multicolor and gradually change colors.

13.Ear Light On/Off

When the robot starts up, its ear light turns on. Touch the ear light to turn it off and touch again to turn it on. Please refer to point 12 for further details about the ear light color changing.

14.Send Gifts

After pressing the "Send Gifts" button, you will hear a vocal message reminding "Here comes the gift". At the message the robot would walk 1 meter forward, turn 90 degrees to the right and say: "This is your gift. Please check and receive your gift". (If you touch the robot on its head when it is walking forward, the robot would say "Take it easy. Coming very soon" then stop moving.) After the robot has turned 90 degrees to the right, it continues to walk one meter forward and say: "I've been working hard for a long day. Is there any reward to give me a comfort?"

15.Coin Entrance

If you insert the coins, the robot would react with sound:

Sound 1: "Great guy! Glad to see you save your money here again."

After playing a random music.

Sound 2: "Your savings are steadily increasing day by day." Randomly play a song music.

Sound 3: "Hey. You can buy the things you like when you save up a great amount." After random play a piece of music.

16.Music

①Take a rest and listen to some relaxing music with nature sounds.

②Fabulous!

A total of seven songs:

①Four Little Swans ②The Blue Danube ③Moment Musical

④Innocent ⑤Minute Waltz ⑥Waltz ⑦Mozart

17.Dance Songs


- ①Let's dance. ②Come on! Go on and compete.

A total of five dance:

- ①Can't Get You Out Of My Head ②Smooth Criminal
③That's Not My Name ④Angelina ⑤Party

18.Three Control Modes


- ①Remote Control Mode: Operate via the one-touch buttons on the remote control.
- ②Interactive Sound Mode: After recording, press the "Interactive Sound" button, the robot eyes turn red, clap a play voice changes (Three magic sound in turn, clap when the robot eyes from red to yellow and red), then press the "Interactive Sound" button, Robot eyes turn red, clap twice to sing or dance randomly (When clapping, machine the human eye from red to red and red 2 times).

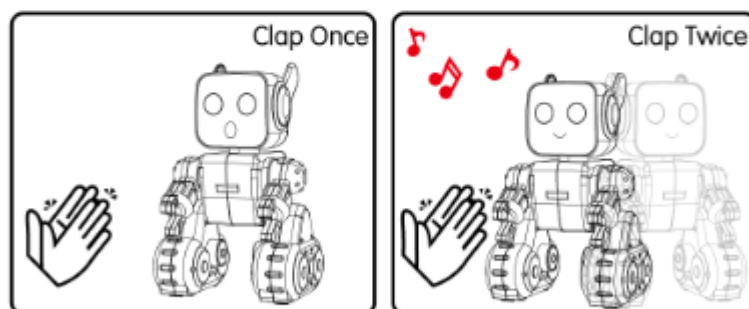

Notes:

After the eye lights turn red, give the robot high five to enable the interactive sound control mode. And only once the original sound has been recorded, the robot can start to replay the original sound and play monster beats.

- ③ Touch Mode: Touch on the robot's head, and the robot will produce fun sounds and tell you something about financial management.

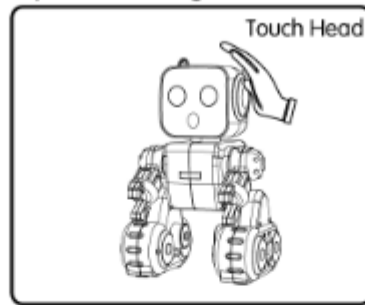

If you touch the robot on its head, the robot would react with movements and sound:

FQY 1: Wow! Come and touch my head, I will tell you useful knowledge about how to manage your finance. Do you know the way to earn a great deal of money? Your parents must know because they understand that only by hard work that they get earn a lot of money. The best way to manage the money you have is to spend wisely and save up regularly. You can put your money in the piggy pocket here.

FQY 2: Wow! Come and touch my head, I will tell you useful knowledge about how to manage your finance. Do you know the way to earn a great deal of money?

FQY 3: Wow! Come and touch my head, I will tell you useful knowledge about how to manage your finance. Do you know what money look like? The money we have in our wallets is notes and coins. Both of them have different values, with coins coming in 50 cents and 1 dollar, and paper notes coming in 1, 5, 20, 50 and 100 dollars. You can ask your parents for some coins and notes to help recognize and identify the graphics and values of different coins and banknotes.

19.Low Voltage Alarm

Low voltage. Please immediately help me get charged!

Federal Communications Commission (FCC) Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by SHANTOU CITY JINJUE TOYS CO.,LTD may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.