


喵喵机PAPERANG-P3

说明书

Instructions

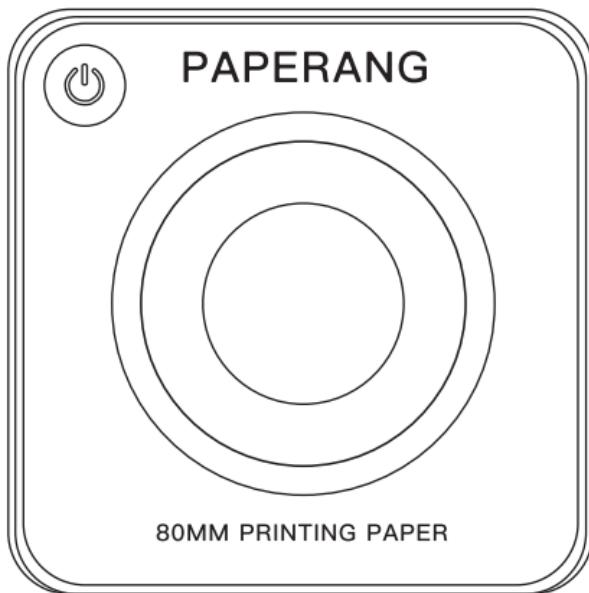


产品简介 | 包装清单



喵喵机打印机



 定制热敏纸




数据线



说明书

产品简介 | 产品信息

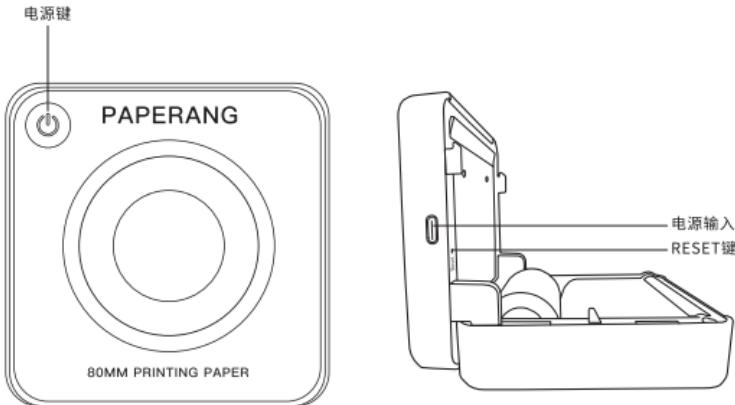

产品名称:喵喵机打印机

充电接口:USB Type-C

产品型号:PAPERANG-P3

电池:内置1600 mAh锂电池

输入电压/电流:5V=2A

产品规格:100*100*50 mm/284g

耗材规格:80*30 mm

产品简介 | 软件下载

□ 移动端下载



在应用商店搜索“喵喵机”或扫描二维码下载安装喵喵机APP

□ PC 端下载

访问喵宝科技官网(<http://www.paperang.com>)- 下载

□ 设备耗材购买渠道

访问淘宝、京东商城购买

使用说明

开关机

长按电源键三秒,灯亮起则开机,再长按电源键三秒,灯熄灭则关机

长按电源键3秒开机




使用说明

连接喵喵机

方法1：在应用内点击连接设备即可连接打印机

方法2：双击电源键后，打印机打印出相应的二维码，通过APP添加设备中的扫一扫功能，扫描二维码即可连接打印机

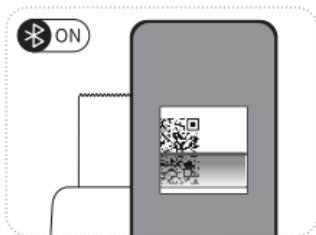

温馨提示：确保手机或平板电脑的蓝牙处于打开状态



使用说明

更换耗材

如图所示,向下推开上机盖

更换耗材时,参考如图所示
方向放入耗材

确认耗材放置正确后,将上机盖
与下机盖合上,向下按动上机盖
恢复原状

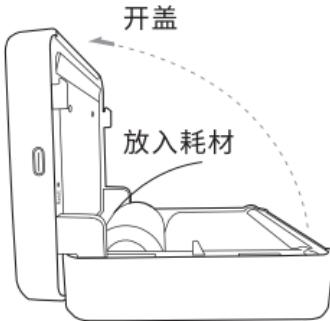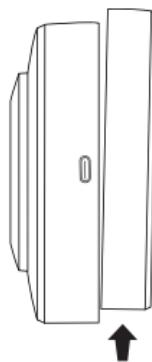

使用说明

更多功能使用说明

通过APP中扫一扫功能,扫描二维码查看电子使用指南



安全及注意事项



电池过热

电池管理及注意事项

- 充电完成时,我们建议拔掉充电线
- 为了避免火灾,请不要在高温地
点充电(如汗蒸房、篝火附近)



充电器注意

打印头管理及注意事项

- 有可能因为充电不当而导致打
印头损坏
- 我们建议请不要在高湿度或多
灰尘地带使用打印机



烧伤危险 注意割伤

打印头过热 纸张边缘锋利

- 打印后,请勿直接触碰打印头,以
防过热烫伤
- 请注意撕纸口和纸张边缘锋利,
以防割伤



充电端口损坏现象

充电中的注意事项

- 请轻轻插入或拔出充电线,以防
用力过猛损坏充电端口

电子信息产品有毒有害物质申明

部件名称	塑胶外壳	线路板	内部线缆	电池
铅(Pb)	○	×	○	○
汞(Hg)	○	○	○	○
镉(Cd)	○	○	○	○
六价铬(Cr6+)	○	○	○	○
多溴联苯(PBB)	○	○	○	○
多溴二苯醚(PBDE)	○	○	○	○

本表格依据SJ/T 11364的规定编制

○ 表示该有害物质在该部件所有均质材料中的含量在GB/T 26572规定的限量要求以下

× 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求

1. 嘴嘴机机身金属结构件:其中的钢材/铝材或铜材中含铅

2. 电路模块:

PCB表面焊盘含铅

陶瓷电容/贴片电感/贴片电阻含铅

晶振内部含铅

3. 内部线缆连接器:大部分连接器金属外壳/端子等含铅,引脚含铅等



符号是电子信息产品污染控制标志

表示本产品的环保使用期限为10年,并且可以回收利用,
不应随意丢弃(由于产品体积限制不能在产品上标注)



可回收图标

警告

- 消费者若使用电源适配器供电,则应购买配套使用获得CCC认证并满足标准要求的电源适配器;
- 用错误型号电池更换会有爆炸危险,务必按照说明处置用完的电池。

喵喵机退换货登记表

换货 退货

姓名 _____

电话 _____

收货地址 _____

订单号 _____

产品序列号 _____

经销商名称 _____

退换货原因 _____

备注

提供7天无理由退货、15天换货服务，1年内非人为损坏免费维修

此退换货登记表经厦门喵宝科技有限公司授权销售盖章方可生效(售机单位盖章)

详情请翻阅保修条例

此退换货登记表请用户妥善保管

合 格 证 已 检 验

喵喵机保修服务政策

保修服务政策

消费者通过合法渠道购买的打印机,如果出现非人为损坏的性能故障,享有厦门喵宝科技有限公司“保修/包退/包换”(简称“三包”)的服务承诺

保修条例

1.自签收之日起7日内,本产品出现非人为损坏的性能故障,消费者可选择退货或更换同型号同规格的打印机或修理;

2.自签收之日起8日-15日内,本产品出现非人为损坏的性能故障,消费者可选择更换同型号同规格的打印机或修理;

3.自签收之日起12个月内,本产品出现非人为损坏的性能故障,消费者享有免费保修服务

非保修条例

1.未经授权的维修/误用/碰撞/疏忽/滥用/进液/事故/改动/不正确的使用,或者撕毁/涂改标贴;

2.已超过三包有效期;

3.因不可抗力造成的损坏;

4.人为原因损坏的性能故障


Product Introduction|Packing List



Thermal Printer



 Thermal Paper




USB Type-C



Manual

Product Introduction|Product Information

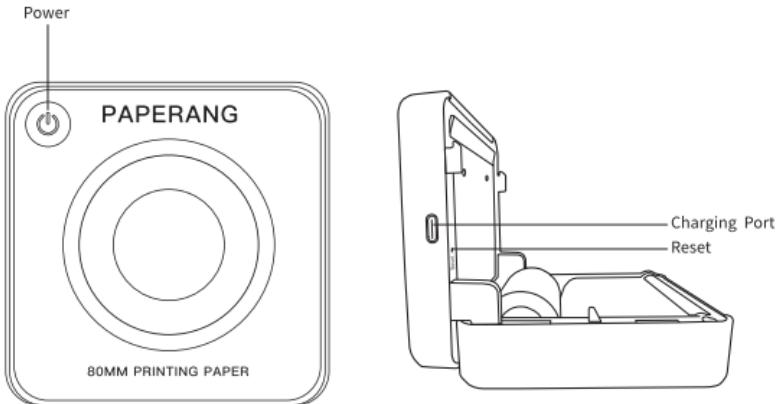

Product Name: Thermal Printer

Charging Interface: USB Type-C

Product Model: PAPERANG-P3

Battery: Built-in 1600mAh

Input: 5V=2A

Lithium Battery

Paper Specs: 80*30mm

Product Specs: 100*100*50mm/284g

Product Introduction|App Download

📱 Mobile Download

Search "PAPERANG"



💻 PC Download

Please visit <http://www.paperang.com> to download the PC tool

⌚ Product Purchase


Visit AliExpress, Amazon to purchase

Product Introduction|Instruction

Turn On/Off

Hold Power button for 3 seconds, and the printer will be turned on;
Hold Power button for 3 seconds, and the printer will be turned off.

Hold Power button for 3 seconds

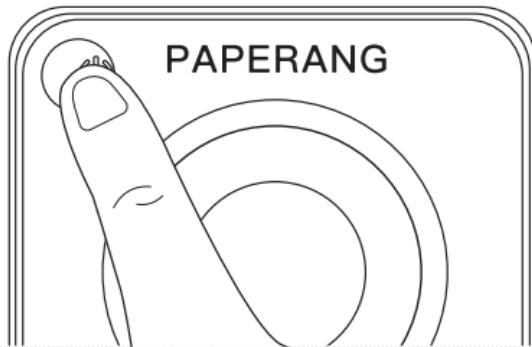


Product Introduction|Instruction

PAPERANG Connection

Method 1: Click on Add Device in the app to connect to the printer

Method 2: Double tap the Power button – Print out the QR code – Connect to the printer by Scan Code to Add


Tips: Please ensure that mobile Bluetooth is enabled

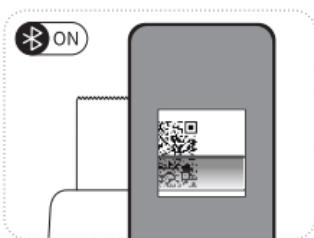

Product Introduction|Instruction

Paper Replacement

As shown, push down the upper cover

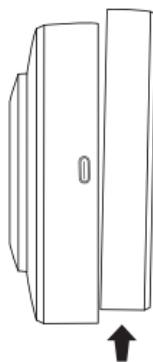


Product Introduction|Instruction

Paper Replacement

Put the paper in the direction shown in the illustration

Close the cover when paper is correctly placed

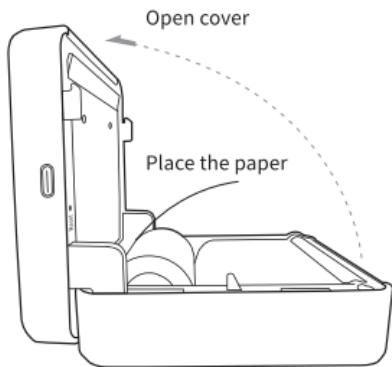

Safety and Attention



Overheated Battery

Battery management and attention

- When charging is complete, we recommend unplugging the charging cable.
- To avoid fire, please DO NOT charge in high temperature locations. (For example, steaming rooms or nearby the bonfire).



Charger Attention

Printing head management and attention

- The printing head may be damaged due to improper charging.
- We recommend not to use the printer in high humidity or dusty areas.



Burn and Cuts Warning

Overheated printing head/Sharp-edged paper

- After printing, please Do NOT touch the printing head to avoid scalding by overheating.
- Please pay attention to the sharp edges of the paper to prevent cuts.



Charging Port Damage

Precautions during charging

- Please plug in or unplug the charging cable gently to prevent charging port damaging.

FCC WARNING

This device complies with part 15 of the Fcc Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Cless B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harrmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular instaliation.

If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2APWO-PAPERANG-P3

Email:service@paperang.com

Website:www.paperang.com

版权所有©厦门喵宝科技有限公司,保留一切权利

All copyright reserved © Xiamen Paperang Technology Co., Ltd., All rights reserved