



Music Panda

- 1) ON/OFF button Dance button
- 2) || Shutdown and Boot
- 3) Port USB
- 4) The sound SO through your speaker at the back.
- 5) The arm can be in different positions.
- 6) Blush blinking

The feet are animated when the Dance button is activated while the music is playing.

Device connection:

Turn on your phone's bluetooth, search for bluetooth device, and click the Bluetooth name SKY SPEAKER to connect without a password.

Product description:

Powerful and more than original design. The animal dancing enclosure comes alive with music to the delight of children and adults delighted, rediscover the pleasure of listening to music all over the world amusing your surroundings with technical features? Listen to your music and answer your calls handset free.

Features:

This product is a speaker that uses Bluetooth technology wireless.

She dances with rhythm of music.

Connect to your phone or tablet with Bluetooth 3, 5 amplifier, and intense bass.

Shell material: ABS Interface Type: USB

Battery capacity: 400mAh(lithium battery)

Duration: 60 minutes -120 minutes

Charging time: 20-30 minutes

Extended storage: Not supported

Effective distance: 10 meters

Special feature selling point: blush, swing, blink.

Operation method: button

Applicable people: General

Product full-featured: With the dance music, LED
blush, swing around, blink

Range distance without fits up to 10 meters.

Function:

1. Stay press the play / pause button for 1 seconds, release once on. A blue light starts to flash quickly to indicate The matching state.

This step is performed on the Bluetooth device for detect the match status.

2. A list of detected Bluetooth devices appears on the display of your Phone/tablet

Your device displays "music?panda", select the device and start pairing.

During the process, a blue flashing light will turn on then an audible signal indicates that the pairing was made with success.

3. The speaker records the last connection of the device and will automatically log in each time as long as the speaker restart.

If the connection fails, turn off the speaker and reconnect the device.

NOTE:

1. The happy panda needs to interact with the children with an adult.

2. This is not food. Please don't let children eat it.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.