

# on.™

## Item Locator Quick Start Guide

### ⚠️ WARNING: IMPORTANT SAFETY INSTRUCTIONS- Read Before Using!

Read and follow all instructions and warnings before use. Save these instructions for future reference. This product is not a toy. Keep out of reach of children. Use this product only in the manner intended by the manufacturer. If you have questions, contact the manufacturer. This product is not serviceable. DO NOT attempt to repair or modify this product. This product contains small items that could be a choking hazard if swallowed. Keep away from children.

### ⚠️ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH or serious injury can occur if ingested.**
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate. Even used batteries may cause severe injury or death.

Call a local poison control center for treatment information. Product is compatible with 3V CR2032 battery.

Non-rechargeable batteries are not to be recharged. Do not force discharge, recharge, disassemble, heat above 212°F/100°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Ensure the batteries are installed correctly according to polarity (+ and -). Do not mix old and new batteries, different brands or types of batteries, such as alkaline carbon-zinc, or rechargeable batteries. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.


### Getting Started 01

#### 1. Check For Updates

- Use the Apple Find My app to locate your Item Locator; the latest version of iOS, iPad OS, watchOS or macOS is recommended.

#### 2. Power On/Off

- Rotate lid to open. Remove the white plastic film (Pull tab on film to remove)
- A sound (two beeps) will play indicating it is on.
- If the product is not paired within 10 minutes, the Locator will turn off.

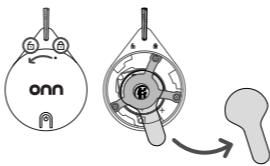

• **To power on**, press your Item Locator's function button once - it should beep indicating it is powered on.

• **To power off**, press the button twice rapidly, the second time you need to press and hold the button until the end. You will hear a drip sound, wait for 5s, you will hear a long drip sound indicating it is powered off.

### Add Your Item Locator 02

#### 1. Start the App

- Open Find My app on your supported iPhone or iPad.
- Allow notifications from the app

#### 2. Connect your Item Locator

- Power on your Item Locator
- Tap "+" then "Add Other Item"
- Once your Item Locator is located (Should show as "on.Locator"), tap "Connect"
- Choose a recognizable name and emoji for your Item Locator and tap "Continue"
- Find My will ask for confirmation to add your Item Locator to your Apple ID - tap "Agree"
- Tap "Finish" and your Item Locator will be set up and ready to be connected to any items you wish to locate e.g. your keys

### Locate Your Item 03

#### Find Item Locator when it is Nearby

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch
- Tap on your Item Locator from the list
- Tap "Play Sound" to make your Item Locator beep when it is nearby.
- Tap "Stop Sound" to stop the beeps once you find your item.

#### Find your Item Locator's Last Known Location

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch
- Tap on your Item Locator from the list
- Your Item Locator's last known location will appear on the map as the emoji you choose during set up
- To navigate to that last known location, tap "Directions" to open the Maps app.

We'd love to hear from you. Scan with your Walmart app and let us know what you think.



### Find Item when out of Range 04

#### 1. Enabling "Notify When Left Behind"

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch
- Tap on your Item Locator from the list
- Under "Notifications", enable the "Notify When Left Behind" toggle.
- You will receive a notification when you leave your Item Locator behind and it is no longer in range of your device.

#### 2. Enabling "Notify When Found"

- Enable "Lost Mode"
- Under "Notifications", enable the "Notify When Found" toggle.
- When your Item Locator is seen by another Find My enabled device, you will receive a notification of its updated location.
- **Note:** "Notify When Found" can only be activated when your Item Locator is out of range

### When Your Item Is Lost 05

#### 1. Enabling "Lost Mode"

- Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch
- Tap on your Item Locator from the list
- Under "Notifications", enable the "Notify When Found" toggle.
- **Note:** When "Lost Mode" is enabled, "Notify When Found" is automatically enabled
- **Note:** When "Lost Mode" is enabled, your Item Locator is locked and cannot be paired to a new device

### Resetting Your Item Locator 06

#### 1. Remove the Item Locator from FindMy™ App

- Open Find My app and select the "Items" tab.
- Tap on your Item Locator from the list.
- Please ensure "Lost Mode" is disabled.
- A screen detailing Lost Mode will pop up, tap "Continue".
- Enter your phone number or email address and tap "Next".
- Tap "Activate" to enable "Lost Mode".
- **Note:** When "Lost Mode" is enabled, "Notify When Found" is automatically enabled
- **Note:** When "Lost Mode" is enabled, your Item Locator is locked and cannot be paired to a new device


#### 2. Factory Reset Your Item Locator

- After successfully removing the Item Locator from Find My app, press the button thrice rapidly, the third time you need to hold the button until the end. You will hear a drip, wait 10 seconds, you will hear a long drip. Release the button and you will hear 2 beeps indicating that the factory Settings have been restored.
- The Item Locator is now reset and ready to be paired to a new device

### IMPORTANT TIPS

#### Replace the Battery

- Rotate the lid to the unlock icon and remove it.
- Using a screwdriver to remove the three screws, then remove the metal support.
- Replace the battery with a new CR2032 battery.
- Place it positive side up (text facing up).
- Put the metal brackets back on and lock the three screws, attach the lid and rotate to the lock icon position.

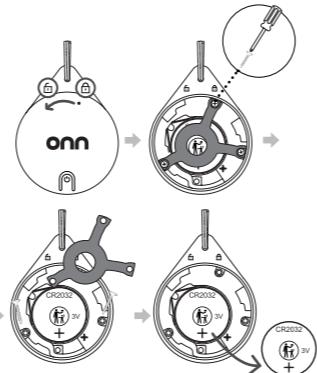

### IMPORTANT TIPS

#### Unwanted Tracking Detection

- If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:
  - If you have an iPhone, iPad, or iPod touch, Find My will send a notification to your Apple device. This feature is available on iOS or iPadOS 14.5 or later.
  - If you don't have an iOS device or smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.
- These features were created specifically to discourage people from trying to track you without your knowledge.

#### Troubleshooting

- Pairing may fail because of network problems. The following action is recommended.
  - Change the phone's network, such as switching between WiFi and mobile.
  - The first pairing may take a while. Please wait patiently.
  - Reset your item.
  - Repair with Find My App.
  - When "Lost Mode" is enabled, Do NOT REMOVE ITEM in the App.
- Your Item Locator will be locked and cannot be paired to a new device.
  - The battery usage time varies depending on persona usage habits. Frequent use of the call function can accelerate battery consumption.

### THE FINE PRINT

**Warning:** The battery must be kept out of the reach of children. Due to chemical burns and potential esophageal perforation, swallowing may cause serious injury or death. If the child accidentally swallows the button battery, please call the rescue phone immediately and seek medical advice in time. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### THE FINE PRINT

Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### THE FINE PRINT

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

© Apple, Apple Watch, iPad, iPadOS, iPod touch, Mac and macOS are trademarks of Apple Inc., registered in the U.S. and other countries. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

**Need help?**  
We're here for you every day from 7 a.m.-9 p.m. CST  
Give us a call at **1-888-516-2630**

©2024 onn. All Rights Reserved