

onn.

USER GUIDE
23 Mile Walkie Talkie 3 Pack

For product assistance & missing or replacement parts:
WE CAN HELP!
1-888-516-2630
7 DAYS/WEEK 7:00am-9:00pm CST
Find more at [Walmart.com](#)

THIS GUIDE CONTAINS IMPORTANT SAFETY INFORMATION
PLEASE READ AND KEEP FOR FUTURE REFERENCE

1001927, EN, 09/2024

Earphone Jack

Press and hold the button to talk and transmit.
Press the button to save the settings and exit menu. (In menu options)

Call / Power Button

Press and hold the button for 3 seconds until a tone sounds, turn on/off the intercom. Press the button to call the other party.

Lamp / Weather Button

Press the button to turn built in LED Lamp On/Off. Press and hold the button for 3 seconds to enter Weather mode.

Speaker

Up / Down Buttons

Use the Up/Down buttons to select Volume level (0-7).
Use the Up/Down buttons to select a channel / Interference Eliminator Code/ sensitivity level (call tone when in the menu).

Lock / Menu Button

Press and hold the button for 3 seconds to lock/unlock.
Press the button to enter Menu and flip menu options.

Man / Scan Button

Press and hold the button for 3 seconds to hear the volume level.
Press the button to turn on/off the Scan.

Microphone

Safety Precautions

- Follow battery installation instructions carefully to avoid overheating.
- Do not use in prohibited areas.
- Keep the device dry and clean.
- Avoid extreme temperatures.

RF Exposure and Product Safety Instructions for Portable Two-Way Radios in General Populated and Uncontrolled Environments

Compliance with RF Exposure Standards
Your Two-Way radio complies with the following RF energy exposure standards and guidelines:

- United States Federal Communications Commission (FCC) of Federal Regulations; 47 CFR et seq. & FCC.
- Institute Electrical and Electronic Engineers (IEEE) C95.1.

Transmit and Receive Precautions

To control your exposure and ensure compliance with general population/

4

Content & Information

Content & Information

Advanced Features

7-8

Features

2

What's in the Box?

2-4

Safety Precautions

4-5

Getting Started

6

Specific Features

8-10

Weather Options

10

Cleaning & Care

10

Basic Operations

7

Adjusting Volume

7

Changing Channels

7

Making a Call

7

Specifications

11

Troubleshooting / Frequently Asked Questions (FAQ)

11-12

Warranty

11

FEATURES

- Built in LED light
- 22 channels
- Weather channels
- Works with AA rechargeable NiMH batteries (included) or standard alkaline batteries

Mountain to Valley - Up to 23 miles

Open Water - Up to 12 miles

Neighborhood - Up to 2 miles

Overview

What's in the Box?

3 Walkie Talkies

9 AA NiMH batteries (rechargeable)

1 Micro USB to USB charging cable

1 3.5mm Micro USB to USB charging cable

3

General Frequency Channel

While in Standby mode or when selecting a channel, it shows the current channel (1-22).

Volume Numbers

Adjusting the volume shows the current level (0L - 7L).

VOX Sensitivity Numbers

When the call tone is adjusted, the "CA" appears.

2CH Channel Numbers

Adjusting the VOC controls the current level, which ranges from 0 to 3.

Weather Icon

The indicator that shows when the radio is in Weather Band mode.

VOX Icon

Indicates when VOX mode is active.

2CH Icon

Indicates when 20 mode is active.

Mute Icon

Indicates the volume of the radio is mute.

DCS/CTCSS Privacy Code Numbers

Change from 0-121

Time Numbers

Adjusting the call tone shows the current level (0 - 10).

2CH Dual Watch

When the 2CH is adjusted, the "CH" appears.

Battery meter

Show the current battery level.

Scan Icon

Indicates when SCAN mode is active.

Key Lock Icon

Indicates KEY LOCK mode is on.

Receive Icon

Indicates that the radio is receiving a transmission.

Transmit Icon

Indicates that the radio is transmitting a signal.

Microphone

3

Getting Started

Battery Installing

1. Take off clip

2. Locate the battery compartment on the back of the unit.

3. Insert 3 AA batteries, observing the polarity markings (+ and -).

4. Close the battery compartment.

NOTE: The device is compatible with rechargeable NiMH batteries.

Low Battery Level

When in battery low status, radio will sound (Low Battery Alert) every 10 minutes or after releasing PTT button.

Charging

1. Turn the Device Off

2. Plug in Micro-USB cable

3. Charging

NOTE

- It is recommended to power OFF your radio while charging.
- When moving between hot and cold temperatures, do not charge NiMH batteries until battery temperature acclimates (usually about 20 minutes).
- For optimal battery life, remove radio from charger within 16 hours. Do not store radio while connected to charger.

Turning the Device On/Off

- To turn on: Press and hold the Power button for 3 seconds.
- To turn off: Press and hold the Power button for 3 seconds.

NOTE: FCC ID Label is in battery compartment. It could be easily found by removing battery cover.

6

Basic Operations

Adjusting Volume

- Press the Up/Down buttons to adjust the volume.
- Press the PTT button to confirm.

Changing Channels

- Press the Menu button until the channel number flashes.
- Press the Up/Down buttons to select a channel (1-22).

Making a Call

- Press and hold the PTT button to talk.
- Release the PTT button to listen.

NOTE: Do not hold radios less than 5 feet apart.

NOTE: Do not cover microphone while talking.

Push-to-Talk Timeout Timer

To prevent accidental transmissions and save battery life, radio will stop transmitting if you press PTT button for 60 seconds continuously.

Advanced Features

Setting DCS/CTCSS Privacy Code

- Press the PTT button to confirm.
- Press the Up/Down buttons to select a code (0-121).

NOTE: Disables the code, allowing all signals on the channel.

7

Call Tones

- Press the PTT button to confirm.
- Use the Up/Down buttons to select a tone (0-10).

VOX (Voice-Operated Transmission)

- Press the PTT button to confirm.
- Use the Up/Down buttons to select sensitivity (0-3).

2CH Dual Watch (Dual Channel Monitor)

- Press the PTT button to confirm.
- Use the Up/Down buttons to select the second channel (1-22) or "OF" to turn off.

NOTE: Do not hold radios less than 5 feet apart.

NOTE: Do not cover microphone while talking.

Push-to-Talk Timeout Timer

To prevent accidental transmissions and save battery life, radio will stop transmitting if you press PTT button for 60 seconds continuously.

Specifications

Automatic Power Save

When the radio is in standby for 5 seconds (when there is no receiving transmission), the radio will switch to power-saving mode. It can receive and transmit in this mode.

Roger Tone

In the power-off state, press and hold the (Power & Up) button at the same time to turn on/off the Roger Tone.

Scanning Channels

Use SCAN mode to search all channels for transmissions or to find unused channels to use. To Start Scanning:

- Press Scan button, SCAN icon will appear and LCD will scroll through Channel and DCS/CTCSS Privacy code combinations.

8

Key Pad Lock

Press and hold Menu button until Lock icon appears or disappears on LCD.

Channel Selection

Set Call Tones	Set Call Tones	Set Call Tones	Set Call Tones
0: OFF (0: OFF)	1: 3 (0: OFF)	2: 3 (0: OFF)	3: 3 (0: OFF)
1: 3 (0: OFF)	2: 3 (0: OFF)	3: 3 (0: OFF)	4: 3 (0: OFF)
2: 3 (0: OFF)	3: 3 (0: OFF)	4: 3 (0: OFF)	5: 3 (0: OFF)

Tap the menu button four times, when the display channel number display position flashes, press the up and down keys to set any of the 1-22 CH

Tap the menu button three times, when the display channel number display position flashes, press the up and down keys to set any of the 0-22 privacy codes.

Tap the menu button twice, when the display channel number display position flashes, press the up and down keys to set any of the 0-10 call tones.

Tap the menu button once, when the display channel number display position flashes, press the up and down buttons to set the dual frequency monitoring Number 1 is the least sensitive

9

Warranty

1 YEAR LIMITED WARRANTY

Warranty Period lasts for 1 year (365 days) from date you purchased product. Your purchase date is printed on receipt you received with product. This limited warranty applies only to hardware components of Device that are not subject to accident, misuse, neglect, fire or damage from other external causes, alteration, repair, or commercial use.

Specifications

Channels:	Battery:	Range:
22	NiMH batteries	Up to 23 miles (ideal conditions), about 2 miles in urban areas

Power Source:

3 AA batteries

Interference Eliminator Codes:

121 Privacy Code/88 DCS codes / 88 DCS codes

Speaker:

12W

Troubleshooting / Frequently Asked Questions (FAQ)

Problem	Cause	Solution/Prevention
Cannot hear incoming transmission	Volume too low/muted Radio not set to correct channel	Ensure volume is above 0 Set radio to same channel as transmission
Transmission is unclear/unintelligible	Receiving signal is weak	Ensure radio is within range for current environment
Transmission is muffled	Micro/Speaker is covered	Ensure microphone is uncovered when transmitting

11

Q: Are the walkie-talkie batteries rechargeable?

A: The NiMH batteries included in the package are rechargeable. You can charge the device using the rechargeable NiMH battery through the device's charging port.

Q: How far is the actual call distance of the walkie-talkie?

A: The 23-mile range is achievable in ideal conditions without obstacles. In urban or suburban areas, obstacles can reduce the range to about 15-20 miles. When battery capacity is low, the receiving distance will also be affected.

Q: How can we improve the sound quality of the walkie-talkie?

A: The signal is blocked or interfered with by the surrounding environment. Holding the device too close or far from your mouth can affect audio clarity. Obstacles and interference radio waves will affect the receiving sound. Use it in an open area as much as possible.

We'd love to hear from you. scan with your walmart app and let us know what you think.

Made in Vietnam for Walmart Inc.

12