



Walkie Talkie

Model:100070695

PRODUCT GUIDE


August 11.2021-V1

CONTROL BUTTONS



(4)


DISPLAY SCREEN GUIDE

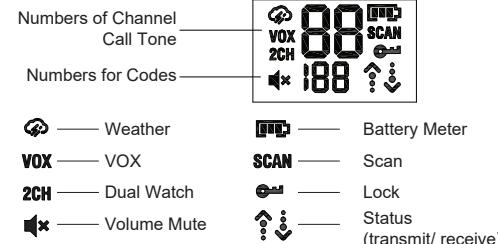

GETTING STARTED

Installing the Batteries

1. Remove the battery cover.

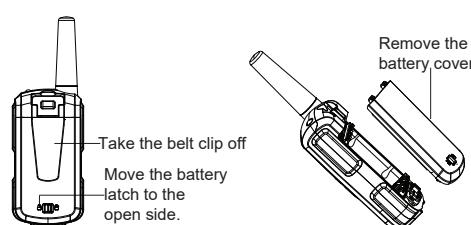

(5)

Note: RF exposure decreases with increasing distance from the antenna.

- Body Worn Operation. When worn on the body, always place the radio in an approved clip for this product.

Two – way Radio Operation

- Use only approved supplied or replacement antennas and audio accessories.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: All controls, adjustments and switches that's instructed in the manual or follow-up instruction provided by the manufacturer that may be operated or adjusted without resulting in a violation of FCC rules.

Warning: Any adjustment that could result in a violation of FCC rules and it's recommended that could be performed only by or under the immediate supervision and responsibility of a person certified as technically qualified to perform transmitter maintenance and repair duties in this radio service by an organization or committee representative of users of that service.

(2)

(3)

CAUTION: Changes or modifications i.e. replacing any transmitter component (crystal, semiconductor, etc.) not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

FCC SAR Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA). These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use when properly worn at a minimum distance of 0 mm from the body, in front of face with minimum distance 25mm.


- Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni -cad, ni -mh, etc.) batteries.
- This product contains small parts as (batteries, battery cover and screws) that may cause suffocation if swallowed by children.

Radio Battery Meter

The number of bars (■■■) on the radio battery icon shown indicates the battey level . When the radio battery meter shows one segments , the radio chirps periodically (Low Battery Alert). In battery low status , the radio will sound the alert every 10 minutes or after releasing the PTT button.


Note: Remove the battery from radio for storage purposes.

2. Insert 3 AA alkaline batteries with+and-polarity as shown inside.

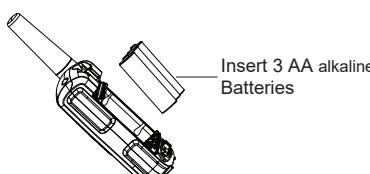

Insert 3 AA alkaline Batteries

3. Close the battery cover firmly.

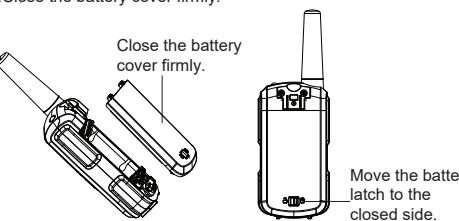

Note:

- Be careful when removing alkaline batteries. Do not use sharp or conductive tools to remove either of these batteries.
- Remove the batteries before storing your radio for extended periods of time. Batteries corrode over time and may cause permanent damage to your radio.

(6)

Turning your Radio On and Off

1. Press and hold on the button to turn your radio ON/OFF. In the ON position ,the radio chirps and briefly shows all feature icons available on the radio .
2. The display screen then shows the current channel, code and all features that are enabled . The radio is in Two - Way mode.

Setting the Volume

Press and hold button for three seconds to listen to volume level.

1. First press either or to trigger volume change. You will see current volume level on screen .

2. Press to increase the volume. Press to decrease the volume.

Do not hold the radio close to your ear. If the volume is set to an uncomfortable level, it could hurt your ear.

(7)

TALKING AND LISTENING

To communicate , all radios in your group must be set to the same channel and Interference Eliminator Code.

1.To talk, press and hold the **PTT** button. When transmitting , the  icon is shown .

2.When you are finished talking, release the **PTT** button.

3.When receiving, the  icon is shown.

For maximum clarity, hold the radio 2 to 3 centimeters away from your mouth and speak directly into the microphone . Do not cover the microphone while talking.

Talk Range

Your radio is designed to maximize performance and improve transmission range . Do not use radios closer than five feet apart.

Monitor Button

Press and hold  button for 3 seconds to enter monitor mode and listen for weak signals on the current channel .

You can also listen to the volume level of the radio when you are not receiving . This allows you to adjust the volume, if necessary . You can also press  button to check for activity on the current channel before you talk.

Push-to-Talk Timeout Timer

To prevent accidental transmissions and save battery life, radio will stop transmitting if you press **PTT** button for 60 seconds continuously.

(8)

Mode Button

Press and hold  button for 3 seconds, the user will be seamlessly switching between two-way and weather mode.

Selecting the Channel

The channel is the frequency of the radio uses to transmit.

1. In two-way standby mode,press  or  button to select the desired channel.
2. If you press and hold  or  button the channel numbers will scroll rapidly.

MENU OPTIONS

Selecting the Interference Eliminator Code

Sub-Codes help minimize interference by blocking transmission from unknown sources. Your radio has 121 Sub-Codes.

To set the code for a channel:

1. Press the  button until the code number starts to flash.
2. Press  or  button to select code number.
3. Press the **PTT** button to exit menu or  button to continue setup.

Setting and Transmitting Call Tones

Your radio can transmit different call tones to other radios in your group when you pressed  button.

The radio has 10 call tones('0' = 'tone off').

To set a call tone:

1. Press  button until call tone 'CA' appears. The current call tone setting flash.

(9)

2. Press  or  button to change and listen to the call tone.

3. Press the **PTT** button to exit menu or  button to continue setup.

Voice Operated Transmission(VOX)

Transmission is initiated by speaking into the microphone of the radio instead of pushing the PPT button.

1. To activate VOX, press  button until 'VOX' appears on the display, The current setting (0,1-3) Will flash.
2. Press  or  button to select the sensitivity level.
3. Press the **PTT** button to exit menu or  button to continue setup.

| |
|---|
| L3=High Sensitivity for quiet environments |
| L2=Medium Sensitivity for most environments |
| L1=Low Sensitivity for noisy environments |
| L0=Turn Off VOX function |

Dual Channel Monitor

Enable you to scan current channel and another channel alternately. To set another channel and start Dual Watch.

1. Press  button until '2CH' appears on the display. The current current setting (OF,1-22) will flash.
2. Press  or  button to select channels.
3. Press the **PTT** button or wait until the time out menu to

(10)

activate Dual Watch. The screen will alternate between Home Channel and Dual Watch Channel.

To end Dual Watch mode, re-enter Dual Watch menu to select the OFF setting.

Note: If you set the same channel and code as current channel, Dual Watch does not work.

SPECIAL FEATURES

Keypad Tones

Your radio emits a beep each time one of the buttons is pressed (except the **PTT** and  button)

Press and hold the  button while turning the radio ON to switch the keypad tone ON/OFF.

Roger Tone

You can set your radio to transmit a unique tone when you finish transmitting.

Press and hold the  button while turning the radio ON to turn the Roger Beep ON. Repeat the step to turn Roger Beep OFF.

Keypad Lock

To avoid accidentally changing your radio settings:

- 1.To lock the radio, press and hold  button until the key lock indicator  icon on display appear.
- 2.To unlock the radio press and hold  button until the key lock indicator  icon on display disappear.

(11)

CHANNEL AND FREQUENCIES

Model 100070695
This FRS device is approved for USA

| Channel | Frequency (MHz) | Max Power Output | Channel | Frequency (MHz) | Max Power Output |
|---------|-----------------|------------------|---------|-----------------|------------------|
| 1 | 462.5625 | 0.5W | 12 | 467.6625 | 0.5W |
| 2 | 462.5876 | 0.5W | 13 | 467.6875 | 0.5W |
| 3 | 462.6125 | 0.5W | 14 | 467.7125 | 0.5W |
| 4 | 462.6375 | 0.5W | 15 | 462.5500 | 0.5W |
| 5 | 462.6625 | 0.5W | 16 | 462.5750 | 0.5W |
| 6 | 462.6876 | 0.5W | 17 | 462.6000 | 0.5W |
| 7 | 462.7125 | 0.5W | 18 | 462.6250 | 0.5W |
| 8 | 467.5625 | 0.5W | 19 | 462.6250 | 0.5W |
| 9 | 467.5875 | 0.5W | 20 | 462.6750 | 0.5W |
| 10 | 467.6125 | 0.5W | 21 | 462.7000 | 0.5W |
| 11 | 467.6375 | 0.5W | 22 | 462.7250 | 0.5W |

Note:FCC ID Label is in battery compartment, it could be easily found by removing the battery cover.

Scanning Notes:

1.If you press the **PTT** button while the radio is scrolling through inactive channels, the transmission will be on the " home channel ". Scanning will resume 5 seconds after the end of your transmission. You may press the  button to stop scanning at any time.

2.If the radio stops on an undesired transmission, you may immediately resume the scan by briefly pressing  or  button.

3.If the radio repeatedly stops on an undesired transmission, you may temporarily remove that channel from the scan list by pressing and holding  or  for 3 seconds. You may remove more than one channel in this way.

(12)

WEATHER RECEIVE

Weather feature is available designed for use in USA and Canada. Your radio can tune in to broadcasts by the United States National Oceanic and Atmospheric Administration (NOAA) Weather Radio and Environment Canada Weather Radio.

You can listen to a weather channel (see "Weather Channels and Frequencies" table for details) or set your radio to alert you to emergency weather broadcasts that interrupt routine broadcasts. When you listen to a weather channel,you cannot use your radio in scan mode or for two-way communications.

(13)

WEATHER CHANNELS AND FREQUENCIES

| Weather Channel | Frequency (MHz) | Weather Channel | Frequency (MHz) |
|-----------------|-----------------|-----------------|-----------------|
| WX1 | 162.550 | WX7 | 162.525 |
| WX2 | 162.400 | WX8 | 161.650 |
| WX3 | 162.475 | WX9 | 161.775 |
| WX4 | 162.425 | WX10 | 161.750 |
| WX5 | 162.450 | WX11 | 162.000 |
| WX6 | 162.500 | | |

(14)

(15)