


Size: 150 x 120 mm

UL Listed Solekick 5000 mAh MagClick 15W

Wireless Power Bank with Stand

Model: AB0583

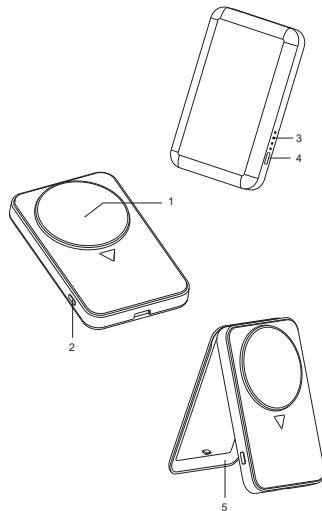

Features:

- 1. Wireless Charging Surface
- 2. ON/OFF Button
- 3. LED Indicator
- 4. Type-C Input and Output
- 5. Phone Holder

What's included:

- 1 x 5000mAh Power bank with Wireless Charger
- 1 x USB-A to Type-C Cable
- 1 x Instruction Manual

Tech Specifications

Type-c Input:DC5V 3A,DC9V 2.2A,DC12V 1.67A;
Type-c Output:DC5V 2.4A,DC9V 2.2A,DC12V 1.67A;
Wireless Output:DC5V 1A,DC9V 1.1A,DC12V 1.67A;
Battery/Cell capacity:19.25Wh,3.85V/5000mAh;
Product capacity(Type-c):13Wh,5V/2600mAh;
Product capacity(Wireless):11.5Wh,5V/2300mAh;;

LED Indicators

- Click on the switch to turn it on.
- Double click on the switch to turn it off (wireless charging and mobile power supply).
- 4 blue leds for mobile power supply power indicator.
- Red leds for wireless charging indicator.
- Wireless charging, always bright.
- Foreign matter, flicker.

INSTRUCTIONS:

Charging the Powerbank:

- Charge the powerbank fully before usage.
- Connect the provided charging cable to a power source and to the Type-C port on the powerbank(3).
- Once connected the LED Indicator will begin to flash when charging, once fully charged LED will turn solid.

Charging mobile phones and other electronic devices (like some laptops):

- Connect the charging cable to your mobile phone/device using the appropriate connector. LED Indicator will illuminate when charging.
- Remove the cable from your mobile device when it is fully charged.

Wireless Charging Function:

- Press the Powerbank ON/OFF button(1) to turn on the wireless charging function, LED indicator will glow green when in standby mode.
- Place wireless charging supported mobile device on the charging surface/suction pad, LED will glow red when device is charging.

Note: When wireless charging, if the LED indicator will flashes the device is either NOT a wireless charging device or there is an object between the device and charging surface interfering with the charging process.

SAFETY PRECAUTIONS:

WARNING:When using this product, basic precautions should always be followed:

1. Read all the instructions before use.
2. Never store or use this product in temperatures below 32°F (0°C) or above 115°F (45°C).
3. Do not overcharge your phone. The unit may become hot under excessive use. Remove your phone once it is fully charged. Never charge your phone for more than 7 hours at a time.
4. To reduce the risk of injury, close supervision is required when the product is used near children.
5. Do not expose the device to moisture.
6. Do not use the device in excess of its output rating. Overload outputs above the rating may result in a risk of injury.
7. Do not use the device if damaged or modified.
8. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
9. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
10. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
11. Do not expose the device to fire or excessive temperatures. Exposure to fire or temperatures above 104°F (40°C) may result in explosion.
12. To ensure product safety, ensure that qualified service professionals use only identical replacement parts.
13. Attachments on the back of your phone can impede the effectiveness of the wireless charger, and lead to overheating. Please remove attachments from the phone before charging on this device.

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement . The device can be used in portable exposure condition without restriction.