

I07无线蓝牙耳机 使用指南

进口蓝牙5.1芯片

兼容性：
兼容市面上所有带有蓝牙的手机(iOS/安卓/WindowsPhone)，平板电脑，笔记本等。

产品图示：

耳机使用：
为获得最佳的音频体验，请把左右耳机正确佩戴好，选择最合适自己耳朵的耳帽。佩戴正确后耳朵内感觉到紧贴、舒适和稳定。户外使用时，请将手机放在左耳同侧，中号耳帽会有更好的低音效果。

开机：

方法1：把耳机从充电仓取出即可开机，开机提示音“power on”

方法2：耳机在关闭状态下，长按两耳机的触摸键约3-5秒，LED灯闪烁1次，并伴有开机提示音“power on”

关机：
方法1：耳机放回充电仓内充电，耳机会自动充电关机。
方法2：长按耳机的触摸键大约3-5秒，工作指示灯蓝灯闪烁，并伴有关机提示音“power off”

注：开机后对耳不连接手机或者对耳主机与手机断开连接后，如无任何操作，约5分钟后将自动关机。

双耳使用模式：

方法1：把耳机从充电仓取出即可开机，开机提示音“power on”

方法2：打开手机蓝牙界面，搜索“107”选择配对。耳机连手机蓝牙以后LED灯灭。

注：耳机与主设备配对后(手机，智能手表，笔记本电脑等)，蓝牙开启状态下，耳机开机后自动回连最后连接的设备。

播放音乐：

方法1：单击触摸键，即可播放/暂停
方法2：长按触摸键1秒释放 (L上一曲，R下一曲)
方法3：单击触摸键两次 (L减音量，R加音量)

语音助手：

单击触摸键三次唤醒Siri语音指令

耳机通话：

- 当来电话时，单击耳机触摸键，即为接听电话，若长按即为拒听来电。
- 电话中，单击耳机触摸键，将挂断电话，恢复之前状态。
- 电话过程中，通过手机调节通话音量。
- 双耳模式下，可实现双耳通话。

注意：

- 主耳为副耳与手机连接中介，电量消耗大于副耳为正常现象。
- 耳机5分钟内未与任何设备连接，会自动进入关机状态。
- 苹果手机实时显示电压较低的耳机的电池电量。
- 建议在耳机长时间不使用情况下，请将其放在干燥通风区域并每隔两月充电一次。
- 建议定期用棉签轻轻擦拭弹针和铜柱，达到清洁的效果。切勿使用液体清洁耳机。

配件明细：

配件	原分析	解决方法
不开机	耳机电量不足/死机	对耳机进行充电/长按触控键3秒
充电无法连接	耳机未正确放置/弹针和铜柱有异物	调整耳机摆放位置/清洁弹针和铜柱
自动关机	耳机电量不足	对耳机进行充电
耳机有噪音	音量过大或者环境噪音大	调节音量或更换环境
耳机有噪音	外界干扰严重或距离耳机太远	更换地点靠近手机
对方声音小	耳机佩戴不正确或音量太小	调节耳机佩戴或音量大小
信号断断续续	外界干扰严重或电量低	选择无干扰环境或耳机充电
只有一耳有声音	耳机之间没有配对成功	放回充电仓

故障：

保修期：
本产品保修期为：自购买之日起12个月内

维修方式：
在产品保修期内，凡属产品本身质量引起的故障请用户此保修卡和有效购机凭证与售后人员联系享受免费服务，以下情况恕不维修：

1. 自行拆卸造成损坏的
2. 因外力外壳或其他部件有严重变形
3. 操作、存放不当而造成损坏
4. 因不可抗力造成故障或损坏
5. 其它与上述相似的情况

客户服务资料：

客户名称
联系电话
联系地址
产品型号
购买日期
经销商
维修日期

保修卡

保修期：
本产品保修期为：自购买之日起12个月内

维修方式：
在产品保修期内，凡属产品本身质量引起的故障请用户此保修卡和有效购机凭证与售后人员联系享受免费服务，以下情况恕不维修：

1. 自行拆卸造成损坏的
2. 因外力外壳或其他部件有严重变形
3. 操作、存放不当而造成损坏
4. 因不可抗力造成故障或损坏
5. 其它与上述相似的情况


客户服务资料：

客户名称
联系电话
联系地址
产品型号
购买日期
经销商
维修日期

I07 True Wireless Stereo Earphones


User manual

Imported Wireless 5.1 chips

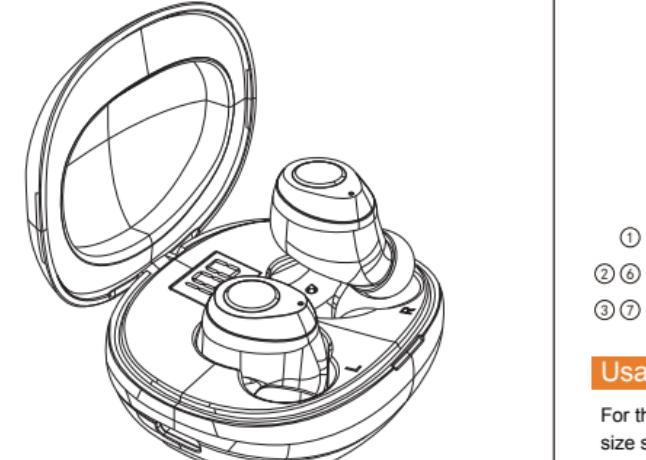

Compatibility:
This product is compatible with all Bluetooth-enabled mobile phones (iOS/Android/Windows Phone), tablet PCs, smart watches, notebooks and desktop computers.


Product details:

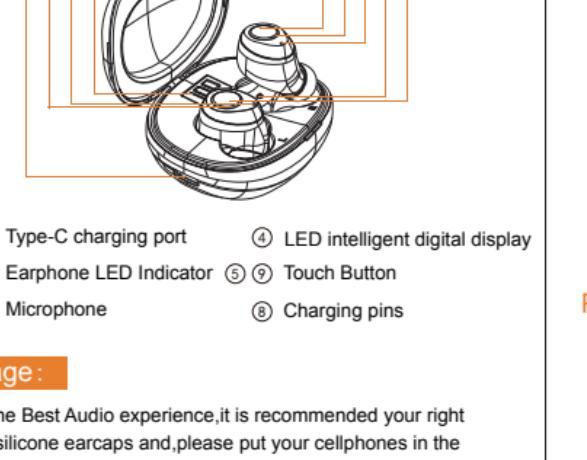

① Type-C charging port ④ LED intelligent digital display
 ② ⑥ Earphone LED Indicator ⑤ ⑨ Touch Button
 ③ ⑦ Microphone ⑧ Charging pins

Powering ON:

Method 1: Take out the earphones from the charging case, and they will "power on".

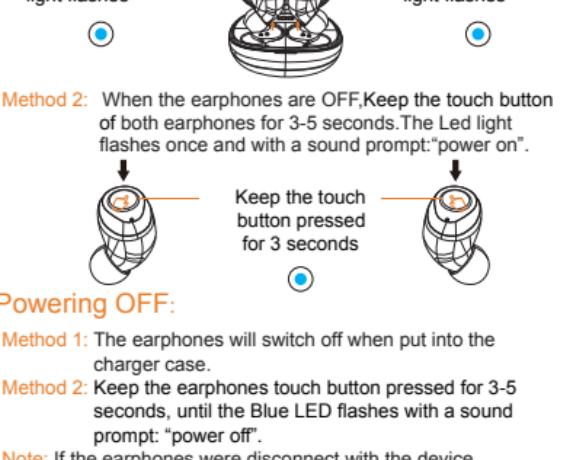

L earphone blue light flashes R earphone blue light flashes

Method 2: When the earphones are OFF, keep the touch button of both earphones for 3-5 seconds. The LED light flashes once and with a sound prompt: "power on".

Keep the touch button pressed for 3 seconds

Powering OFF:


Method 1: The earphones will switch off when put into the charger case.

Method 2: Keep the earphones touch button pressed for 3-5 seconds, until the Blue LED flashes with a sound prompt: "power off".


Note: If the earphones were disconnect with the device, the earphones will be power off automatically after 5mins.

Stereo Mode:

① Taking the earbuds out of the charging box, they will auto power on. After a few seconds, the left and right earbuds will auto connect each other. When the TWS earbuds are connected to each other, the LED light will flash quickly. If they connect successfully, the earbuds LED light will flash slowly.

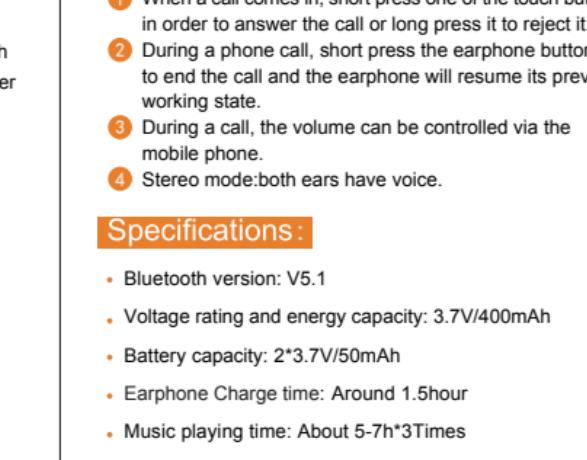

connected to each other, the LED light will flash quickly. If they connect successfully, the earbuds LED light will flash slowly.

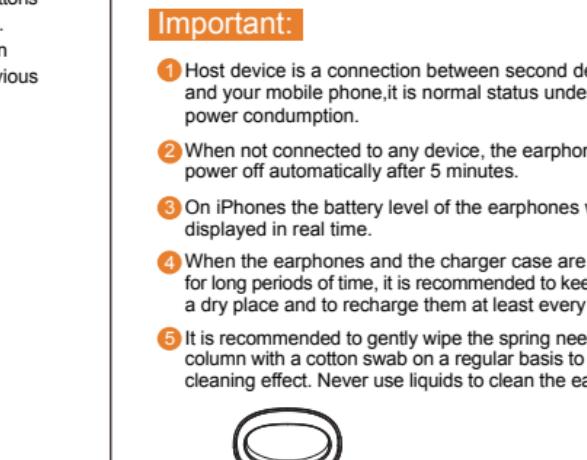

Blue light flashing

Voice Assistant:

Touch the button three times to activate the Siri voice assistant

Calling:

- When a call comes in, short press one of the touch buttons in order to answer the call or long press it to reject it.
- During a phone call, short press the earphone button to end the call and the earphone will resume its previous working state.
- During a call, the volume can be controlled via the mobile phone.
- Stereo mode: both ears have voice.

Important:

- Host device is a connection between second device and your mobile phone, it is normal status under high power consumption.
- When not connected to any device, the earphones will power off automatically after 5 minutes.
- On iPhones the battery level of the earphones will be displayed in real time.
- When the earphones and the charger case are not used for long periods of time, it is recommended to keep them in a dry place and to recharge them at least every 2 months.
- It is recommended to gently wipe the spring needle and copper column with a cotton swab on a regular basis to achieve a cleaning effect. Never use liquids to clean the earbuds.

Play Music:

- Touch the button once to Pause/Play.
- Keep press the touch button for 1 seconds and release it ("L" for previous song, "R" for next song)
- Touch the button twice to adjust the volume ("L" for decreasing, "R" for increasing)

Note: When the earbuds is not charging, you can use a cotton swab to gently wipe the spring needle and copper post.

Packing list:

Item	Quantity	Notes
Earbuds	2	Charging earbuds/Keep the earbuds touch button pressed for seconds
Charging case	1	Charging earbuds/Keep the earbuds touch button pressed for seconds
Ear caps*4(L/S)	4	Earbuds are not put in/Adjust earbuds position/Clean the spring needle and copper column
User manual	1	Earbuds are not put in/There are foreign objects in the spring needle and copper column

Fault:

Fault	Cause	Solutions
Can't power on	Earbuds are not put in/Earbuds are not charged	Charge the earbuds/Keep the earbuds touch button pressed for seconds
No charging indication	Earbuds are not put in/The earbuds are not put in/The earbuds are not put in/The earbuds are not put in	Adjust earbuds position/Clean the spring needle and copper column
Automatically shutdown	Earbuds are not put in	Charge the earbuds
The Earbuds have an echo	The volume is too high or the environment is too noisy	Adjust the volume or change position
The Earbuds are noisy	Outside environment interference or too far away from mobile phone	Change position or move closer to the mobile phone
Small sound	Wearing Earbuds incorrectly or the volume is too low	Adjust the Earbuds position or the mobile phone volume
Signal interference	Outside environment interference or too far away from mobile phone	Change to better environment or move closer to the mobile phone
Earbuds have no sound	Pairing unsuccessful between L and R Earbuds	Put the earbuds into the charging case

Warranty card:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCID:2A2Q27-I7

Because the earbuds is normal, the FCC ID number can only be printed on the charging box.

Customer service information:

Customer Name	
Customer Phone	
Customer Address	
Model Number	
Purchase Date	
Dealer	
Invoice number	