



ENGLISH

→

CONTENTS

READ BEFORE USE	01
IN THE BOX	02
PRODUCT OVERVIEW	02
Projector	02
Remote Control	03
QUICK START	04
1. Projector Installation	04
2. Power On/Off	05
3. Remote Control Pairing	05
4. Setup Wizard	06
5. Image Adjustment	06
PROJECTOR CONNECTION AND INPUT SOURCE	09
WIFI CONNECTION	09
GOOGLE ASSISTANT	10
Google Cast™	10
BT SPEAKER MODE	11
MORE SETTINGS	12
PROJECTION DISTANCE AND SIZE	13
SPECIFICATION	13
TROUBLESHOOTING GUIDE	14

READ BEFORE USE

Please read the **Product Instructions** carefully:
Thank you for purchasing and using this product.
For your safety and interests, please read the Product Instructions carefully before using the product.

About the Product Instructions:
The trademarks and names mentioned in the Product Instructions are the property of their respective owners.
All product instructions shown are for illustration purposes only. The actual product may vary due to product enhancements.
We shall not be liable for any personal injury, property damage, or other damages caused by the failure of the user to comply with the Product Instructions or precautions.

VANKYO reserves the right to interpret and modify the Product Instructions.

IN THE BOX

Projector	Remote (Batteries Not Included)	Power Adapter
HD Cable	User Manual	Quick Start

PRODUCT OVERVIEW

Projector

Remote Control

① Power: Press to power on / switch to standby mode / wake up / press and hold for 3s to power off
② Google Assistant: Press and hold and talk
③ User Profile: Press to see profile page
④ Confirm a selection / pause / resume
⑤ Back: Return to previous page
⑥ Focus Adjustment: Focus Adjustment
⑦ Mute: Mute

* Please install 2 AAA batteries (not included) into the remote control before use.

QUICK START

1. Projector Installation

Front Desktop: Projector is placed on a desk in front of the screen.
Rear Desktop: Projector is placed on a desk behind the screen.
Rear Ceiling: Projector is mounted on a ceiling behind the screen.
Front Ceiling: Projector is mounted on a ceiling in front of the screen.

2. Power On/Off

Take off the lens cover. Connect the power adapter to an outlet. Press the Power Button to turn on the projector; press and hold the Power Button for 3s to turn off the projector.

3. Remote Control Pairing

Turn on the projector and wait for the pairing process. Press the Power Button and the remote control simultaneously for 3s. The projector will display a pairing code. Press the pairing code on the remote control. Wait for the pairing to complete.

4. Setup Wizard

Follow the setup wizard to choose your preferred language, select the correct region, sign in with your Google account or set up basic TV.

5. Image Adjustment

Focus

1. Auto Focus: When the projector detects shaking/rapid movement, it will automatically adjust the image quality.

Tip: We recommended pairing the remote control with the projector via BT before use. If you skip this, you can go to Homepage > Dashboard > Settings > Remotes & Accessories to pair the remote control via BT later.

2. Power On/Off

Take off the lens cover. Connect the power adapter to an outlet. Press the Power Button to turn on the projector; press and hold the Power Button for 3s to turn off the projector.

3. Remote Control Pairing

Turn on the projector and wait for the pairing process. Press the Power Button and the remote control simultaneously for 3s. The projector will display a pairing code. Press the pairing code on the remote control. Wait for the pairing to complete.

4. Setup Wizard

Follow the setup wizard to choose your preferred language, select the correct region, sign in with your Google account or set up basic TV.

5. Image Adjustment

Focus

1. Auto Focus: When the projector detects shaking/rapid movement, it will automatically adjust the image quality.

2. Electric/Manual Focus

You can also press the Focus button on the remote or go to Homepage > Dashboard > Settings > Projector > Focus > Manual Focus to sharpen the image focus until the blurry image becomes clear.

Keystone Correction

1. Auto Keystone Correction: When the projector detects shaking/rapid movement, it will automatically correct the keystone distortion.

2. Manual Keystone Correction: Go to Homepage > Dashboard > Settings > Projector > Image Correction > Manual Keystone Correction to manually correct the image shape by four points.

3. Intelligent Screen Fit

Go to Homepage > Dashboard > Settings > Projector > Image Correction > Fit to Screen and follow the on-screen instructions, enabling the projector to automatically adjust the projected image to fit the screen.

4. Intelligent Obstacle Avoidance

Go to Homepage > Dashboard > Settings > Projector > Image Correction > Advanced > Avoid Obstacles to enable the function. The projector will automatically adjust the projected image to avoid any obstacles on the projection surface.

5. Image Scaling

Go to Homepage > Dashboard > Settings > Projector > Image Correction > Zoom & Shift > Zoom to reduce or enlarge the image size.

6. Projector Connection and Input Source

Connect your device to the projector correctly, then select the right input source.

7. Google Assistant

Google TV is more helpful than ever. Use your voice to find movies, streaming apps, play music and control the TV. Ask Google Assistant to find a specific title, search by genre, or get personalized recommendations. Even get answers on screen, control smart home devices, and more. Press the Google Assistant button on the remote to get started.

8. Google Cast™

Google Cast is a platform that lets you stream your favorite entertainment from your phone, tablet or laptop right to your projector. Easily control your TV with apps you already know and love from your iPhone®, iPad®, Android™ phone or tablet, Mac® or Windows® laptop, or Chromebook.

2. Electric/Manual Focus

You can also press the Focus button on the remote or go to Homepage > Dashboard > Settings > Projector > Focus > Manual Focus to sharpen the image focus until the blurry image becomes clear.

Keystone Correction

1. Auto Keystone Correction: When the projector detects shaking/rapid movement, it will automatically correct the keystone distortion.

2. Manual Keystone Correction: Go to Homepage > Dashboard > Settings > Projector > Image Correction > Manual Keystone Correction to manually correct the image shape by four points.

3. Intelligent Screen Fit

Go to Homepage > Dashboard > Settings > Projector > Image Correction > Fit to Screen and follow the on-screen instructions, enabling the projector to automatically adjust the projected image to fit the screen.

4. Intelligent Obstacle Avoidance

Go to Homepage > Dashboard > Settings > Projector > Image Correction > Advanced > Avoid Obstacles to enable the function. The projector will automatically adjust the projected image to avoid any obstacles on the projection surface.

5. Image Scaling

Go to Homepage > Dashboard > Settings > Projector > Image Correction > Zoom & Shift > Zoom to reduce or enlarge the image size.

6. Projector Connection and Input Source

Connect your device to the projector correctly, then select the right input source.

7. Google Assistant

Google TV is more helpful than ever. Use your voice to find movies, streaming apps, play music and control the TV. Ask Google Assistant to find a specific title, search by genre, or get personalized recommendations. Even get answers on screen, control smart home devices, and more. Press the Google Assistant button on the remote to get started.

8. Google Cast™

Google Cast is a platform that lets you stream your favorite entertainment from your phone, tablet or laptop right to your projector. Easily control your TV with apps you already know and love from your iPhone®, iPad®, Android™ phone or tablet, Mac® or Windows® laptop, or Chromebook.

2. How to use the AirScreen App

You can mirror the entire screen from your device onto the projector screen.

① Ensure that both your device and the projector are connected to the same wireless network.
② Install AirScreen – AirPlay & Google Cast is available on your projector.
③ Open AirScreen app and follow the on-screen instructions to complete the process.

3. BT Speaker Mode

You can use this projector as a BT speaker by connecting your mobile device to it through a BT connection.

4. More Settings

1. Color Temperature: Go to Homepage > Dashboard > Settings > Display & Sounds > Picture > Color Temperature to select from Standard, Warm, Eye-care.
2. Reset: Go to Homepage > Dashboard > Settings > System > About > Reset to restore the projector to factory settings.
3. System & Product Info: Go to Homepage > Dashboard > Settings > System > About to check system & product information.

5. Projector Connection and Input Source

Connect your device to the projector correctly, then select the right input source.

6. Google Assistant

Google TV is more helpful than ever. Use your voice to find movies, streaming apps, play music and control the TV. Ask Google Assistant to find a specific title, search by genre, or get personalized recommendations. Even get answers on screen, control smart home devices, and more. Press the Google Assistant button on the remote to get started.

7. Google Cast™

Google Cast is a platform that lets you stream your favorite entertainment from your phone, tablet or laptop right to your projector. Easily control your TV with apps you already know and love from your iPhone®, iPad®, Android™ phone or tablet, Mac® or Windows® laptop, or Chromebook.

2. How to use the AirScreen App

You can mirror the entire screen from your device onto the projector screen.

① Ensure that both your device and the projector are connected to the same wireless network.
② Install AirScreen – AirPlay & Google Cast is available on your projector.
③ Open AirScreen app and follow the on-screen instructions to complete the process.

3. BT Speaker Mode

You can use this projector as a BT speaker by connecting your mobile device to it through a BT connection.

4. More Settings

1. Color Temperature: Go to Homepage > Dashboard > Settings > Display & Sounds > Picture > Color Temperature to select from Standard, Warm, Eye-care.
2. Reset: Go to Homepage > Dashboard > Settings > System > About > Reset to restore the projector to factory settings.
3. System & Product Info: Go to Homepage > Dashboard > Settings > System > About to check system & product information.

5. Projector Connection and Input Source

Connect your device to the projector correctly, then select the right input source.

6. Google Assistant

Google TV is more helpful than ever. Use your voice to find movies, streaming apps, play music and control the TV. Ask Google Assistant to find a specific title, search by genre, or get personalized recommendations. Even get answers on screen, control smart home devices, and more. Press the Google Assistant button on the remote to get started.

7. Google Cast™

Google Cast is a platform that lets you stream your favorite entertainment from your phone, tablet or laptop right to your projector. Easily control your TV with apps you already know and love from your iPhone®, iPad®, Android™ phone or tablet, Mac® or Windows® laptop, or Chromebook.

3. Non-rectangular Image

* Place the projector perpendicular to the screen/wall if keystone correction function is not used.
* Use the keystone correction function to adjust image shape.

4. Automatic keystone correction failure

* Make sure the adjustment sensor on the front of the projector is not blocked or smudged.
* Move the projector back and forth until the projector is in recommended projection distance.

5. Auto-focus failure

* Make sure the adjustment sensor on the front of the projector is not blocked or smudged.
* Move the projector back and forth until the projector is in recommended projection distance.

6. Projector overheating

* Make sure the heat sinks are installed correctly and not drained.
* Remove any obstructions between your projector and remote control.
* Ensure the remote control is successfully paired with projector via BT.
* Make sure no button is pressed or stuck and check if the power indicator is still on. If yes, please contact customer support or local service center.

7. Connect the BT devices

* Enter Homepage > Dashboard > Settings > Remotes & Accessories to check the BT device list, and connect the device.

8. Others

* Please feel free to contact us at support@ivankyo.com

Statement

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, Android, YouTube and Google Cast are trademarks of Google LLC.

Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

NETFLIX

Netflix is a trademark of Netflix, Inc.

FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

3. Non-rectangular Image

* Place the projector perpendicular to the screen/wall if keystone correction function is not used.
* Use the keystone correction function to adjust image shape.

4. Automatic keystone correction failure

* Make sure the adjustment sensor on the front of the projector is not blocked or smudged.
* Move the projector back and forth until the projector is in recommended projection distance.

5. Auto-focus failure

* Make sure the adjustment sensor on the front of the projector is not blocked or smudged.
* Move the projector back and forth until the projector is in recommended projection distance.

6. Projector overheating

* Make sure the heat sinks are installed correctly and not drained.
* Remove any obstructions between your projector and remote control.
* Ensure the remote control is successfully paired with projector via BT.
* Make sure no button is pressed or stuck and check if the power indicator is still on. If yes, please contact customer support or local service center.

7. Connect the BT devices

* Enter Homepage > Dashboard > Settings > Remotes & Accessories to check the BT device list, and connect the device.

8. Others

* Please feel free to contact us at support@ivankyo.com

Statement

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, Android, YouTube and Google Cast are trademarks of Google LLC.

Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

NETFLIX

Netflix is a trademark of Netflix, Inc.

FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.