

EOZ AIR True-Wireless-earbuds

EOZ Air

USER MANUAL

The **EOZ AIR** buds have no physical buttons but both have a **Touch Control Panel** on the outside housing that can be used to perform most basic functions.



POWER ON

- Take the buds out of the charging case (with the charging case unplugged), they will turn on and enter pairing mode automatically.
They'll connect to the last paired device if applicable. Otherwise go to the Bluetooth settings on your device and select "EOZ AIR"
- You can also manually turn them on with a single press on **both buds** for **3 seconds**.



POWER ON – LED turns solid Blue for about 2.5 seconds

POWER OFF

- Put the buds back into charging case, they will power off automatically.
- You can also manually turn them off by pressing on either the left **or** right **Touch Control Panel** for **3 seconds**. Both buds will turn off.



POWER OFF – LED turns solid Red for about 2.5 seconds

FIRST TIME PAIRING

First time pairing:

Take the buds off the charging case, they will enter the *EOZ pairing mode*. Go to Bluetooth settings on your device and select “EOZ AIR”

CONTROLS

Music:

- Play/ pause: While playing music, a quick and single press on the **Touch Control Panel** of the left bud will pause music. To play the music, single press on the **Touch Control Panel** of the left bud.
- Skip a song: Double press on the **Touch Control Panel** of the right bud
Previous song: Double press on the **Touch Control Panel** of the left bud

Call:

- Answer: A quick and single press on the **Touch Control Panel** on either bud will answer the call
- Hang off: A quick and single press on the **Touch Control Panel** on either bud will hang off the call
- Reject call: A 2-second-long-press on the **Touch Control Panel** on either bud will reject the call

Siri/Google assistant:

While connected to your smartphone, press three times on either bud to turn on Siri function.

CHARGING

The EOZ Air offer you 4 hours of playtime when fully charged. The Charge Case gives you 12 additional recharge cycles or 48 hours additional playtime.

Your buds will start charging as soon as you place them into the Charge Case and close the lid.

The left and right LED's will indicate the charging status

Red LED Solid = charging

No light = fully charged

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.