



1. Video doorbell device

2. Rechargeable battery *2pcs

3. USB Cable

4. Hang wall board

5. Screw & rubber expansion plug *2 sets

6. Stick screw *2 pcs

1. Light Sensor
2. Video Doorbell Lens
3. Indicator Light
4. Microphone
5. Doorbell Button
6. Built-in Speaker
7. Hang Wall Board (Attaching board on the wall with 2 long screws)
8. Reset Button
9. Micro USB (for charging battery)
10. Micro SD Card Slot
11. Battery Jar
12. Battery Cover
13. Screw Hole (Attaching the doorbell to the hang wall board with 2 short screws)

Install the battery & the micro SD memory card

Take out the hanging wall board and open the battery cover

Insert the micro SD card into the slot

Close the battery cover

The device would be powered on automatically as soon as the battery is connected to the device power wire.

Notes: The camera will enter the standby mode when it has been idle for more than 15 seconds.

Insert the batteries
as the directions marked on the housing.

1. Hold the reset button for about 3 seconds until you hear the voice prompt "System reset"
2. The blue indicator will start flashing, ready for connection


1. Keep the device in range of your router.
2. Make sure the device is placed close to the Wi-Fi router. If there has to be thick or insulated objects between the device and the Wi-Fi router, which may lead to weak Wi-Fi signal, please make sure the Wi-Fi signal is in good level before you start using the device.
3. Please contact the seller for assistance if there is any problem with the product and do not try to disassemble or repair the product without authority.
4. If it is a delicatized device with low power consumption design. Everytime the device is shutdown will work for few seconds. After that, the device will enter standby mode to save power.
5. You can set the work time in the app settings.
6. It is normal that the product body temperature goes up when the product is working.
4. Please do not short-circuit the product.

Connect the doorbell to an external power source via the supplied power cord. While in charging, you could see the charging status from the APP. If the user prefers to use a power adapter (the power adapter is not included), the specification for the power adaptor is 5V/1.5A.

- a) The doorbell will keep running, even power is switched off during charging
- b) Battery power status could be viewed on the App.

Before installation, please ensure that the installation place is covered by W6-FL.

1. Drill 2 holes on the wall.
2. Fit the rubber expansion plugs into the holes.
3. Fix the hang wall board to the wall with the 2 long screws.
4. Place the doorbell device on the hang wall board, then fix the hang wall board on the doorbell by the 2pcs of the short screws.

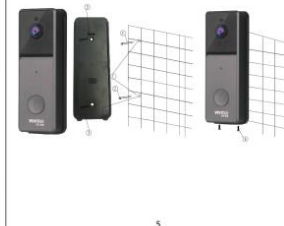

1. APP INSTALLATION

(1.) Scan the following QR codes or search for "UBox™" from the App store (for iOS devices) or Google Play Store (for Android smartphones) to download and install the app.

[illegible][illegible]

1 Enter to select your family or smart device location.

2 Turn on/off the push notification.


3 Settings: Sharing, Cloud storage, Delete the device.

4 Press to enter the preview section.

5 Press to add a smart device.

6 Account and value-added account management.

- Could set "Storage management, Flip screen, Environmental model, Sleep time, Power frequency, LED indicator, Device name"
- Could check the information of "Device name, Device ID, Model, FW version, Manufacturer, Check for the FW updates."
- Screenshot
- Playback: switch 'Micro SD memory' and 'Cloud storage'
- Take a video for the live view
- Microphone - Speak to the smart device side.
- Turn on/off the speaker

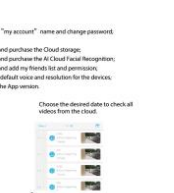

For technical support issues please visit our website at www.vivitar.com. You can find manuals, software and FAQ's on the website. Can't find what you are looking for? E-mail us at support@vivitar.com and one of our technical support team members will answer your questions. For phone support in the US please call 1-800-592-9541, in Australia call 1800-006-614. If you are calling from anywhere else, please visit www.vivitar.com for your local toll free number.

This warranty covers the original consumer purchaser only and is not transferable. Products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship will be repaired at no charge for parts or labor for a period of one year from the time of purchase.

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

When returning your defective product (postage pre-paid) for service, your package should include:

1. Copy of original bill of sale
2. A detailed written description of the problem.
3. Your return address and telephone number (Daytime)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or experienced radio/TV technician for help.

FCC Radiation Exposure Statement
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body

Keep manual and all relevant information for future reference.

