

Bluetooth Smart Watch

User Guide

Palred Online Technologies Limited

Model: Rhythm

FCC ID: 2AQ7WRHYTHM

Please read manual before use

1. Safety Warning

The information in this document won't be modifies or extended in accordance with any notice.

The watch should be charging 2 hours at least before use.

Security Code

The original code is 1122, this code can prevent your watch in use by others without your permission.

Please change the original code to insure your personal information safe.

2. Product details:

2.1 Products quick into

You can enter into next page by sliding screen to the left, and return to last page by sliding screen right; enter into the notice board after sliding from up to down. and return to main mean from down to up. It is will be in mistake for a click if drag distance to short.
e.

2.2 Product theme setting



Setting method:

Main menu: Theme setting, choose the theme if you like .

3. Product quick use

3.1 Bluetooth Connection and Sync function

3.1.1 From phone to watch

Phone setting—turn on the Bluetooth—search for devices, please click pair devices when found Smart Watch, and also choose “yes” in your mobile phone, paired done.

Please choose “sure” when there is phone book request, meanwhile

you'd better choose "no remind again", this is convenience when you connect next time (without remind again).

Notice:the Sync software can open in sync APP already installed and Accessibility. The mobile will show Bluetooth connected done after 2-5min; the watch will inform you the time of Sync with phone, then the Sync switched on. the message will sync to you watch when it incoming to mobile.

3.1.2 From watch to phone

BT Dialer on Smart Watch-search new device-found your Smart watch(such as S9500)-connect.

3.2 Base function

3.2.1 Bluetooth

Sets the Bluetooth status, turn on/off.

3.2.2 BT dialer

Paired devices from Smart Watch

3.2.3 Remote cameras

Use phone camera take photos, but remote by watch, its need switch on the camera of phone in advance.

3.2.4 Anti lost

Watch seek phone , or phone seek watch.

3.2.5 Setting

Notice:sets clocks display and theme in watch setting. In the security Settings, the safe code is 1122.

3.2.6 Pedometer

It can be adopted as a tool to avoid insufficient or excessive exercise by measuring calories or calories consumption based on collected data, such as number of steps, distance , speed , time .etc, to control exercise.

If you want return to main menu but keep pedometer during the exercise, please press the power button.

3.2.7 Sleep monitor

Show your sleep quality base on your sleep times.

3.2.8 Sedentary remind

You can set a time to remind you up to do some exercise, we suggest you this time could be one hours.

3.2.9 Quick response

It can download sync software when scan the quick response, if there is a new version need to update, please contact with our

service, our company will provide a new link for your download.

3.2.10 Smart search

Search information about watch

3.2.11 Alarm

3.2.12 Calendar

3.2.13 Calculator

3.2.14 Profiles

3.2.15 File manager

3.2.16 Audio player

Can play music from local or smart phone after connect with Bluetooth.

3.2.17 Theme setting

3.2.18 Camera

3.2.19 Video recorder

3.2.20 Image viewer

3.2.21 Video player

3.2.22 Sound recorder

4. Notice

4.1 Full charge before use, the charge time need 1-2 hours.

4.2 Use the accessories cable and charger, or your android phone accessories.

4.3 Bluetooth will disconnect when exceed the distances, after switch on the Anti lost, the smart search function can't be use before reconnect with Bluetooth.

4.4 Please reconnect with BT if it's disconnected occasionally (please Manual connect if the Bluetooth disconnect over 5 minutes). Please agree the phone book Sync otherwise there is no called phone book.

4.5 When playing the music, some of music's name can shown and some can't, it is normal, because android phone are difference.

5. Common trouble shooting

Please refer below key function for any problems with the watch, if the problem is still unsolved, please contact with our dealer or serviceman appointed.

5.1 Unable to switch on

The time of press the power button too short, please keep it more than 3 seconds.

Low power, please charge it.

5.2 Shut down automatically

Low power, please charge the watch.

5.3 Using time too short.

Battery is not full, please make sure it is full power (full charge about 2 hours at least).

5.4 Unable to charge.

The battery's life will be reduced after few years, please check if the battery are work.

Change a new charger if it is unworkable.

Please check the USB slot connecting good, if no, please try again.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction