

Trouble shooting and warning

Fault	Possible Cause	Solution
No sound	1. No input sound source. 2. Volume is too low.	1. Use a better music signal. 2. Adjust volume.
Distortion of sound	1. Volume too high. 2. Speaker may be damaged.	1. Turn down the volume. 2. If speaker is damaged, repair or replace it.
Karaoke does not work	1. Microphone plug is not fully inserted. 2. Microphone switch is not on. 3. Microphone volume knob is at the lowest position.	1. Plug microphone properly into the socket. 2. Turn on microphone switch. 3. Adjust microphone volume properly.
MP3 does not play	1. The song format in the U disc is incorrect. 2. Improper operation has caused a process disorder. 3. USB disc is disconnected.	1. Transform song format into Mp3 format. 2. Reboot the machine. 3. Insert USB disc properly.



1. DO NOT place objects on top of the device, as objects may scratch the device.



5. DO NOT use the device in the rain.



2. DO NOT expose the device to dirty or dusty environments.

6. Please check with your Local Authority or retailer for proper disposal of electronic products.



3. DO NOT insert any foreign objects into the device.

7. DO NOT disassemble the device. Only a certified service technician should perform repair.



4. DO NOT expose the device to strong magnetic or electrical field.

8. The device has apertures to disperse heat. DO NOT block the device ventilation, the device may become hot and malfunction as a result.

Illegal operation may cause personal injury, which could be fatal.


Illegal operation may cause damage to property.

For safety, we do not suggest to charge unit and use microphone together.

USER MANUAL


Please read this manual before operating your device and keep it for future reference

Control board functions

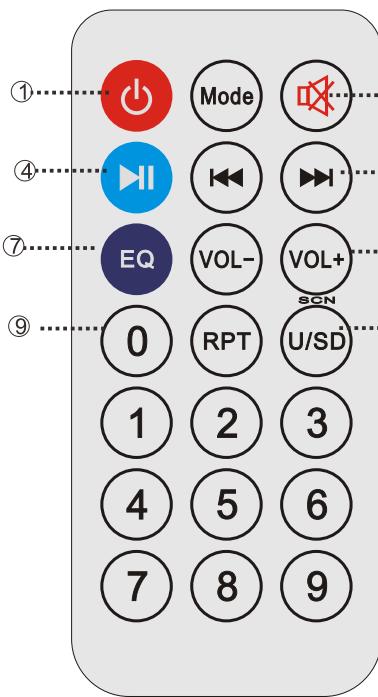

1. Standby button
2. Choose input signal
3. Mute button
4. Play/Stop button
5. Next song of USB/SD
6. Previous song of USB/SD
7. EQ solution
8. Increase speaker volume
9. Choose song number directly
10. Choose USB/SD signal directly
11. Decrease music volume
12. Repeat song

Control board functions

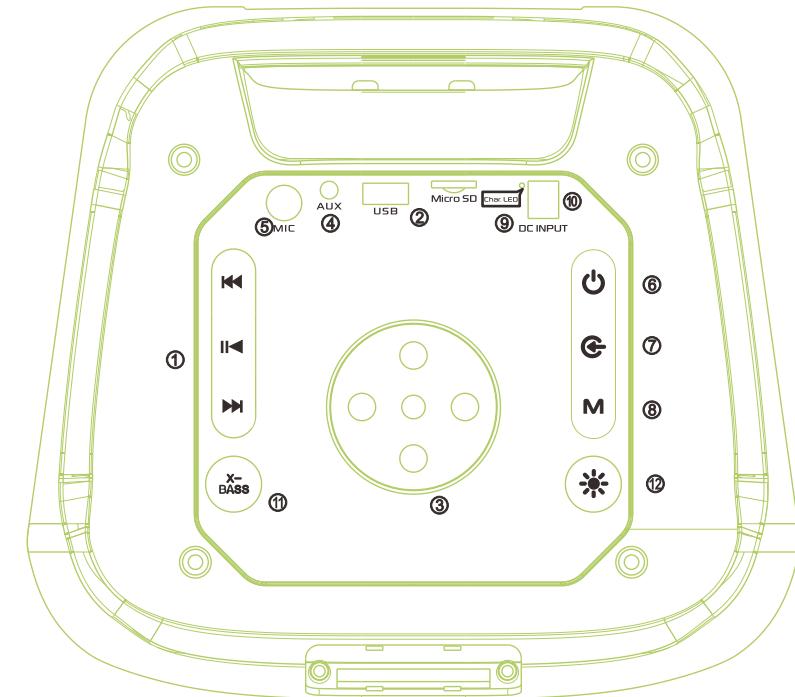

TWS-True wireless stereo setup

1. Turn on speaker A and select Bluetooth mode by pressing the button (7), screen display [bt] and connect it to your phone.
2. Switch on speaker B and select Bluetooth mode by press the button (7), display screen on [bt]
3. Then press button ► (1) for 3 seconds screen display will show [HOST]. This means that Unit A is start to pair with another unit automatically, and then you could enjoy TWS stereo music.
4. Press button ■ (1) is to remove mobile BT connective memo before, you can connect other device's BT.

MENU

Press the [MENU] button (8) to make the following settings:

- n is for Microphone Volume, you could adjust volume by knob
- E is for microphone echo volume, you could adjust echo volume by knob
- Eq is 3 different sound effect, you could change it by Last or Next button

1. USB/Micro SD/BT control board
2. USB and micro SD memory card input jack
3. Master volume control knob
4. 3.5MM AUX input jack
5. 6.5MM microphone input jack
6. Power switch button
7. Input signal
8. Menu button
9. Charge LED indicator, pls see LED display battery mark flash, after full charge, battery mark will not flash
10. DC 9V charge input jack
11. Increase bass effect button
12. LED mode and switch button

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment