


Instruction Manual

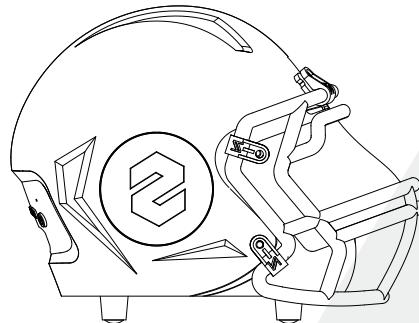

Model: BNS HT0500C


Read this manual thoroughly
before using and save it for future reference



Unit must be fully charged before use

Safety instructions

- Heed all warnings
- Follow all instructions
- The product should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should not be placed near the product.
- Do not use this device near water. To clean use a dry or slightly damp cloth.
- Do not place speaker on any wet surface.
- Do not allow children to play with the product.
- Do not cover the unit with table-cloths, curtains, etc. Place the unit where there is good ventilation.
- No naked flames sources, such as candles, should be placed on the product.
- Press the control buttons gently. Pressing them too hard can damage the player.
- Do not use the player in an extremely dry environment, as this can lead to static discharge which can damage the player.
- Avoid exposing the product to temperatures above 35 degrees; keep it out of direct sunlight.
- This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel should perform servicing.
- Do not subject this product to strong impacts.
- Do not drop the appliance. This may result in damage to the product.
- Do not mount this product on a wall or ceiling.
- Do not place the product near TV, speakers, wireless telephones and other objects that generate strong magnetic fields.
- The battery of the product is not user-replaceable.

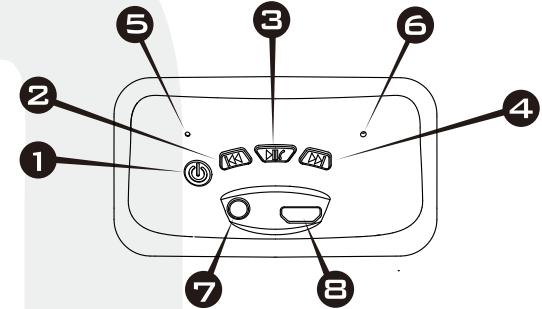

1. POWER ON/OFF
2. Volume down button / Previous Song
3. Play/Pause/TWS Connection
4. Volume up button / Next Song
5. Status LED
6. MIC
7. AUX IN
8. Micro USB 5V1A power charging

Operation instructions

Button Functions:

Power ON/OFF:

1. Hold the power button down for 3~4 seconds to power on or until you hear a sound prompt which will indicate that the speaker is now ready for pairing.

2. Long press for 3~4 seconds to POWER OFF

VOLUME DOWN BUTTON/PREVIOUS SONG

1. When the speaker is playing, long press the button to lower the volume.
2. Short press the button to play previous song
3. You may also adjust the volume using the volume controls on your smart device.

PLAY/PAUSE/TWS CONNECTION

PLAYING

1. Short press for play/pause music playing
2. Long press to enter TWS mode(Detail please refer PAIRING operation)

PAIRING

1. Long press to open device, and it will enter the pairing mode automatically
2. The blue LED will flash for waiting connection and keeps on while a connection is being established
3. The blue light will turn to always on after paired. If no connect or operation duration 2 minutes will shut down the speaker
4. Connect to the product by following the Bluetooth pairing method specific to your device.
5. Search and select model number BNS HT0500C on your Bluetooth device list.
6. Once paired successfully, the blue LED will keep on. A sound prompt will indicate that the device is connected.
7. TWS(True Wireless Stereo) needs two products(less than 10m distance)
8. Open two products and make sure both of them under pairing mode
9. Long press PLAY/PAUSE button in one of them, the one will entry TWS mode will auto search and connect to another one

10. When blue LED on the slave product turn to always on from flash mode, or you hear the prompt, TWS connection was successful

ANSWER/HANG UP CALL:

1. Press the button to answer a call when your device is connected to a phone via Bluetooth.
2. Press again to end/hang up the call.
3. Long press the button to reject a call.
4. For the best audio experience, ensure that you are facing the mic and talk within a 30cm distance from the mic.

VOLUME UP BUTTON/NEXT SONG

1. When the speaker is playing, long press the button to turn the volume up
2. Short press the button to play next song
3. You may also adjust the volume using the volume controls on your smart device.

AUX IN

The Speaker has a Aux in input. This allows you to connect your speaker to most devices by using a 3.5mm Aux in cable (included). This is useful for connecting devices that do not have Bluetooth capability.

CHARGING

1. Plug in the Micro USB cable (included) to the Micro USB port on the back of the product. And connect the cable to your 5V1A charging adapter (not included) or PC.
2. To achieve a full charge, it may take approximately 3~5 hours.
3. During charging, the RED Led indicator will turn on and will turn off when the battery is fully charged.
4. To achieve the best audio quality always ensure that the unit is fully charged.

TROUBLESHOOTING

Symptom	Possible problem and solution
Trouble pairing device with speaker	Check if the product is powered on and in pairing mode Check if the product is paired to another device. Turn them off to allow your connection to the product and then repeat the pairing function.
Sound is distorted output power is low	Check if the distance between the product and your Bluetooth device is within its 10 meter working range, check that there are no shielding or electromagnetic obstacles blocking the Bluetooth connection and check that the unit is fully charged.

PRODUCT SPECIFICATION

Driver	2" Fullrange speaker x2
Output	3W x2
Impedance	4Ω
Signal to Noise Ratio (S/N)	≥70 dB
Frequency Response	100Hz-20kHz
Wireless connection	Bluetooth 5.0(~10m reception)
External Charging	USB 2.0 (5V1A)
Build-in Battery Power	Total 2000 mAh lithium-ion cell
Battery Playtime @ Full Charged	3-5hours
Music volume at 50%	Up to 8 hours
Music volume at 100%	Up to 4 hours
Battery Charge time @ Unit OFF	2 hours
Low Voltage to Full	Up to 3 - 4 hours

Accessories:

Bluetooth Speaker	x1
Micro USB cable	x1
Instruction Manual	x1
Audio Cable	x1

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.