

SELFIE STICK INTEGRATED TRIPOD 一体三脚架自拍杆 (使用说明) 远程控制 REMOTE CONTROL	使用指南 USE GUIDE 夹扣 Clip 铝合金拉杆 Aluminium Rod 蓝牙控制器 Bluetooth Remote Control 参数 PARAMETER 名称: 一体三脚架自拍杆 规格: 185*29.2*42.6mm 重量: 140g 电池容量: 120mAh 材质: 铝合金拉杆 伸缩节数: 5 长度: 185~864±5mm Name: Integrated tripod Selfie Stick Size: 185*29.2*42.6mm Weight: 140g Battery capacity: 120mAh Material: Aluminium Rod Expansion joint number: five Length: 185~864±5mm	第一步: 检查自拍杆 Step 1: Check the selfie stick 轻轻的从自拍杆包装盒顶端打开, 安全取出本产品, 并仔细检查本产品外观是否完好, 配件是否齐全。 Gently open from the top of the box, safely pick up the product, and carefully check that the product is in good condition , Whether the accessories are complete. 第二步: 展开自拍杆 Step 2: Expand the selfie stick 一只手握住自拍杆底部三脚架手柄部分, 一只手握住手机夹持部分将其从扣合位拉出, 旋转至 90~180 度间的合适角度, 再将整个手机夹持部向上方拉出, 直至伸缩杆拉伸至合适长度。 Hold the handle of the tripod at the bottom of the selfie stick with one hand, hold the gripping part of the phone with one hand and pull it out of the snap-fit position, and rotate it to a suitable angle between 90 and 180 degrees, then turn the gripping part of the phone is pulled upward, until the telescopic rod is extended to a suitable length.	第三步: 取遥控器 Step three: Pick up the remote control 将遥控器从手柄支架套环上向上滑动, 取出遥控器, 如第一次使用遥控器, 请先将遥控器底部的纽扣电池绝缘片取出。 Slide the remote control up from the handle bracket ring and take out the remote control. If you use the remote control for the first time, first remove the insulation pad of button battery on the bottom of the remote control. 第四步: 蓝牙开关机及配对操作 Step four: Bluetooth switch and pairing operation 将手机固定在自拍杆的手机支架上, 长按遥控器的【拍照键】2~3秒, 至蓝灯闪烁并开启蓝牙配对模式, 打开手机蓝牙设置, 搜索并连接“S1”, 连接成功后蓝灯熄灭, 即可按下遥控器的【拍照键】进行拍照。长按【拍照键】3~5秒, 至蓝灯快速闪烁3次, 则蓝牙关闭。 Fix the phone on the phone holder of the selfie stick, press the [Camera button] of the remote control for 2~3 seconds, until the blue light flashes and turn on the Bluetooth pairing mode, open the Bluetooth settings of the phone, search and connect "S1", after the connection is successful When the blue light is off, you can press the [Camera button] of the remote control to take a photo. Press the [Camera button] for 3~5 seconds, and the blue light flashes 3 times quickly, then the Bluetooth is turned off. 第五步: 三脚架功能操作 Step five: Tripod operation 拉开自拍杆底部三脚架手柄部分, 并将伸缩杆第一节拉至合适位置, 即可使用支架功能进行拍照。 Tripod at the bottom of the selfie stick and pull the first section of the telescopic rod to the proper position to take a picture using the stand function.
横竖切换说明 Horizontal and vertical shooting switching instruction 按图中箭头方向, 将手机支架旋转至与自拍杆呈90度 Rotate the phone holder to 90 degrees with the selfie stick as indicated by the arrow in the figure.	自拍杆操作说明 Instructions for selfie stick operation 调整手机支架至合适角度 Adjust the phone holder to the right angle. 将伸缩杆拉至需要长度 Pull the Telescopic rod to the required length. 安装手机 Install mobile phone.	遥控器分离说明 Remote control separation instruction 按图中箭头方向, 将手机支架打开, 与自拍杆呈180度 Open the phone holder in the direction of the arrow in the picture, 180 degrees with the selfie stick. 取出手机支架夹扣, 防止手机滑落 Remove the phone holder clip to prevent the phone from falling.	温馨提示 WARM TIPS 1. 本产品遥控器电池采用CR1632纽扣电池, 当长期使用自拍杆造成电量不足时, 请及时更换电池, 以免影响产品正常使用, 通过打开遥控器底部电池盖, 更换电池, 充足的新的CR1632型号纽扣电池。 1. The remote control battery is CR1632 button battery. When the self-stick used for a long time, please replace the battery in time to avoid affecting the normal using of the product. Open the battery cover at the bottom of the remote control and replace the new sufficient power CR1632 button battery. 2. 本产品所使用的遥控器采用可分离式设计, 当需要将遥控器独立使用时, 请先用一只手握住自拍杆底部三脚架手柄部分, 再用另一只手从上方轻轻将遥控器从手柄支架套环上推出, 即可取出。按图中箭头方向, 将手机支架打开, 固定手机。 2. The product packaging picture is for reference only. The product (color and size) is subject to the actual product. The product package contains important information, please do not discard it. 3. 本产品包装图片仅供参考, 产品及包装内颜色及大小请以实物为准, 本产品包装内含重要信息, 请勿随意丢弃。 3. The product packaging picture is for reference only. The product (color and size) is subject to the actual product. The product package contains important information, please do not discard it. 4. 安卓手机拍照前请将音量键设置成快门键, 为了保护您的手机, 请保持三脚架在平稳状态下使用, 同时请防止其他外力使三脚架倾倒。 4. Only for android phone, first set the volume button to the shutter button before taking a photo. To protect your mobile phone, please keep the tripod in a stable state, and prevent other forces from topping the tripod.

FCC Warning This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver.	-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help. NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
--	--