



RHYA Smart Glasses User Manual

Accessories included in box:

 
 
RHYA glasses x1 , charging cable x1

Glasses cleaning cloth x1

Buggy Bagx1




RHYA is a smart sports glasses. Integrated with latest bluetooth V5.0 audio technology, supporting the APTX HD high-quality stereo codec, with the exclusive customized speaker design and acoustic adjustment, you can enjoy the extraordinary music and phone call while exercising, the surround voice can get you also to guarantee your safe.

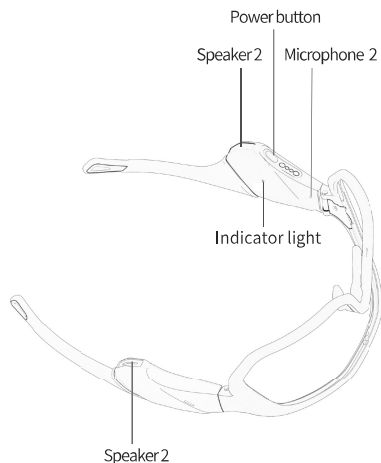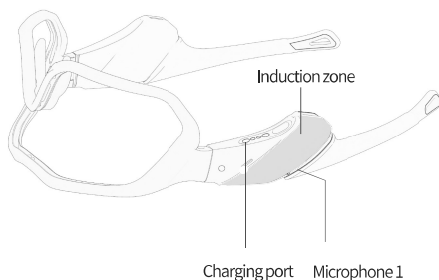

CHARGING

Please use the attached USB charging cable to charge the device, just magnetically adsorb the charging end to the charging port of the device, and plug another end into a USB adapter or other USB power source.

 The red light is on during charging, the green light is on when fully charged

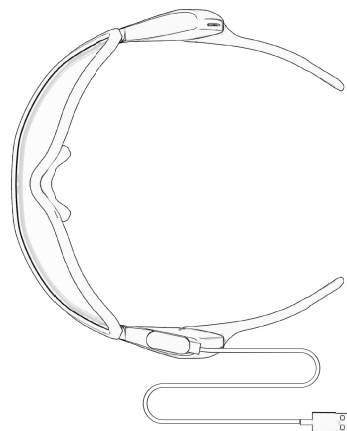

TROUBLE SHOOTING

Can not power on the device

- Normally just charge the device one time to reset it. When the charging indication led (red or green) is lit, remove the charge cable, press the power button to restart.
- Sometimes the battery is out of power, we need charge the device for a while, then restart again.

Other failures

- Press the power button for more than five seconds to power off the device, waiting for 30 seconds again, then restart the device.
- Charge the device to reset it. When the charging indication led (red or green) is lit, remove the charge cable, press the power button to restart.

APP

Scan the QR code below to download the "318Sports" APP, search and download it on Android or iOS application platform.



<https://www.fitechsports.com>



support@fitechsports.com

 


300 Delaware Avenue, Suite, 210-A,
Wilmington, DE 19801, County of New Castle

OPERATION

Power on

Press and hold the power button about two seconds, the green indicator light is on, then prompt "power on" from device, now the device is powered on.

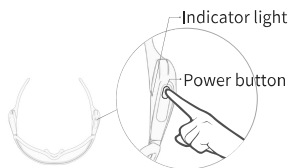

Pairing

Method 1: When initial power on the device, the green indicator flashes quickly, now the device is under pairing status.

Method 2: When the device is off, press down the power button five seconds, the green indicator flashes quickly, then prompt "pairing" from device, now the device is under pairing status.

Enable the bluetooth in the setup of mobile phone, search and select "Rhya-318Sports" in the found device lists, then follow the information prompted in the phone to complete the pairing.

Power off

Press and hold the power button for about five seconds until the red indicator light is on.

Automatic power off

The device will shut down automatically if disconnect with phone for five minutes, or keep motionless without operation for thirty minutes.

Wake up voice assistant

 


Press the power button twice to wake up the voice assistant.

Wake up Alexa

Press the power button 3 times to wake up the Alexa.

When low battery in the device, it will prompt "du-du-du" sound, please charge it in time.



PHONE CALL

Method 1: Click on the induction zone twice continually to answer the phone.

Method 1: Click on the induction zone twice continually to answer the phone.

Method 2: Press down the power button one time to answer the phone.

PHONE CALL REJECT

To reject the phone call, press down and hold the power button more than one second.

PHONE CALL OFF

When phone call is over, press down the power button one time to turn off the phone.

PHONE CALL OFF

When phone call is over, press down the power button one time to turn off the phone.

Music Play/Pause

- During music play, press down the power button one time to pause the music, press down the power button one more time to continue the play again.

- Make the device upside down as below instruction to pause the play also.



Next song

Click on the induction zone twice continually during music play, switch to next song.

Previous song

Click on the induction zone three times continually during music play, switch to the previous song.

TECHNOLOGY SPECIFICATION

Weight	50g
Work distance	10 m
Input	DC5.0V/0.5A
Work time	4-6h
Waterproof	IPX5
Work temperature	-10°C - 40°C
Phone system	Android 5.0 or above 5.0; iOS 10.0 or above 10.0



Handle carefully



Horizontally



Not store at
high temperature



Keep dry



Store at room
temperature



Recyclable

LENS MAINTENANCE

- Please use mild soap to clean the lenses.
- Use the microfiber lens cloth to wipe the lens softly.

PROHIBITION

- Do not use paper towels, napkins to wipe the lenses.
- Do not use fabric softener to wipe the lens.
- Do not spit on the lens.
- Do not place the glasses on a heat source.
- Do not use detergent products to clean the glasses.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for the compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CE FC RoHS

318