

CAC376 IM

IM Size 67 x 96mm, Open size: 335 x 192mm

正面



该文档是极速PDF编辑器生成,
如果想去掉该提示,请访问并下载:
<http://www.jisupdfeditor.com/>

CRAIG.

Owner's Manual

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Model: CAC376

5. Tap "Setting" on connected Tracker to enter tracker setting page to modify the "DEVICE PICTURE", "Name" and so on.




6. Alarm
• Tap "Click alarm" to turn on Anti-lost alarm on Tracker (continue "Beep" sound). Tap "Stop alarm" to turn off alarm on Tracker.
• Quick press the Multi-Function Button twice to turn on Anti-lost alarm on the smartphone, quick press the Multi-Function Button twice again or press "OK" on the smartphone to turn off alarm.
• If turn on "Alarm when Bluetooth Disconnected", it has "anti-lost alarm" on smartphone when:
a) Distance between Tracker and smartphone more than 75ft
b) Power off Tracker, Bluetooth disconnected.
It has continue alarm on smartphone to give you anti-lost alert. Tap "OK" on the smartphone to stop alarm and you can find the "Tracker final location" in "Lost History" section.



7. Tap "Camera" icon to turn on the smartphone camera, you could use Tracker as "selfie remote control" to take photo.



LOCATION OF CONTROLS

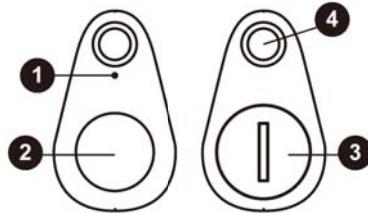


1. Red Indicator
2. Multi-Function Button
3. Battery Door
4. Hanging Hole

POWER SOURCE

BATTERY OPERATION:

The unit is operation by CR 2032 Lithium button cell, install or replace the battery as below:

 1. Open the battery door by slide it off. Install the supplied (or replace by new) CR 2032 Lithium button cell with polarity "+" face up as the figure below.
2. Replace the battery door.




NOTE: For first time use, please remove the insulation sheet.

BATTERY PRECAUTIONS:

1. Follow these Battery Precaution when using a battery in this device:
 1. Use only the size and type of battery specified.
 2. Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
 3. Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
 4. If the batteries in the device are consumed or the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
 5. Do not try to recharge the battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's instructions.)
 6. Do not dispose of battery in fire. Battery may explodes or leak.
 7. Clean the battery contacts and also those of the device prior to battery installation.
8. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burn in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

OPERATION

1. Download the "Craig BT Tracker" APP from the Google Play or Apple App Store into your mobile device then install it following the on screen instructions.
2. Press and hold the Multi-Function Button until hearing 2 "Beep" sounds to Power On the device.
3. Power on the smartphone and open the Bluetooth.
4. Open the "Craig BT Tracker" APP and then tap icon or hold and slide down the screen to search ALL available Trackers. After the search, tap "Unconnected" to connect the Tracker.

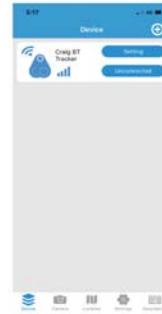


2

3

4

5

8. Tap "Location" icon to browse "Map" for the Tracker current location. Tap "Lost History" to see all "Tracker lost records" with date, time and lost location.

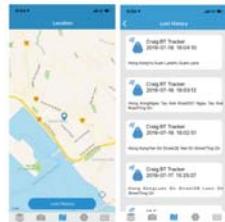

9. Tap "Settings" icon to turn on "WIFI Do not Disturb" or set "Silent Period".



10. Tap "Description" icon to get more operation details.
11. Press and hold the Multi-Function Button until hearing a short period of "Beep" sound to Power Off the device.

7

8

Normal operation after pairing:

1. Turn on the BT function of the smartphone.
2. Press and hold the Multi-Function Button until hearing 2 "Beep" sounds to Power On the device.
3. Open to the "Craig BT Tracker" APP as usual to operate the device.
4. Press and hold the Multi-Function Button until hearing a short period of "Beep" sound to Power Off the device.

SPECIFICATIONS:

Power Source: 1 x CR 2032 Lithium button cell (Included)

Bluetooth Version: 4.0

PACKAGE INCLUDES:

1 x Owner's Manual

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

LIMITED WARRANTY

Craig warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 90 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Craig's check or Money Order for \$3.00 for shipping and handling costs payable to Craig Electronics Inc. For consumers in Canada, please mail the unit to the company address. An order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover:
a) Ordinary adjustments as outlined in the Owner's Manual.
b) Damage to the product caused by the user.
c) Any cost incurred in shipping the product for repair.
d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

To Obtain Service on your Product
email: service@craigelectronics.com

Printed in China

CAC376 BUN_WC_E0TL1_B0US