

SIZE: 70x158mm

MAGNAVOX

PORTABLE SPEAKER with Color Changing Lights and Bluetooth® Wireless Technology

OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3790

1

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


LOCATION OF CONTROLS

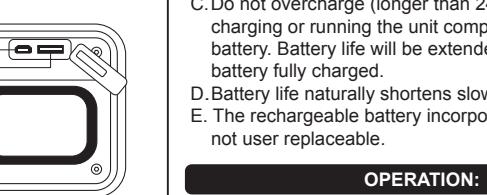

POWER SOURCE

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

1. Connect the small plug from the supplied USB Connection Cable to the DC 5V (Micro USB) Port on the unit.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
3. When charging, the Red Charging Indicator on the unit will illuminate.
4. When charging is complete, the Red Charging Indicator will turn off.

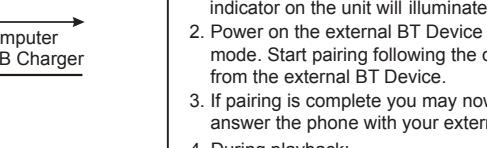

NOTES:

1. When charging, you can also play and listen to music at the same time.
2. Your battery will last longer if you follow these simple guidelines for caring and storing:
 - A. Before first time use, recharge the unit approximately 4 hours until the unit is fully charged.
 - B. Charge and store the unit within the temperature range of 5°C - 35°C (40°F - 95°F).

3

5°C - 35°C (40°F - 95°F).

C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit completely flat will damage battery. Battery life will be extended if you keep the battery fully charged.

D. Battery life naturally shortens slowly over time.

E. The rechargeable battery incorporated in this product is not user replaceable.

OPERATION:

General Operation:

1. Recharge the built-in Li-ion battery as previously instructed.
2. Press and hold the ⏹ Button on the unit to power on the unit. The blue indicator will illuminate and blink.
3. Press and release the ⏹ Button to switch between TF card and BT mode if you insert TF card.
4. Press and release the ⏹ Button twice quickly to switch to TWS mode, if you turn on two MMA3927 BT speakers at the same time, the two devices will connect automatically.

5. During playback:

- When a call is incoming during an active music session:
 - Press the ▶ Button then speak to the Microphone to answer the call. When your call is complete, press the ▶ Button to disconnect or end the phone call and resume to music playback.
 - Or, press and hold the ▶ Button approximately 1 second to decline the incoming phone call then resume to music playback.
- Quick press the ▶ Button twice to redial the last telephone number your cell phone called.

6. When finished listening, Press and hold the ⏹ Button to turn off the unit.

Notes:

- When the external BT Device searches for the unit, our model number "MMA3927" will appear on the display of external BT Device.

- If while pairing you are asked for a code, please try "0000" or "1234".


Normal operation after pairing:

1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed.
3. Wait a few seconds until the unit is automatically paired to the external BT Device.
4. After pairing is complete you may now play music and answer calls with your external BT Device.

BT Mode:

BT (Bluetooth) pairing:

To play the music in TF (Micro SD) Card:
1. Insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the unit as illustrated below:

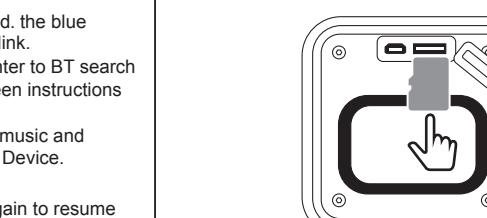

2

3

2. Enter to TF (Micro SD) Card mode as previously instructed and then the Music in the card will be played back automatically.

4

5. If the unit is paired to a Cell Phone:

- When a call is incoming during an active music session:
 - Press the ▶ Button then speak to the Microphone to answer the call. When your call is complete, press the ▶ Button to disconnect or end the phone call and resume to music playback.
 - Or, press and hold the ▶ Button approximately 1 second to decline the incoming phone call then resume to music playback.
- Quick press the ▶ Button twice to redial the last telephone number your cell phone called.

4. When finished listening, Press and hold the ⏹ Button to turn off the unit.

Notes:

- Up to 32 GB TF (Micro SD) Card supported.
- When inserting the TF (Micro SD) Card, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF (Micro SD) Card or the unit.
- You need to download the desired music in MP3 format into the TF (Micro SD) Card before insert into the unit.

 
Normal operation after pairing:

1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed.
3. Wait a few seconds until the unit is automatically paired to the external BT Device.
4. After pairing is complete you may now play music and answer calls with your external BT Device.

TF (Micro SD) Card:

BT (Bluetooth) pairing:

To play the music in TF (Micro SD) Card:
1. Insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the unit as illustrated below:



2. Enter to TF (Micro SD) Card mode as previously instructed and then the Music in the card will be played back automatically.

5

6

3. During playback:

- Press the ▶ Button to pause; press again to resume to normal playback.
- Press and release the + or - button repeatedly to adjust volume level as desired.
- Press and hold the + or - button to skip tracks

4. When finished listening, Press and hold the ⏹ Button to turn off the unit.

Notes:

- Press the ▶ Button to pause; press again to resume to normal playback.
- Press and release the + or - button repeatedly to adjust volume level as desired.
- Press and hold the + or - button to skip tracks


Normal operation after pairing:

1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed.
3. Wait a few seconds until the unit is automatically paired to the external BT Device.
4. After pairing is complete you may now play music and answer calls with your external BT Device.

TF (Micro SD) Card:

BT (Bluetooth) pairing:

To play the music in TF (Micro SD) Card:
1. Insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the unit as illustrated below:

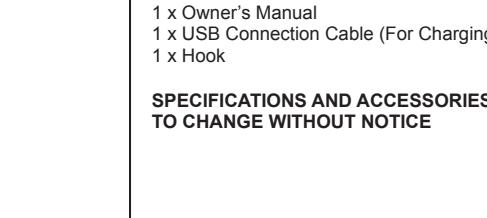

2. Enter to TF (Micro SD) Card mode as previously instructed and then the Music in the card will be played back automatically.

7

8

4. During playback:

- Press the ▶ Button to pause; press again to resume to normal playback.
- Press and release the + or - button repeatedly to adjust volume level as desired.
- Press and hold the + or - button to skip tracks

5. When finished listening, Press and hold the ⏹ Button to turn off the unit.

Notes:

- Press the ▶ Button to pause; press again to resume to normal playback.
- Press and release the + or - button repeatedly to adjust volume level as desired.
- Press and hold the + or - button to skip tracks


Normal operation after pairing:

1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed.
3. Wait a few seconds until the unit is automatically paired to the external BT Device.
4. After pairing is complete you may now play music and answer calls with your external BT Device.

TF (Micro SD) Card:

BT (Bluetooth) pairing:

To play the music in TF (Micro SD) Card:
1. Insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the unit as illustrated below:

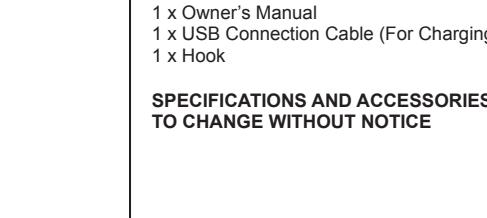

2. Enter to TF (Micro SD) Card mode as previously instructed and then the Music in the card will be played back automatically.

9

10

TROUBLESHOOTING:

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built-in battery drained	Recharge the battery as page 2-3
Can't power on	The unit is in power off mode	Power on the unit by press and hold the ⏹ Button
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume level by press and release the + Button repeatedly
Sound distortion	Volume level of paired/connected device is low level	Raise the volume level of the paired/connected device
Sound distortion	Volume level too high	Reduce the volume level by press and release the - Button repeatedly
BT not functioning	The external BT device had NOT paired to the unit	Pair the external BT device to the unit as page 3-4
BT not functioning	The external BT device too far from the unit	Place the external BT device close to the unit

LIMITED WARRANTY

Craig Electronics Inc. warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$7 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been:

- a) Used in a commercial application or rental.
- b) Damaged through misuse, negligence, or abuse.
- c) Modified or repaired by anyone other than an authorized Craig service center.
- d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover:
a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer.
b) Damage to equipment not properly connected to the product.
c) Any cost incurred in shipping the product for repair.
d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig Electronics Inc. be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc. and Craig Electronics Inc. is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email:magnavox@craigelectronics.com

Printed in China

MMA3790_WC_E0S1_B0US