

SIZE: 70x158mm

PORTABLE SPEAKER with Color Changing Lights and Bluetooth® Wireless Technology

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

MODEL: MMA3790

FCC NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC WARNING:

To assure continued operation, follow the attached installation instructions and use only shield cables when connecting to other devices. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

LOCATION OF CONTROLS

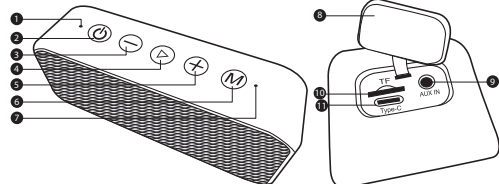


1. Indicators
2. Play/Pause button
3. Volume down button
4. Volume up button
5. Plus button
6. M button
7. Charging indicator
8. Rubber Cover
9. AUX IN Jack
10. TF (Micro SD) Card Slot
11. DC 5V (Type-c USB) Port (For charging only)

POWER SOURCE

The unit has a built-in Li-ion rechargeable battery, charge it before first time use or when it is drained as follows:

 1. Connect the small plug from the supplied USB Connection Cable to the DC 5V (Type C) Port on the unit.
2. Connect the full size USB Plug from the supplied USB Connection Cable to the USB Port on the Personal Computer or USB Charger (Computer and USB Charger not included).
3. When charging, the Red Charging Indicator on the unit will illuminate.
4. When charging is complete, the Red Charging Indicator will turn off.

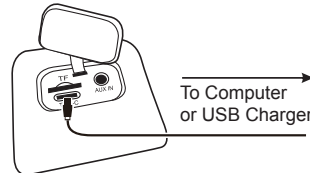

NOTES:

1. When charging, you can also play and listen to music at the same time.
2. Your battery will last longer if you follow these simple guidelines for caring and storing:
A. Before first time use, recharge the unit approximately 4 hours until the unit is fully charged.
B. Charge and store the unit within the temperature range of

5°C - 35°C (40°F - 95°F).

C. Do not overcharge (longer than 24 hours). Excessive charging or running the unit completely flat will damage battery. Battery life will be extended if you keep the battery fully charged.

D. Battery life naturally shortens slowly over time.

E. The rechargeable battery incorporated in this product is not user replaceable.

General Operation:

1. Recharge the built-in Li-ion battery as previously instructed.
2. Press and hold the Play/Pause button on the unit to power on the unit. The blue indicator will illuminate and blink.
3. Press and release the M button to switch among Bluetooth, TF (Micro SD) Card and AUX IN mode.
Note: If the AUX IN Plug, TF (Micro SD) Card have NOT been inserted into the unit, the corresponding selection will not be available.
4. Press and release the Play/Pause button twice quickly to switch to TWS mode. If you turn on two MMA3928 BT speakers at the same time, the two devices will connect automatically.
5. During playback:
 - Press the Play/Pause button to pause; press again to resume to normal playback.
 - Press and release the + or - button repeatedly to adjust volume level as desired.
 - Press and hold the + or - button to skip tracks
6. When finished listening, Press and hold the Play/Pause button to turn off the unit.

BT Mode:

BT (Bluetooth) pairing:

First time use or re-pairing the unit to a new BT Device, pair as follows:

1. Power on the unit as previously instructed. The blue indicator on the unit will illuminate and blink.
2. Power on the external BT Device and enter to BT search mode. Start pairing following the on screen instructions from the external BT Device.
3. If pairing is complete you may now play music and answer the phone with your external BT Device.
4. During playback:
 - Press the Play/Pause button to pause; press again to resume to normal playback.
 - Press and release the + or - button repeatedly to adjust volume level as desired.
 - Press and hold the + or - button to skip tracks

5. If the unit is paired to a Cell Phone:

- When a call is incoming during an active music session:
 - > Press the Play/Pause button then speak to the Microphone to answer the call. When your call is complete, press the Play/Pause button to disconnect or end the phone call and resume to music playback.
 - > Or, press and hold the Play/Pause button approximately 1 second to decline the incoming phone call then resume to music playback.
- Quick press the Play/Pause button twice to redial the last telephone number your cell phone called.

6. When finished listening, Press and hold the Play/Pause button to turn off the unit.

Notes:

- When the external BT Device searches for the unit, our model number "MMA3929" will appear on the display of external BT Device.
- If while pairing you are asked for a code, please try "0000" or "1234".

 
Normal operation after pairing:

1. Power on the external BT Device and enter to BT playback mode.
2. Power on the unit and enter to BT mode as previously instructed.
3. Wait a few seconds until the unit is automatically paired to the external BT Device.
4. After pairing is complete you may now play music and answer calls with your external BT Device.

TF (Micro SD) Card:

To play the music in TF (Micro SD) Card:

1. Insert the TF (Micro SD) Card (not included) into the TF (Micro SD) Card Slot on the unit as illustrated below:

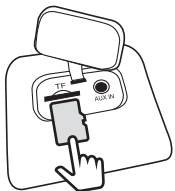

2. Switch to TF (Micro SD) Card mode as previously instructed and then the Music in the card will be played back automatically.
3. During playback:
 - Press the Play/Pause button to pause; press again to resume to normal playback.
 - Press and release the + or - button repeatedly to adjust volume level as desired.
 - Press and hold the + or - button to skip tracks

4. When finished listening, Press and hold the Play/Pause button to turn off the unit.


Notes:

- Up to 32 GB TF (Micro SD) Card supported.
- When inserting the TF (Micro SD) Card, make sure the direction you selected is correct. Never insert violently to avoid damaging the TF (Micro SD) Card or the unit.
- You need to download the desired music in MP3 format into the TF (Micro SD) Card before insert into the unit.

AUX IN:

Listen from an external Audio Player such as MP3 Player, Discman...etc.

 1. In power off mode, connect one end of the Audio Connection Cable (not included) to the AUX Out/Line Out/Phone Jack on the external Audio Player.
2. Connect the other end of the cable to the AUX IN Jack on the unit as illustrated below:

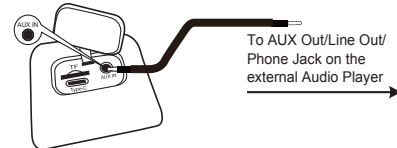

3. Power on the unit and switch to AUX IN mode as previously instructed.
4. During playback:
 - Press the Play/Pause button to pause; press again to resume to normal playback.
 - Press and release the + or - button repeatedly to adjust volume level as desired.
5. When finished listening, Press and hold the Play/Pause button to turn off the unit.

TROUBLESHOOTING:

Check the following before requesting service:

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Can't power on	Built-in battery drained	Recharge the battery as page 2-3
	The unit is in power off mode	Power on the unit by press and hold the Play/Pause button
No sound or sound weak	Volume of the unit was set to minimum position	Increase the volume level by press and release the + button repeatedly
	Volume level of paired/connected device is in low level	Rise the volume level of the paired/connected device
Sound distortion	Volume level too high	Reduce the volume level by press and release the - button repeatedly
	Volume level of the paired/connected device too high	Reduce the volume level of the paired/connected device
BT not functioning	The external BT device had NOT paired to the unit	Pair the external BT device to the unit as page 3-4
	The external BT device too far from the unit	Place the external BT device close to the unit

GENERAL SPECIFICATIONS:

Power Source	Built-in DC 3.7 V, 3000 mAh (11.1 WH) rechargeable Li-Ion Battery; recharge by DC 5V through Type C Port
Impedance of Speakers	4 ohm
Audio Power	10W X 2
BT Version	5.0
BT Operation Distance	Up to 32 Feet in open area

PACKAGE INCLUDES :

- 1 x Owner's Manual
- 1 x USB to Type C Connection Cable (For Charging only)

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

LIMITED WARRANTY

Craig Electronics Inc. warrants this product to be free from manufacturing defects in material and workmanship under normal use for a period of 180 days from date of purchase. If service is required, please return the product to the store where it was purchased for exchange; or, pack the unit in the original packing material with all accessories if applicable, a copy of your sales receipt and a Cashier's check or Money Order for \$7 (to cover shipping and handling costs) payable to Craig Electronics Inc. For consumers in Canada, please make sure that the cashier check or money order is redeemable through a U.S. bank. Ship your product freight pre-paid. Your unit will be repaired, replaced or if the unit can not be repaired or replaced, a refund will be forwarded to you within four weeks of receipt of your unit. Please ship your unit to:

Craig Electronics Inc.
1160 NW 163 Drive
Miami, FL 33169

This warranty is void if the product has been: a) Used in a commercial application or rental. b) Damaged through misuse, negligence, or abuse. c) Modified or repaired by anyone other than an authorized Craig service center. d) Damaged because it is improperly connected to any other equipment.

Note: This warranty does not cover: a) Ordinary adjustments as outlined in the Owner's Manual which can be performed by the customer. b) Damage to equipment not properly connected to the product. c) Any cost incurred in shipping the product for repair. d) Damage to the product not used in the USA.

This warranty is not transferable and only applies to the original purchase. Any implied warranties, including the warranty of merchantability, are limited in duration to the period of this expressed warranty and no warranty whether expressed or implied shall apply to the product thereafter.

Under no circumstance shall Craig Electronics Inc. be liable for any loss or consequential damage arising out of the use of this product. This warranty gives specific legal rights. However, you may have other rights which may vary from state to state. Some states do not allow limitations on implied warranties or exclusion of consequential damage. Therefore, these restrictions may not apply to you.

This product has been manufactured by and is sold under the responsibility of Craig Electronics Inc. and Craig Electronics Inc. is the warrantor in relation to this product. MAGNAVOX and SMART. VERY SMART are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.

To Obtain Service on your Product
email: magnavox@craigelectronics.com

Printed in China

MMA3790_WC_E0S11_B0US