


Front

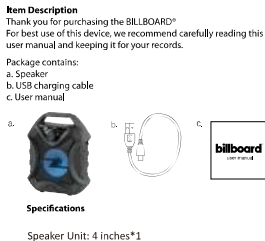


Speaker Unit: 4 inches*1

BB2652

Buttons & Functions

- 1.Mode (LINE IN, MP3, FM, BT)
2. Previous song (FM: Previous channel)
- 3.Play/ Pause (FM: Automatic Search)
4. Next song (FM: The next channel)
- 5.USB socket
- 6.Charging socket (DC 5V)
- 7.Audio input socket
- 8.Micro SD card socket
- 9.Knob (Power Switch and Volume Control)
- 10.Power indicator

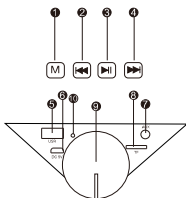

Connecting to Bluetooth

- The product is on with AUX mode. Click the "MODE" button, once you hear ding-dong sound. BT mode is on.
- Turn on your smartphone's BT and search for the device. Then you will read Model on smartphone.
- Connect with Model. Click the "ok" on smartphone.
- "Connected" message will appear. Connection is successful.
(play and select music with smartphone when connected through BT).

Micro SD Functon

- Press "MODE" button on the product to switch to TF mode or just insert a Micro SD card. TF mode will start automatically.
- Press "Play/Pause" button to continue and play/pause music.
- Press "NEXT" button to go to next song.
- Press "PREVIOUS" to go back to previous song.

USB Function

- Press "MODE" button on the product to switch to USB mode or just insert a USB flash drive. USB mode will start automatically.
- Press "PLAY/PAUSE" to continue/play/pause music.
- Press "NEXT" button to go to next song.

FM Radio Function

- Press "MODE" on the product to switch to FM mode. Radio will start automatically.
- Press "PLAY/PAUSE" button for a second to enter into FM channel searching.
- Press "NEXT" button to go to next frequency.
- Press "PREVIOUS" to go back to previous frequency.

TWS CONNECTION

- TWS CONNECTION**
- (1) **TWS connection:** TWS Connection is only for two speakers, can not support quantity over 2 PCs. When the two Speakers, press the **MODE** button to switch to **BLUETOOTH** mode, and the word **“BLUE”** on the LED screen will flash.
 - (2) At the first time, please press the **Play/Pause (TWS)** button for 3 seconds. Then two speakers will connect together.
 - (3) Connect the phone: Open the phone **Bluetooth** settings, Search and Connect the main device **Bluetooth Name “BB-BT-E8”**.
 - (4) Select music from phone and enjoy TWS playing in pairs with two Speakers.
 - (5) Exit TWS: Long press the **Play/Pause (TWS)** button for 3 seconds to exit the TWS function.

[Back](#)

Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery will be recharged and discharged hundreds of times, but it will eventually wear out.

Do not leave a fully charged battery connected to a charger, overcharging may shorten its life. If unused, a fully charged battery will lose its charge over time.

Never use any device that is damaged.

Leaving the charger in hot or cold places will reduce the capacity and lifetime of the battery. Discharge the battery at temperatures between 32°F and 20°C (0°C and 77°F).

A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of all batteries according to local regulations. Please recycle. Do not dispose as household waste.

All other trademarks are property of their respective companies.
Phuoc Anh is a registered trademark of Phuoc Anh Co., Ltd.



may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening music.



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR SPEAKER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

SPEAKER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.
Your speaker has an internal rechargeable battery. Improper usage may result in the speaker becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:

1. Do not assemble, throw away or damage the speaker.

1. Do not assemble, throw away or damage the speaker.
 2. Store the speaker in a dry place, keeping it away from damp corrosive materials and environments with high humidity.
 3. Keep the speaker away from direct sunlight, fire, and high voltage equipment.
 4. Do not store the speaker inside a car during hot weather. Remember a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200F.
 5. The speaker is not toys. Please keep it out of the reach of young children. Please do not discard this rechargeable device as trash.
- Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 1-877-253-2925 or online at call2recycle.org for a battery recycling drop off location.

Charging the battery

Charging the battery
This device has an internal, rechargeable battery.

1. Plug the charger cable into the speaker.
2. Connect the charger to a USB power source. The red indicator light will display during charging. Charging does not start, disconnect the charger plug it in again, and retry. Charging the battery fully may take up to 3 hours.
3. When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the USB power source and the speaker. The fully charged battery has power for up to 4-5 hours of music time or up to 240 hours of standby time. However, the talk and standby times may vary when used with different devices, settings, and environments.

ECG Information

Operation Instructions: This device complies with Part 15 of the FCC rules. The operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement:

This device complies with the requirements of the FCC for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if installed or used in an inappropriate manner, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to other electronic equipment, you may be required to correct the interference at no charge to you. Interference can be determined by turning the equipment off and on; the user is encouraged to attempt to determine the source of the interference by this method. Repeat or reduce the receiving antenna.

- Increase the separation between the equipment and receiver.
- Reposition or change the orientation of the receiving antenna to which the receiver is connected.
- Reposition or change the orientation of the equipment to which the receiver is connected.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ECC ID: 2A0BF-BB3652

Warning :

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

Limited Warranty

ESI Cases and Accessories warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser, will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect or replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty **does not apply** to any appearance items of the product nor to the additional excluded items set forth below nor to any product the exterior of which has been damaged or defaced which has been subjected to misuse, abnormal service or handling or which has been subjected to use in excess of the intended or intended commercial use. This warranty is in addition to any other warranties that may be in effect. **ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF PURCHASE TO THE DATE OF THE FIRST BELT OR BELT AND BRACE ADJUSTMENT.** This warranty shall not remain in effect beyond the first adjustment. **NO WARRANTY** shall be made by the seller or any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the basis of any other basis.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases and Accessories and shall be the sole and exclusive remedy available to the purchaser concerning defects, in the manner and for the period of time described herein, shall constitute the entire agreement of all duties and responsibilities of ESI Cases and Accessories to the purchaser with respect to the product and shall constitute the full and complete satisfaction of all claims, contract negligence, strict liability or otherwise. In no event shall ESI Cases and Accessories be liable or in any way responsible, for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY IS GIVEN WITHOUT ANY OTHER SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Technical Support
techsupport@esicellular.com or call (212) 883-8838

Send device with the product to:
ESi Cases and Accessories
44 East 32nd Street, 6th floor, New York, New York 10016
*Enclose proof of purchase and \$11.95 for Shipping and Handling.