 


Front

billboard®
WIRELESS PILL SPEAKER

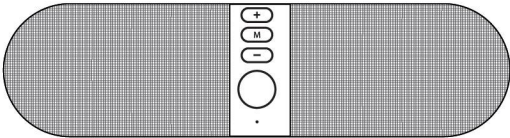 


WIRELESS Speaker
USER MANUAL



Wireless Speaker
Thank you for purchasing the Billboard® Wireless Speaker. For best use of this device we recommend carefully reading this user manual and keeping it for your records

Package contains
a. Wireless Speaker
b. USB charging cable
c. 3.5mm to 3.5mm audio cable

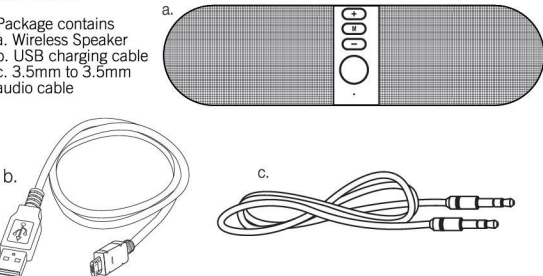


©2020 Billboard IP Holdings, LLC. All rights reserved.
Billboard®, the Billboard logo, HOT 100 and associated Characters, trademarks, and design elements are owned and licensed by Billboard IP Holdings, LLC.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc.

1. Guide


■ introduction

 FRONT OF SPEAKER



- + VOLUME UP / NEXT SONG
- M MODE
- VOLUME DOWN / LAST SONG
- PLAY / PAUSE ANSWER / END CALLS LED INDICATOR
- Microphone

 BACK OF SPEAKER

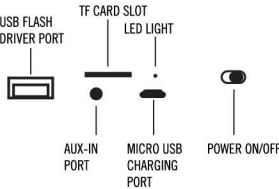

2. Instruction

■ Key Function

- ON OFF
 - M
 - +
 -
 - USB
 - TF (Micro SD) Card
 - Auxiliary Input
- 1) Turn on the speaker. Switch the Power ON/OFF button to the left. To turn off the speaker. Switch off the Power ON/OFF button to the right.
- 2) To switch between Bluetooth and other modes, short press the Mode button.
- 3) Activate the Bluetooth® feature on your phone, and set the phone to search for wireless devices (See the User Manual of your device) The speaker will show on your device as BB-BT-PILL (if pass code is requested enter 0000) The voice prompt will tell you if the pairing is successful. If no device is successfully paired, the speaker will turn off in approximately 5 minutes.
- 4) Short press the Play/Pause button to play your device's music.
- 5) When the speaker is paired to your mobile device, press Answer/End Calls button to answer the call and press again to end call, Press and hold Answer/End Calls button to reject calls. Press the Answer/End Calls button twice quickly to redial the last number.
- 6) Short press the "+" button to go to the next song or long press the "+" button to turn the volume up.
- 7) Short press the "-" button to go to the previous song or long press the "-" button to turn the volume down.
- FM Radio Mode**
Plug in the Micro USB cable into the Micro USB port as an antenna. Short press the Mode button to go to FM Radio mode. After entered into FM Radio mode, short press the Play/Pause button for searching an available station. Press the + or - button to go to the next frequency.

TF (Micro SD) Card
Insert TF (Micro SD) card into the TF card slot, the speaker will switch to SD Card mode automatically and play the music from TF (Micro SD) card.

USB Audio
Insert USB drive to the USB slot, the speaker will switch to USB Audio model automatically and play the music from USB drive.

Auxiliary Input
Connect the 3.5mm plug of the included audio cable to the AUX-IN port and the other end of 3.5mm plug to your music device. A voice prompt will indicate that the connection is successfully. Long press "+" button to turn the volume up and long press "-" button to turn the volume down. In the Auxiliary input mode, you cannot play/pause or change tracks on the speaker, you'll need to control that on your device.

Back

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement
This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

Warning :

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.

Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time. Never use any charger that is damaged.

Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.



BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR WIRELESS SPEAKER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Your WIRELESS SPEAKER has an internal rechargeable battery. Improper usage may result in the WIRELESS SPEAKER becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:

- 1. Do not assemble, throw away or damage the WIRELESS SPEAKER.
- 2. Store the WIRELESS SPEAKER in a dry place, keeping it away from damp corrosive materials and environments such as salt air.
- 3. Keep the WIRELESS SPEAKER away from direct sunlight, fire, and high voltage equipment. Do not store the WIRELESS SPEAKER inside a car during hot weather. Remember a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200F.
- 4. The WIRELESS SPEAKER are not toys. Please keep it out of the reach of young children.

Please do not discard this rechargeable device as trash. Consult your local waste collection agency for proper disposal or recycling methods. You may also contact "Call2Recycle" at 877-273-2925 or online at "call2Recycle.org" for a battery recycling drop off location near you.

Charging the battery

This device has an internal, rechargeable battery.

- 1. Plug the charger cable into the WIRELESS SPEAKER.
- 2. Connect the charger to a USB power source. The red indicator light will display during charging. Charging does not start, disconnect the charger plug it in again, and retry. Charging the battery fully may take up to 3 hours.
- 3. When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the USB power source and the WIRELESS SPEAKER. The fully charged battery has power for up to 4-5 hours of music time or up to 240 hours of standby time. However, the talk and standby times may vary when used with different devices, settings, and environments.

LIMITED WARRANTY

ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

This warranty does not cover cables that have become frayed, cracked, or broken from use. The user should immediately replace this, or any, charge cable that has become frayed, cracked, or broken, as it may constitute a serious safety risk, including electrocution, if it is continued to be used.

Send product with \$11.95 shipping & handling fee to:
Manufactured By ESI Cases & Accessories 44 East 32nd Street New York, NY 10016
Tech Support : (212) 883-8838 <https://esicellular.com>
TechSupport@ESICellular.com