

PRODUCT OPERATION

BASIC FUNCTIONS

■ Feminine Wash

Press "Feminine Wash" button.

The water is sprayed from the nozzle to wash the private part of female. Pressing the button again will change the state into oscillating cleaning and expand range.

■ Stop

Press "Stop" to Stop.

※ Dryer stops automatically after 4mins.

■ Spray Strength



Press "+" to turn up,press "-" to turn down spray strength.

Press button to switch the display of light and choose an appropriate one.

■ Posterior Wash

Press "Posterior Wash" button.

The water is sprayed from the nozzle to wash the posterior. Pressing the button again will change the state into oscillating cleaning and expand range.

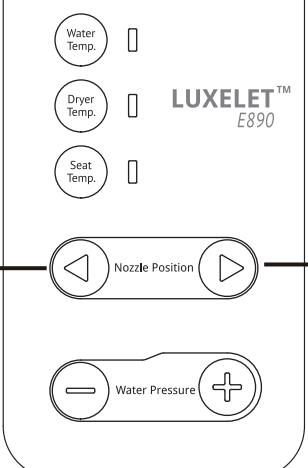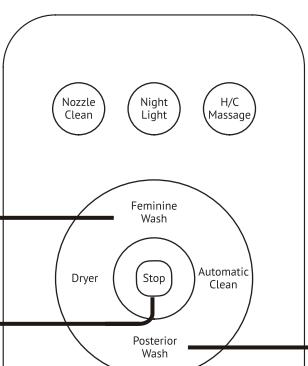

■ Nozzle position

Press "nozzle position" button.

Wand position can move forth and back by 5 gears.

PRODUCT OPERATION

BASIC FUNCTIONS (cont.)


■ Water Temp

Press "Water Temp" button.

Press the button once, the current temperature will be shown. Press the button again, then you can switch the temperature and choose an appropriate one.

※ Switch the display of 「OFF」、「High」、「Middle」、「Low」.

※ Default drying temperature is middle level.

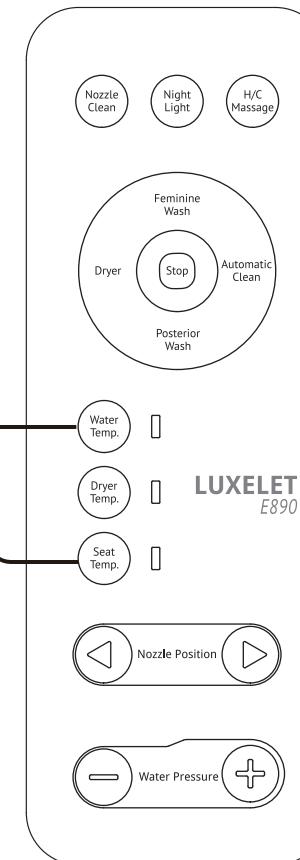

■ Seat Temp

Press "Seat Temp" button.

Press the button once, the current temperature will be shown. Press the button again, then you can switch the temperature and choose an appropriate one.

※ Switch the display of 「OFF」、「High」、「Middle」、「Low」.


※ Default drying temperature is middle level.

⚠ WARNING

Operation is subject to the condition that this device does not cause harmful interference

PRODUCT OPERATION

DRYER

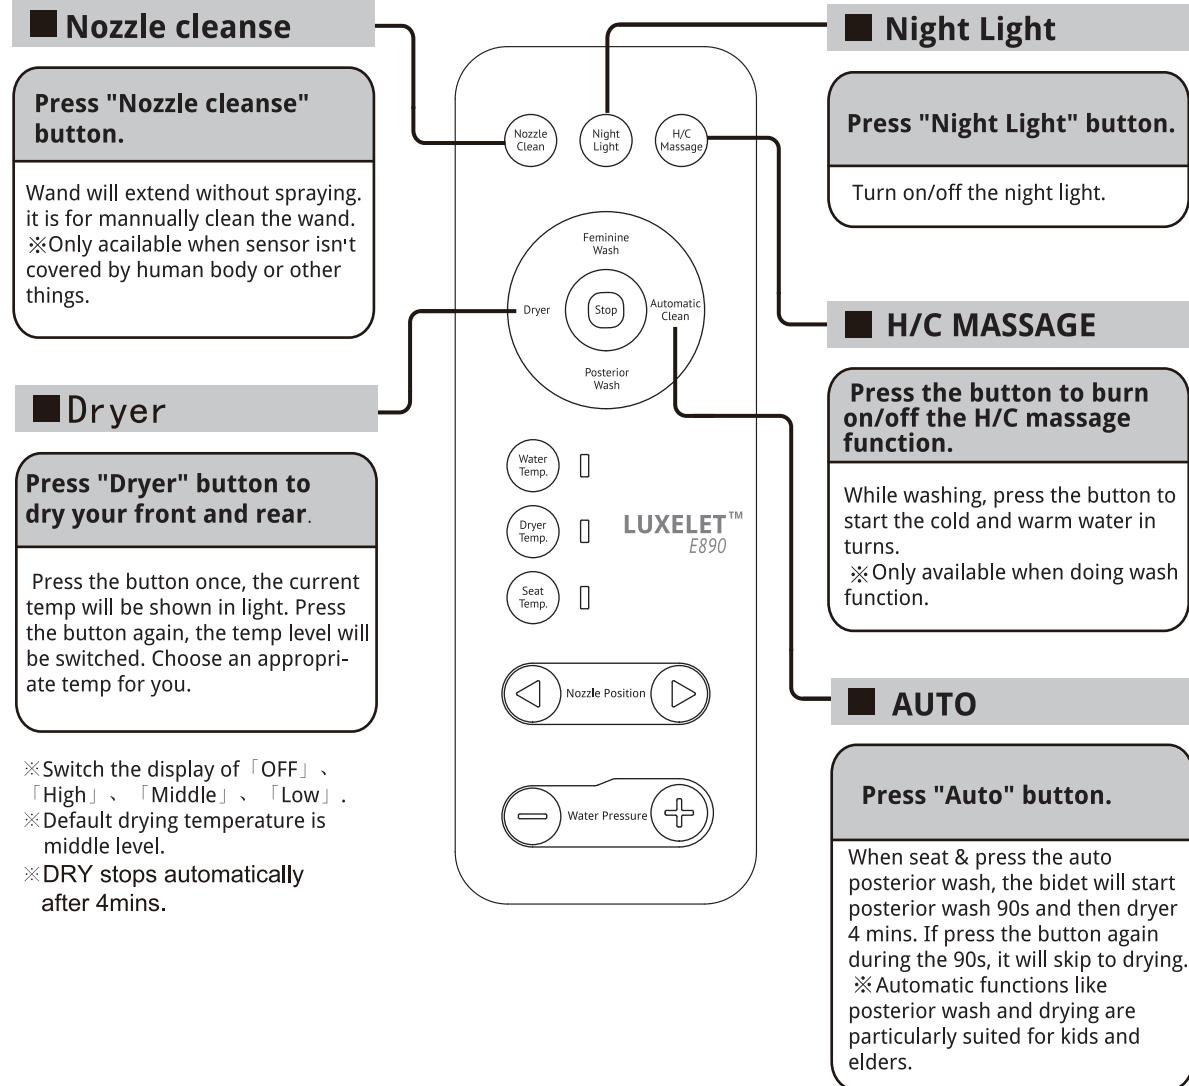

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.