

TROUBLESHOOTING

No power	Recharge your SOUND TOWER SPEAKER using the included micro USB cable. Try using a different cable.
Music is not playing over Bluetooth®	Make sure your Bluetooth® device has A2DP profile. Check if both devices are paired and connected over Bluetooth®. Restart the speaker to reconnect your Bluetooth® device.
Bluetooth® device will not reconnect with the speaker	Navigate to your Bluetooth® settings menu on your Bluetooth® device, tap " MERKURY S097B " and select " Forget ". Now follow the steps to pair your device again.

SPECs

Speaker Specifications: Output Power: 4 Ω 5W x 2 Driver Size: 52 mm x 2 Frequency Response: 20Hz – 18KHz	Power Information: Built-in Battery: Lithium-ion Input: DC 5V Battery Capacity: 3.7V, 1200mAH Playback time: Up to 5 hrs * Charging time: Approx. 2-3 hrs Power Source: Built-in rechargeable battery or via USB cable
Bluetooth® Information: Bluetooth® Version: 5.0 Operating Distance: 30-ft. System Requirements: Bluetooth® enabled device	System Requirements: Bluetooth®-capable device

*Depends on personal use and may vary from the estimated play time.

Technical Support:
Please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, please do not return it to the store you purchased it from. You can contact our technical support representatives and they will assist you with any questions you may have. For assistance operating your product, please consult the User's Manual first, then feel free to contact Merkury Innovations technical support:

Mercury Innovations
45 Broadway, 3rd Floor
New York, New York 10006
www.merkuryinnovations.com
support@merkuryinnovations.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions:
1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

©2022 Merkury Innovations, LLC.
To explore our full selection of products, visit us at: www.merkuryinnovations.com

Bluetooth® is a registered trademark of Bluetooth SIG, Inc. The illustrated product and specifications may differ slightly from those supplied. All other trademarks and trade names are those of their respective owners.
Made in China


Bluetooth®

SoundTower

LED SPEAKER

Inside Box: Sound Tower Speaker, Micro USB Cable, User Manual

USER MANUAL FOR MI-S097B

See details inside before use.

CHARGE

- Plug the micro USB cable into the micro USB port on the back of the speaker, and connect the other end of the cable into any compatible charger or USB AC wall adapter.
- When charging, the small LED indicator will glow red. When fully charged, the LED indicator will turn off.
- It is recommended to charge the speaker for 3 hours upon first use.

TURN ON & OFF

- Power on the speaker by pressing the power button located on the back of the speaker.
- Speaker automatically starts in Bluetooth® pairing mode and will connect with previously connected devices if in range.

PAIR & CONNECT

- Make sure the speaker is turned off and your device's Bluetooth® setting is enabled.
- Turn the speaker on; after a few seconds it will automatically enter into pairing mode and the LED will flash.
- On your Bluetooth® enabled device, navigate to the Bluetooth® settings menu, turn on the Bluetooth® feature, and search for new devices.
- Wait a few seconds and select "**MERKURY S097B**". The speaker will emit a tone when successfully paired.

NOTE: If your device's Bluetooth® version is below version 2.1, you may need to enter the password "0000".

AUX-IN: The speaker will switch to wired mode automatically once an AUX cable is inserted into the AUX-IN port.

NOTE: Insert a USB thumb drive or Micro SD card for direct music playback.


PLAY

- Connect your device to the speaker via Bluetooth® (see "Pair & Connect with a New Device").
- Open your favorite music app and press play.
- Control the music, track and volume from your device, or control them from the controls on the speaker.
- Adjusting Volume: Adjust the volume using the volume knob on the speaker or through your device.
- Press the "▶" button to play/pause music.
- Press the "—" or "—" button to skip to the next/previous track.
- All audio, including music, games, videos, and notifications will be played through the speaker.

RECONNECT TO BLUETOOTH®

- You only need to pair your Bluetooth® device with the speaker once.
- With your previously paired device's Bluetooth® turned on and in range, power on the speaker.
- The speaker will automatically reconnect to the last Bluetooth® device it was connected to.
- If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth® settings menu on your device, turn on the Bluetooth® feature, and select "**MERKURY S097B**" from your list of paired Bluetooth® devices and select "**Forget**". Repeat Pair & Connect steps stated above.

ON-BOARD CONTROLS (TOP OF SPEAKER)

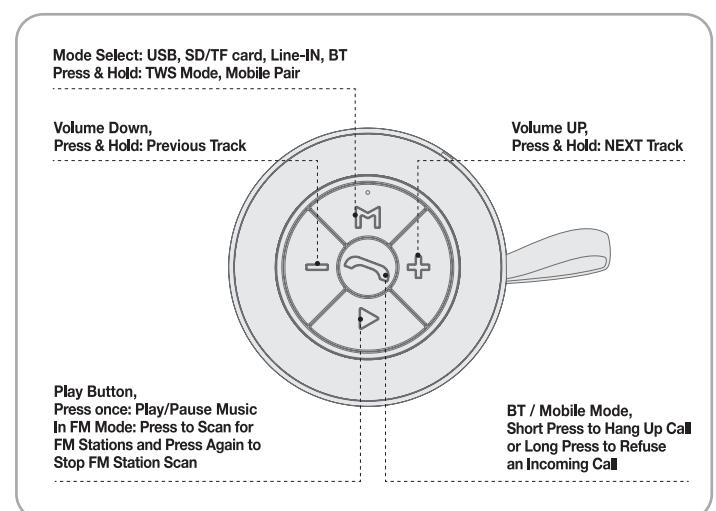

Mode Select: USB, SD/TF card, Line-IN, BT
Press & Hold: TWS Mode, Mobile Pair


Volume Down, Press & Hold: Previous Track

Volume Up, Press & Hold: NEXT Track

Play Button, Press once: Play/Pause Music
In FM Mode: Press to Scan for FM Stations and Press Again to Stop FM Station Scan

BT / Mobile Mode, Short Press to Hang Up Call or Long Press to Refuse an Incoming Call

SPEAKER INPUTS (BACK OF SPEAKER)

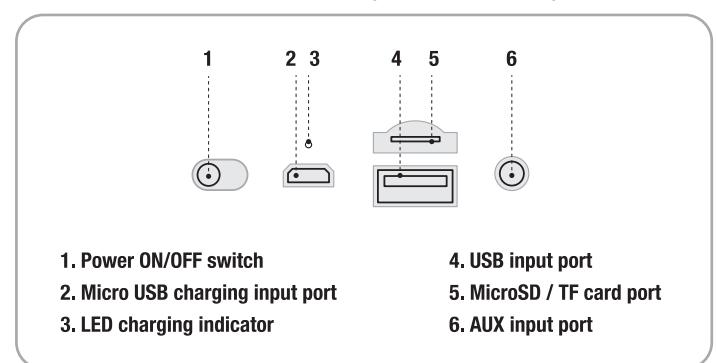

1. Power ON/OFF switch

2. Micro USB charging input port

3. LED charging indicator

4. USB input port

5. MicroSD / TF card port

6. AUX input port

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

•Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.