

UGREEN

Multi-Mode Wireless Vertical Mouse

Model: M571

User Manual

Product Overview

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

① Forward/Backward Button (Windows)
Switch Applications (macOS)

② Left Button

③ Right Button

④ Scroll Wheel

⑤ DPI Switch Button

⑥ Indicator (Low Battery/DPI Level)

⑦ Connection Mode Switch

⑧ Power On/System Switch

⑨ Optical Sensor

⑩ USB Receiver

⑪ Mouse Feet Film (Removable)

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

Windows/macOS Switching

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

2.4GHz Connection (Default)

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

Unable to Use?

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

① Unplug the receiver

② Press and hold connection mode switch button

Flashing indicator

③ Replug the receiver

Bluetooth Connection

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

① Enable device's Bluetooth

② Power on

③ Single-press connection mode switch button

Flashing indicator

④ Connect to "UGREEN BLE Mouse"

Unable to Use?

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

① Press and hold connection mode switch button

Flashing indicator

② Connect to "UGREEN BLE Mouse"

DPI Adjustment

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

Low Battery

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

Specifications

Model	M571
Connectivity	Bluetooth/2.4GHz
Bluetooth Version	5.4
Frequency Band	2400MHz-2483.5MHz
Max. RF Output Power	4dBm (EIRP)
Transmission Distance	10m/33ft (no blocking)
DPI (Sensitivity)	1000/1600/2000/4000 DPI
Battery Type	Alkaline Battery
Battery Mode	1×AA
Rated Voltage	1.5V
Compatible Systems	Windows 7/8.1/10/11 macOS 10.5 or later Linux Chrome OS Android 5.0 or later

The data are measured by UGREEN lab but may vary based on specific circumstances.

WARNING

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

⑫

⑬

⑭

⑮

⑯

⑰

⑱

⑲

⑳

㉑

㉒

㉓

㉔

㉕

㉖

㉗

㉘

㉙

㉚

㉛

㉜

㉝

㉞

㉟

㊱

㊲

㊳

㊴

㊵

㊶

㊷

㊸

㊹

㊺

㊻

㊼

㊽

㊾

㊿

① The product needs to have X batteries installed before use. When in use, do not disassemble, hit, crush, or throw it into the fire.

② Discontinue use immediately if the battery is severely swollen.

③ Do not use it in a high-temperature environment.

④ Do not use the battery if it is immersed in water!

⑤ The battery is hazardous. Please keep this product out of the reach of children.

⑥ If the battery has been accidentally swallowed or placed inside any part of the body, please seek medical attention immediately. Death or serious injuries, such as internal chemical burns, can occur within as little as 2 hours if ingested.

⑦ If the battery compartment is not securely closed, stop using the product, remove the battery and store both the product and battery out of reach of children.

⑧ Please store this product in a dry place, at room temperature.

⑨ Retain the original product literature for future reference.

⑩ Please do not shine the light directly into human eyes.

⑪ Do not charge the battery. If the battery is low, please replace it in time. Do not reverse the polarity when replacing the battery.

⑫ To prevent product damage from battery leakage and corrosion, please remove the battery if not in use for prolonged periods.

⑬ If battery leakage occurs, avoid contact with skin or eyes. In case of contact with skin or eyes, rinse with water and seek medical attention immediately.

⑭ To save energy and protect the environment, please power off the product if not in use for prolonged periods.

⑮ Handle and store the USB receiver carefully to prevent ingestion or insertion into the body.

Package Contents

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

⑫

⑬

⑭

⑮

⑯

⑰

⑱

⑲

⑳

㉑

㉒

㉓

㉔

㉕

㉖

㉗

㉘

㉙

㉚

㉛

㉜

㉝

㉞

㉟

㊱

㊲

㊳

㊴

㊵

㊶

㊷

㊸

㊹

㊺

㊻

㊼

㊽

㊾

㊿

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

⑫

⑬

⑭

⑮

⑯

⑰

⑱

⑲

⑳

㉑

㉒

㉓

㉔

㉕

㉖

㉗

㉘

㉙

㉚

㉛

㉜

㉝

㉞

㉟

㊱

㊲

㊳

㊴

㊵

㊶

㊷

㊸

㊹

㊺

㊻

㊼

㊽

㊾

㊿

① 1× Multi-Mode Wireless Vertical Mouse (Receiver Included)

② 1× User Manual

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

⑫

⑬

⑭

⑮

⑯

⑰

⑱

⑲

⑳

㉑

㉒

㉓

㉔

㉕

㉖

㉗

㉘

㉙

㉚

㉛

㉜

㉝

㉞

㉟

㊱

㊲

㊳

㊴

㊵

㊶

㊷

㊸

㊹

㊺

㊻

㊼

㊽

㊾

㊿

①

②

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

⑫

⑬

⑭

⑮

⑯

⑰

⑱

⑲

⑳

㉑

㉒

㉓

㉔

㉕

㉖

㉗

㉘

㉙

㉚

㉛

㉜

㉝

㉞

㉟

㊱

㊲

㊳

㊴

㊵

㊶

㊷

㊸

㊹

㊺

㊻

㊼

㊽

㊾

㊿

