

UGREEN

 
Bluetooth Adapter SE

Model: BT301 | P/N: 35994


User Manual | Benutzerhandbuch
Manuel de l'utilisateur | Manual de usuario | Manuale dell'utente
Руководство Пользователя | 取扱説明書 | 用戶手冊
دليل المستخدم | Handledning | Användarmanual
Instrukcja Obsługi | Kullanım Kılavuzu | Manual do Usuário

I . Disable Built-in Bluetooth Before Plugging in Adapter

1. Check Built-in Bluetooth

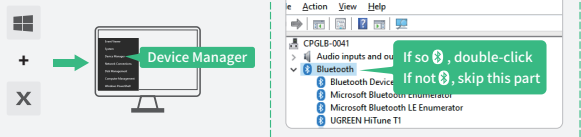

 2. Disable Built-in Bluetooth

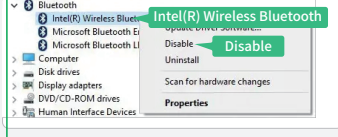


- 1. Check if there is built-in Bluetooth in your computer before plugging in the adapter:**
① Option 1: Press the "Windows" + "X" to select "Device Manager".
② Option 2: Right-click "This PC" > "Manage" > "Device Manager".
If there is a "Bluetooth" icon in the "Device Manager", please follow the steps below to disable it. If not, please skip this part.
- 2. Disable Built-in Bluetooth**
Double-click the Bluetooth icon > right-click on "Intel(R) Wireless Bluetooth" > select "Disable device" > Click on "Yes".
Default Bluetooth: Generic Bluetooth Radio, Intel(R) Wireless Bluetooth (R).

II . Windows 8.1/10/11 (Plug and play)


①



 ②



③

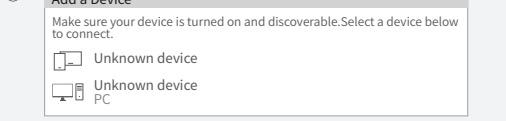 

- ① Plug the adapter into a computer connected to the Internet.
Note: DO NOT plug the adapter into your computer before disabling the built-in Bluetooth.
② Right-click the 0 in the taskbar and choose "Add a Bluetooth Device" or select "Start" > "Settings" > "Devices". Please ensure to turn on your device's Bluetooth.
③ Select your Bluetooth device from the list and follow the wizard to complete pairing.

Troubleshooting

- 1. Why is the Bluetooth function not working and computer shows "Error Code 31"?**
The built-in Bluetooth in your computer is not disabled, causing the adapter cannot enable the driver, please disable it:
① Remove the adapter, then go to "Device Manager" > double-click the Bluetooth icon > right-click "Intel(R) Wireless Bluetooth" > select "Disable device" > click "Yes".
Note: common Bluetooth name may be Generic Bluetooth Radio, Intel(R) Wireless Bluetooth (R).
② Replug the adapter.

- 2. What should I do if the Bluetooth icon doesn't appear?**
① Ensure there are no other Bluetooth devices installed on the computer. If there are, disable all existing Bluetooth devices in "Device Manager", then insert the adapter and try again.
② Sometime the Bluetooth icon may be hidden; select "Start" > "Settings" > "Devices" > Click "More Bluetooth Options" > "Options" > Check "Show the Bluetooth icon in the notification area".


- 3. Why can't I find my Bluetooth device?**
① Please make sure that your device supports Bluetooth.
② Please ensure your Bluetooth device is in pairing mode.
③ Keep your Bluetooth device around/near the adapter at a range of 20m/66ft.
④ Please replug the adapter.

- 4. Can the adapter connect to multiple devices at a time?**
The adapter can connect up to 5 Bluetooth devices, such as headphones/speakers, keyboards, mice, game controllers, and phones. However, if two Bluetooth audio output devices (like headphones/speakers) connect to the adapter, only one will work.

Specifications	
Model	BT301
Frequency Range	2400MHz-2483.5MHz
Max. RF Output Power	4dBm (EIRP)
Bluetooth Profiles	A2DP/HSP/AVRCP/HID/PAN/GAVDP/DID/IOP
Operating Distance	Up to 20m/66ft Max (no blocking)
Power Supply Port	USB-A
Compatible Systems	Bluetooth Mode: Windows 8.1/10/11 Mouse micro-motion mode: Windows/Mac OS

The data are measured by UGREEN lab but may vary based on specific circumstances.

 Product Overview

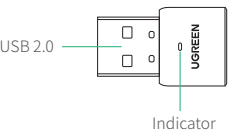

Package Contents

- 1× Bluetooth Adapter
1× User Manual
1× Quick Start Guide

Manuale utente
PAP 22
Raccolta carta

