

User Manual

Cherrio Box

*Sorry to the changes of our products parameters but without notice. 89-00000034

1. Getting started

1.1 Basic operations

1.1.1 Power on/ off and sleep


1. Connect the device to the TV with HD cable, connect device to the power adaptor, connect mouse, air mouse or other input devices with USB port
2. After the device and cables connected, power LED turns into blue
3. After disconnect the device from the power adaptor, Power LED turns off.
4. Under power on mode, press remote control's power button, device is entering into sleep mode, Power LED turns into red
5. Under sleep mode, device will be wake when you press remote control's power button, power LED turns from red to blue

1.1.2 Open applications

Use remote control's arrow keys to choose the wanted program, click OK button to open the selected program

1.1.3 Boot into the wizard page

Language selection

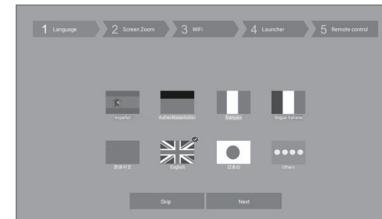

1. Language → Screen Zoom → WiFi → Launcher → Remote control
2. Complete the above steps to confirm junior into the interface

*This function only operated in the condition of Mouse mode

1.1.4 Switch in the applications

Click "My Apps" to view recently used programs, click program icon to switch application arbitrarily



1.1.5 Close Applications

Click the right key of mouse to back up the last step procedure to close the application directly.


*This function only operated in the condition of Mouse mode

3

1.1.6 My Apps

Move to "My Apps", Press OK to enter in.

You can see icons referring to different function on the picture.

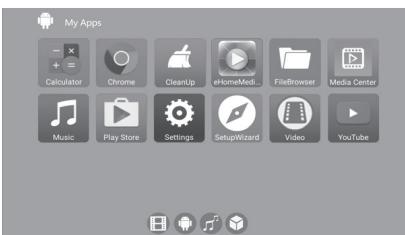


Warm reminder:

* Pls find the calculator program and input "n318", then it will shows the installation of KODI & other third-party applications and uninstall KODI application.

1.1.7 WIFI Function

1. Home Screen → SETTINGS → Network → Select "Wi-Fi" to open WIFI function
2. Choose Hotspot → Input Password → Connect to the network

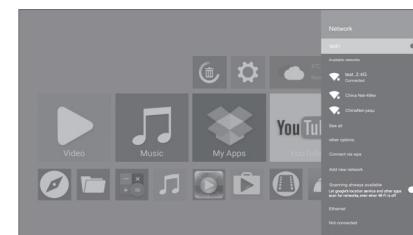

1.1.8 Ethernet Function

1. Home Screen → SETTINGS → Network → Select "Ethernet" to open Ethernet function
2. Insert network cable, network will be connected automatically

1.1.9 File Browser

Move to "File browser", Press OK to enter into the device list. When inserting with USB device or SD/SDHC/MMC cards, the sign "Device is mounting" will be shown on the screen. Here you can cut, copy, paste and move the files and folder between the local disk and external storage card.



Read TF card

Insert TF card into the device in the status of power on, when icon appears in top left corner of the desktop, open "File Browser", the identified External Storage Card will appear under "Local Disk", TF card's operation is available now.

4

5

2.1 Troubleshooting

Under no circumstances should you try to repair the TV BOX by yourself as this will invalidate the warranty. Do not open the TV BOX as there is a risk of electric shock. If it fails, firstly check with points listed below before taking the TV BOX for repair. If you are unable to remedy the problem with these hints, consult your dealer for further assistance.

Problem	Solution
No power	<Check if the power adaptor is properly connected to the power and the TV BOX. If the TV BOX is still not turned on, press the power button on the remote control to turn on the power.
No picture	<Check if the TV is switched on.
No sound or distorted sound	<Check if the speakers are connected correctly.
No status or digital output	<Check if your amplifier is set correctly.
The TV BOX does not respond to the Remote Control	<Check if the remote control is pointed directly at the front of the TV BOX, decrease the distance to the TV BOX. <Replace the batteries in the remote control.
The TV BOX does not respond to simple remote control commands during playback	<Check if the TV system is set up correctly. Refer to the user manual. <Check if the system is muted. If muted, unmute with power adaptor to turn on the TV BOX.
No sound during movies playback	<Check if your amplifier is set correctly.
The contents of the USB disk are not displayed	<Check if the USB disk is connected to the TV BOX. You can plug in another supported audio device (HDMI, etc.). <Check the volume.
The TV BOX does not respond to the remote control	<Check if the remote control is pointed directly at the front of the TV BOX, decrease the distance to the TV BOX. <Replace the batteries in the remote control.
The TV screen is dark and the power LED is blinking	<Turn off your TV BOX with 30 seconds turn on again. <Check if the TV BOX is connected to the power adaptor or change another HDMI cable, set the output resolution of this TV BOX into 720p.

6

7

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter