


| **4K**  
ULTRA HD

Digital video camcorder

## USER'S MANUAL

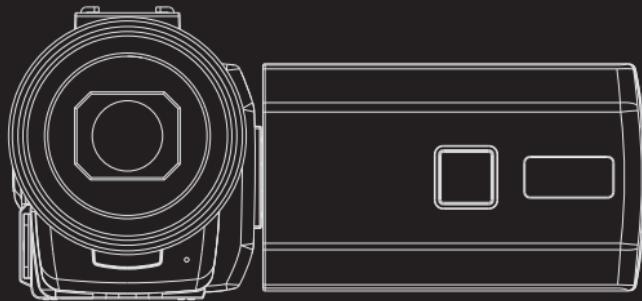

*Please read this manual carefully!*



## Content

Safety and warning .....	1
1 About .....	3
1.1 System requirements .....	3
1.2 Picture presentations .....	3
1.3 Functions of keys .....	5
2 Start to use .....	6
2.1 Installation of the memory card .....	6
2.2 Installation of battery .....	7
2.3 Charging the battery .....	7
2.4 Power on and power off the camera .....	8
2.5 Switch working mode .....	8
2.6 Instructions of use remote .....	9
2.7 Connect to PC .....	10
2.8 Connect to TV .....	11
2.9 Use external microphone .....	12
2.10 Use zoom function .....	13
2.11 IR night vision .....	13
3 Use the camera .....	14
3.1 Video mode .....	14
3.2 Photo mode .....	18
3.3 Playback mode .....	21
3.4 Setup .....	22
4 WiFi connection .....	26
4.1 APP installation on mobile phone .....	26
4.2 Connect to mobile phone .....	26
5 Appendix .....	28
5.1 Specification .....	28
5.2 Common problems and solutions .....	29

## **Safety and warning**

*Please read carefully and refer to this instruction manual. Please keep this manual. This chapter contains important safety information and warnings, violation of these may result in fire, explosion or electric shock, and may result in serious personal injury. Children are forbidden to use the unit and accessories alone. These can pose a risk to children of electrocution, poisoning and suffocation.*

### **Electric shock and fire**

- ◊ If the unit is damaged, flooded or short-circuited, shut down immediately and remove the battery.
- ◊ Use the charger correctly. Keep dry and ventilated when using, do not cover any articles. Do not use the charger when there is lightning.
- ◊ When using the charger to connect this machine, weak current may be felt in contact with metal. This is because the charger has an electromagnetic interference suppression element that forms the necessary loop. This weak current is controlled within the limit of national safety standard, please feel free to use it.

### **About the battery**

*Batteries are chemicals that can cause fire or explosion and chemical burns if used incorrectly.*

- ◊ Do not short-circuit, impact, squeeze, puncture, disassemble or burn the battery.
- ◊ Do not store and use in high temperature. Do not use batteries that expand or leak.
- ◊ Do not swallow. If the battery may have been swallowed or entered the body, seek medical attention immediately.
- ◊ Only the specified type of battery is allowed.

## **Safety and warning**

### **LCD screen**

- ◇LCD screen is fragile, do not throw, squeeze or knock.
- ◇If the screen is broken, do not touch it. In case of contact, rinse immediately with water.
- ◇Do not swallow. If swallowed, gargle immediately and drink plenty of water. Seek medical advice immediately.

### **Precautions for use and storage**

- ◇Do not use corrosive solvents.
- ◇Do not direct LED lights into your eyes, as strong light may damage your eyesight.
- ◇When not in use, remove the battery and place it in a dry place.
- ◇Do not disassemble by yourself. This machine has no user can repair the parts, in case of failure, please find a professional or dealer. Artificial damage or self-dismantling will lose the warranty qualification.

### **Environment**

*Operating environment: Temperature 0°C to 0°C, humidity ≤70%.*

*Storage environment: temperature -20°C-50°C, humidity ≤50%.*

*Do not use or store in the following conditions:*

- ◇A damp or dusty area
- ◇A place of high or low temperature
- ◇A place of sun exposure
- ◇A place with strong vibration

### **Proper disposal of waste**

- ◇Do not discard the unit and accessories at will. To avoid environmental pollution, dispose of waste products in accordance with local laws.

## **Safety and warning**

### **Other warnings**

◇*This machine may interfere with aircraft, medical equipment, do not use in prohibited places.*

*Comply with local laws and regulations regarding wireless devices.*

◇*Please comply with local laws and regulations on personal privacy protection.*

### **Pre-use inspection**

*To ensure your benefit, before use, please fully charge it, load the memory card and take a test shot.*

*We are not responsible for any additional loss caused by improper use or malfunction of the machine.*

### **Trademark**

*Microsoft/ Windows is a registered trademark of Microsoft Corporation.*

*Pentium is a registered trademark of Inter Corporation.*

*Macintosh/Mac OS/iOS is a registered trademark of Apple.*

*References to business or product names, proper nouns or trademarks are registered trademarks of the relevant owners.*

### **About this manual**

◇*The picture is for reference only. We try to keep the content correct. If the product is updated, please refer to the actual product.*

◇*To improve user experience, the APP may be upgraded, please refer to the actual situation of the APP operation, without prior notice.*

◇*We reserve all rights in this manual. No unit or individual shall copy or disseminate in any form without consent.*

# 1 About

Welcome to choose this product, we will service you warmly!

This is a multi-function 4K UHD camcorder, which has the function of photo and video. It supports WiFi wireless application and has the following features:

- ◇4K UHD video ◇H.264 ◇Loop-recording ◇Time-lapse ◇Slow motion video ◇Infrared night vision
- ◇13MP CMOS sensor ◇48MP Photo ◇EIS Anti-shake ◇3.0 inch IPS HD touch screen
- ◇WiFi wireless connection ◇IR remote control ◇Max. support 128GB Memory card
- ◇Support external microphone ◇Support external 37MM extend lens

## 1.1 System requirement


If the camcorder is connected to computer, the following specifications are required at least:

The Pentium2.0 GHZ or upper processor / Windows XP/ 4GB RAM/500GB of available disk space / Standard USB2.0 port/ 1GB display card/1024x768 or higher screen definition.


If the configuration of computer is quite low, camcorder may not work properly or get stuck when connecting to computer.

## 1.2 Picture Presentation

【Front view】

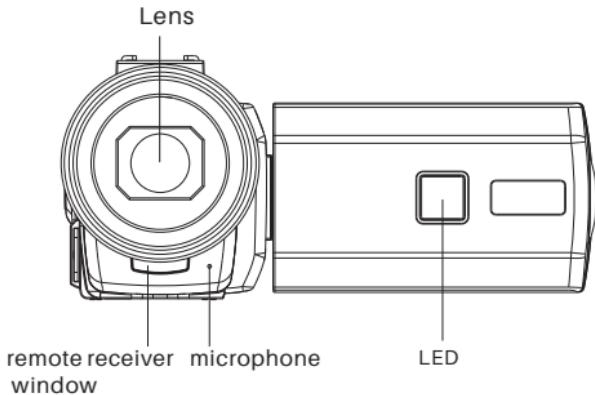


【rear view】

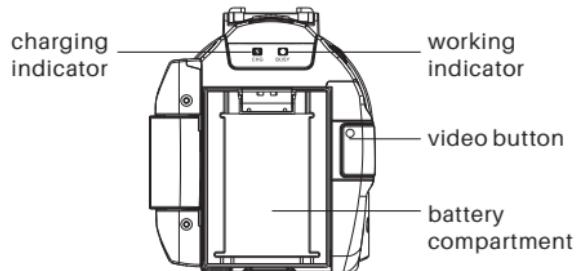


# 1 About


【Top view】

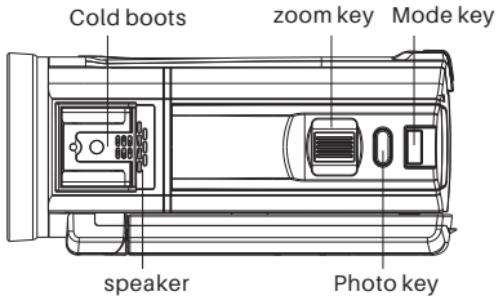

【Bottom view】

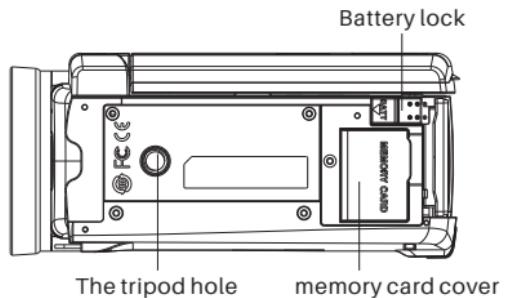

【left view】

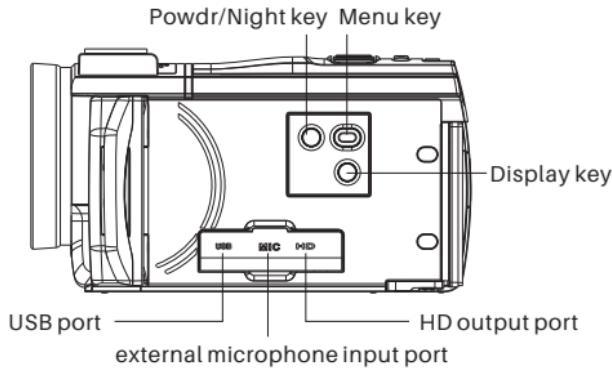

# 1 About

## 1.3 Functions of keys

Icon	Key name	Function description
	【POWER/LIGHT】	Short press to power on the camera; After powering on, long press for 2 seconds to power off the camera; short press to turn on/off IR light.
	【MENU】	Pop-up menu/Back to the previous menu/Exit menu.
	【DISP/WIFI】	Short press to switch screen display: Display icon, close icon, close screen. In photo/video mode: Long press for 2 seconds to turn WiFi on/off.
	【PHOTO】	In photo mode, press it lightly for focus, press it heavily to take photo. In video mode, during recording video, press it heavily to pause/continue video. In playback mode: press it again to pause/play.
	【MODE】	Switch working mode: Video mode/Photo mode/Playback mode.
	【W/T】	In Photo/video mode: Zoom in/out. In video playback: Turn up/down the volume. In playback mode: Page forward/backward. In the menu: Select forward/backward.
	【VIDEO】	In video mode: Start/stop recording video

In this manual, places with **【 】** represent keys or switches, such as **【MENU】** represents MENU key.

## 2 Start to use

### 2.1 Installation of the memory card


This machine needs to install the memory card, please follow the instructions.

#### 2.1.1 Open the memory card cover.


#### 2.1.2 Insert the memory card in the direction shown and push it inward until you hear a click.

#### 2.1.3 Close the memory card cover.

Open the SD card cover according  
to the direction of arrow

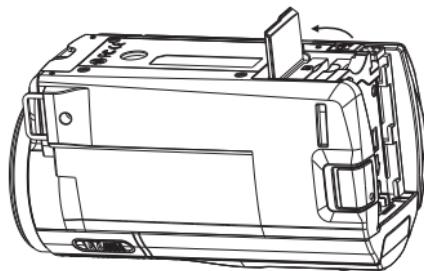

Insert the SD card according  
to the direction of arrow

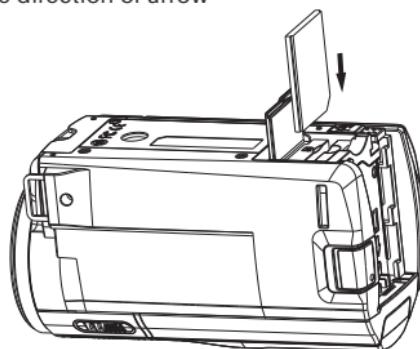

#### Notice :

*Please use a regular brand of Class 6 or above memory card.*

*Do not insert or remove the memory card during work, which may damage the memory card or lose data!*

*Some memory cards may cause the unit to crash or work improperly.*

*If the "Card is Full" is displayed, Indicates that the card is full. Replace the memory card or delete the file.*

## 2 Start to use

### 2.2 Installation of battery


This machine uses external battery, please refer to the picture to install.

2.2.1 Install the battery with the metal contact of the battery facing upwards.

2.2.2 Follow the arrow direction on battery compartment, push the battery until a "Click" is sounded which means the installation is complete.

**Notice :**

*Please install battery correctly, incorrect installation will not boot or damage the camcorder, and may cause accidents!*

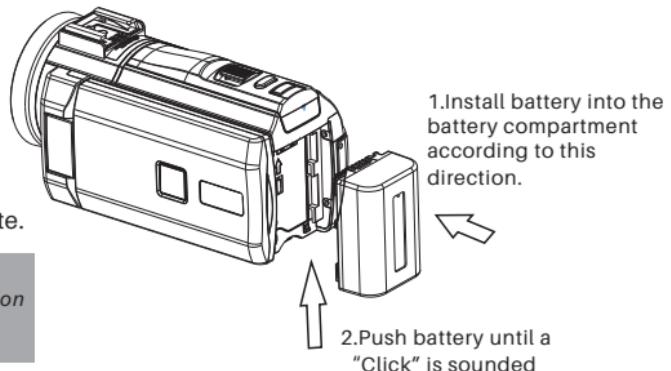

### 2.3 Charge the battery

2.3.1 Install the battery, connect the unit and charger with USB cable to the mains. The indicator "CHG" lights up indicating the battery is being charged, and the indicator lights off after the battery is charged.

2.3.2 Connect the computer to charge the unit. Connect the unit to the computer with a USB cable. The indicator "CHG" lights up indicating the battery is being charged, and the indicator lights off after the battery is charged.

2.3.3 Charger specifications: Input AC100~240V/50~60HZ, Output DC 5V/15A, please confirm the charger and power supply specifications.

2.3.4 In order to adapt to long time shooting, the unit can be charged while shooting. To use this function, please use the tripod to fix the unit, and follow the steps of 2.3.1 to open the unit.

*Notice:Please confirm local power specifications! Keep ventilation during charging, no covering. After charging, remove the power asap!*

*When using computer USB to charge the unit, please turn off the unit, otherwise the computer may be damaged!*

## 2 Start to use

Power on and power off the camcorder

1. Short press **【Power/IR LIGHT】** to power on the camcorder;
2. Long press **【Power/IR LIGHT】** to power off the camcorder;
3. Open the screen and the machine will start up automatically. Close the screen, automatic shutdown.
4. The camcorder support the function of auto power-off. When not in use for a period of time, the unit automatically shut down to save power.

### 2. 5 Switching working Mode

To switch the working mode of the machine, press **【MODE】** to pop up the "MODE Selection" menu. Press **【W/T】** to select the mode and press **【Photo】** to enter the selected mode.

#### 2.5.1 Video mode

This machine supports ordinary video, slow photography, cyclic video, time-lapse video and other modes.

Ordinary video: The icon is  displayed in the upper left corner of the screen, indicating it's recording a common video. Slow photography: The icon  is displayed in the upper left corner of the screen, indicating it's recording a slow motion. Cyclic video: The icon  is displayed in the upper left corner of the screen, indicating it's recording cyclic video automatically. Time-lapse video: The icon  is displayed in the upper left corner of the screen, indicating it's recording time-lapse video.

In video mode, press **【VIDEO】** to record video, and press **【VIDEO】** again to stop shooting.

#### 2.5.2 Photo mode

This machine supports ordinary photo, automatic photo, continuous photo, timing photo mode.

Ordinary photo: The icon  is displayed in the upper left corner of the screen, press **【PHOTO】** to take common photos. Automatic photo: The icon  is displayed in the upper left corner of the screen, press **【PHOTO】** to automatically take photos at regular intervals.

Continuous photo: The icon  is displayed in the upper left corner of the screen, press **【PHOTO】** to take 3 photos in succession. Timing photo: The icon  is displayed in the upper left corner of the screen, press **【PHOTO】** to take photos after a certain time.


#### 2.5.3 Playback mode

View photos or videos and perform related operations.

## 2 Start to use

### 2.6 Instructions of remote control

The machine can be operated by remote control, and the key functions of the remote control are as follows:

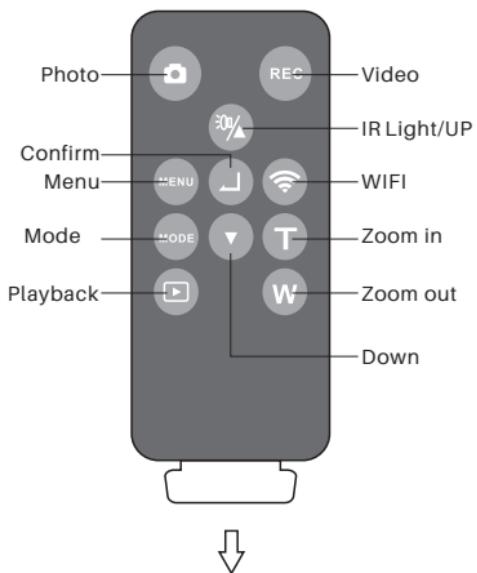

Icon	Function description
	In photo mode: Take photo; In video mode: Pause/continue recording.
	In video mode: Start/stop video
	In photo/video mode: Turn on/off IR light; In the menu: Select up
	Bring up the menu/back to the previous menu/exit the menu.
	Confirm operation
	In photo/video mode: turn WIFI on/off
	Switch working mode; In setup menu: To switch the menu.
	In menu mode: Select down.
	In photo/video mode: Zoom in the picture.
	Enter playback mode
	In photo/video mode: Zoom out

#### Notice:

Before use remote control please take off the battery protective slice. When use remote control, please aim at the remote receive window of camcorder, objects can not be shielded in the middle.

## 2 Start to use

### 2.7 Connect to PC


The unit can be connected to the computer using USB cable. After connected, it can be charged, transferred files or used as a camcorder.

After the connection is successful according to the figure, the screen displays options: charging mode, large-capacity storage mode, camcorder mode.

Select charging mode to charge the unit only.

Select the large-capacity storage mode, which can be used like a USB flash drive.

Select camcorder mode and use it as a computer camcorder.

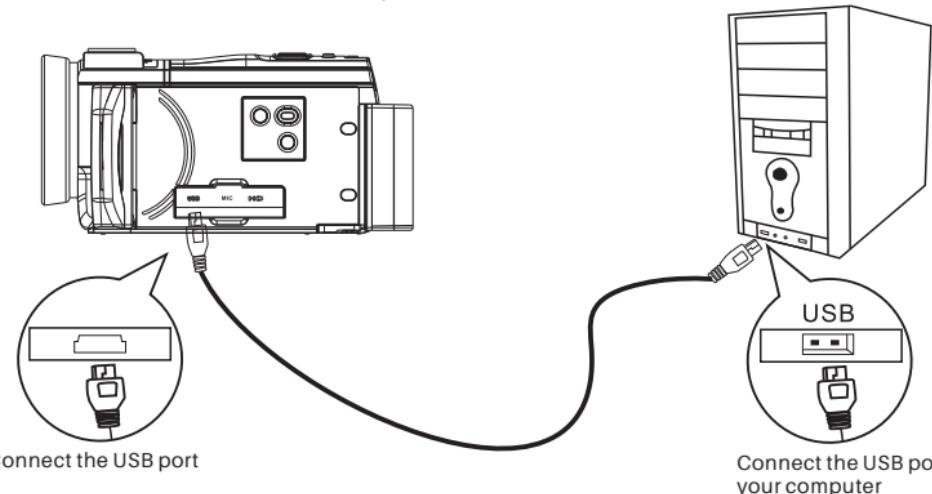

**Notice:**

*Because of the computer system, if you select camcorder mode, download the required software.*

## 2 Start to use


### 2.8 Connected TV

The unit can be connected to the TV.

2.8.1 Use HDMI cable to connect the unit to the HD port of the TV.

2.8.2 Switch the signal input of the TV set to a port connected to the unit.

2.8.3 Turn on the unit, normal operation, all contents will be displayed on the TV.

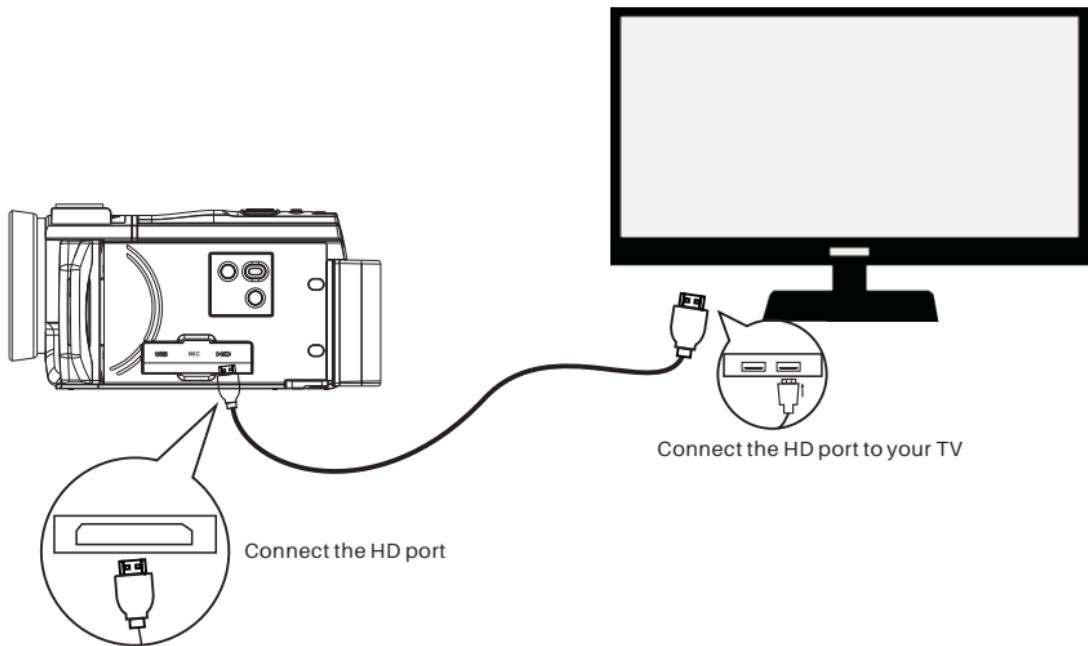

## 2 Start to use


### 2.9 Use external microphone (optional accessory)

Using external microphone can effectively improve sound quality, and get good recording effect.

2.9.1 Read the technical specifications and instructions of the external microphone carefully to avoid damaging the device.

2.9.2 Install the external microphone as shown and lock the nut.

2.9.3 Insert the microphone 3.5mm coaxial plug into the MIC interface of the machine and turn on the microphone switch.

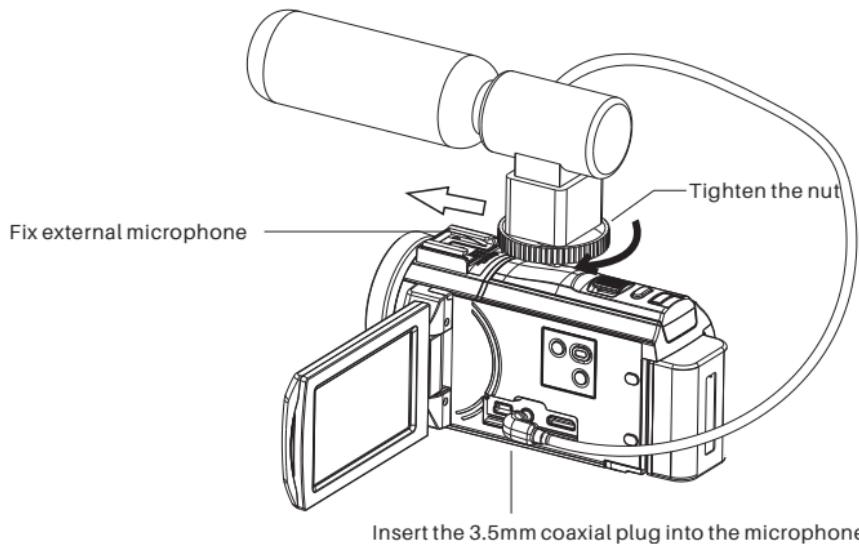

**Notice :**

Adaptable external microphone parameters: output impedance  $0.2K\Omega\sim2.2K\Omega$ , 3.5mm coaxial port. After the external mic is connected, the host automatically switches to an external mic. Because each external microphone parameter is different, the specific effect is selected after actual adaptation.

## 2 Start to use

### 2.10 Use zoom function

This machine has the digital zoom function, in the video/photo mode, toggle [W/T] rightward to bring the object closer (enlarge the scene), toggle [W/T] leftward to pull away from the object (shrink the object).

### 2.11 Use night vision function

This machine has infrared night vision function, can shoot black and white photos and videos in the dark environment.

In Photo/Video mode: short press **【Power/LIGHT】** to enable night vision, short press **【Power/LED】** again to turn off the IR light.

*Notice:*

*Night vision can only be turned on or off in camcorder mode or video mode.*

### 3 Use the camera


#### 3 Use the camcorder

This chapter helps you understand how to use the various advanced features of the camera.

##### 3.1 Video Mode

In video mode, the screen displays relevant icons with the following meanings:

1 Video mode indicator	2 Recording time indicator	3 Memory card indicator	4 Battery capacity indicator
5 Zoom indicator	6 Menu icon	7 Date time indicator	8 Resolution indicator
9 Playback icon	10 Exposure indicator		

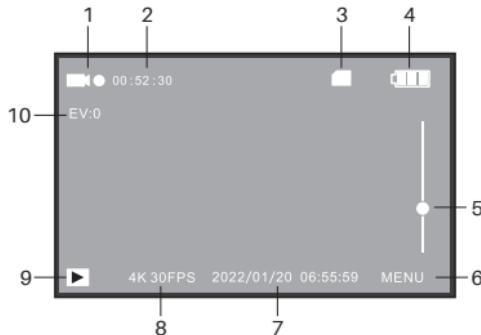

##### 3.1.1 Video Recording

Install the memory card and battery, short press **【POWER/LIGHT】** to start up and enter the recording mode. Focus the camera on the object, press the **【Video】** to start recording, and press **【Video】** again to stop recording. During recording, the red icon in the upper left corner of the screen continues flashing.

In the video mode, users can set various parameters to help take a more beautiful picture. If you are not familiar with the machine, you can use the default settings. The following settings are performed in video mode.

### 3 Use the camera

#### 3.1.2 Resolution

Set the video resolution. The higher the resolution, the better the clarity, but the bigger the file.

3.1.2.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Resolution", press **【PHOTO】** to enter into the sub-menu;

3.1.2.2 Press **【W/T】** to select desired resolution:

4K P60/4K P30/2.7K P30/FHD P60/FHD P30/HD P60/HD P30 ;

3.1.2.3 Press **【PHOTO】** to save, press **【Menu】** again to back to video mode.


This function supports touch screen operation:

A Click the "MENU" icon in the lower right corner of the screen to enter the setting menu, click the "Video resolution" icon to pop up the resolution option.

B Click desired resolution to back to previous menu.

C Click the back icon  to return to the video mode.

The following functions in this section support touch operations. The usage method is the same as 3.1.2.

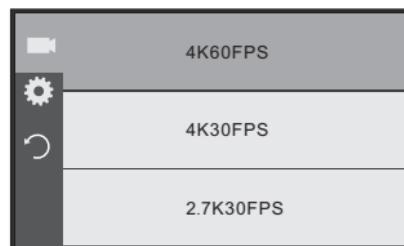

### 3 Use the camera

#### 3.1.3 Electronic anti-shake

Turn on or off the electronic anti-shake function. Enable this function to reduce the blur caused by shake.

3.1.3.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Electronic anti-shake", press **【PHOTO】** to enter into the sub-menu;

3.1.3.2 Press **【W/T】** to select desired option:On/Off ;

3.1.3.3 Press **【PHOTO】** to save,press **【Menu】** again to back to video mode..

#### 3.1.4 White balance

Adjust the color deviation of the picture according to the light source environment.

Automatic mode is recommended.

3.1.3.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "White balance", press **【PHOTO】** to enter into the sub-menu;

3.1.3.2 Press **【W/T】** to select desired option: Auto / Daylight / Cloudy / Tungsten /Fluorescence

3.1.3.3 Press **【PHOTO】** to save,press **【Menu】** again to back to video mode..

#### 3.1.5 Exposure

Adjust exposure value (EV) according to the environment. The higher the EV, the brighter the video, and the smaller the EV, the darker the video.

3.1.5.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Exposure", press **【PHOTO】** to enter into the sub-menu;

3.1.5.2 Press **【W/T】** to select desired value of exposure: -3/-2/-1/0/+1/+2/+3 ;

3.1.5.3 Press **【PHOTO】** to save,press **【Menu】** again to back to video mode.

*Notice : This function is invalid when ambient brightness is low.*

#### 3.1.6 Metering mode

Set metering mode when recording.

3.1.5.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Metering mode", press **【PHOTO】** to enter into the sub-menu;

3.1.5.2 Press **【W/T】** to select desired option: Average metering/central key metering/point metering/matrix testing ;

3.1.5.3 Press **【PHOTO】** to save,press **【Menu】** again to back to video mode.

### 3 Use the camera

#### 3.1.7 Sharpness

Adjust the sharpness of the video to make the edges clearer or softer.

3.1.7.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Sharpness", press **【PHOTO】** to enter into the sub-menu;

3.1.7.2 Press **【W/T】** to select desired option: High/Middle/Low ;

3.1.7.3 Press **【PHOTO】** to save, press **【Menu】** again to back to video mode.

#### 3.1.8 Video Quality

Adjust the quality of the video.

3.1.8.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Video Quality", press **【PHOTO】** to enter into the sub-menu;

3.1.8.2 Press **【W/T】** to select desired option: High/Middle/Low ;

3.1.8.3 Press **【PHOTO】** to save, press **【Menu】** again to back to video mode.

#### 3.1.9 Sensitivity

Adjust video sensitivity (ISO), automatic mode is recommended;

3.1.9.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Sensitivity", press **【PHOTO】** to enter into the sub-menu;

3.1.9.2 Press **【W/T】** to select desired option: Auto/100/200/400/800/1600/3200/6400

3.1.9.3 Press **【PHOTO】** to save, press **【Menu】** again to back to video mode.

#### 3.1.10 Time watermark

Sets whether the time and date are displayed on the video

3.1.10.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Time watermark".

3.1.10.2 Press **【PHOTO】** to select: Turn on/turn off, press **【Menu】** to back.

#### 3.1.11 Record Audio

Set whether to record sound at the same time when recording a video.

3.1.11.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "recording Audio".


3.1.11.2 Press **【PHOTO】** to select: Turn on/turn off, press **【Menu】** to back.

### 3 Use the camera

#### 3.2 Photo mode

In photo mode, relevant icons are displayed on the screen with the following meanings:

1Photo mode indicator	2Memory card indicator	3Battery capacity indicator	4Zoom indicator
5 MENU touchable icon	6Date time indicator	7Resolution icon	8Playback icon
9 EV indicator			

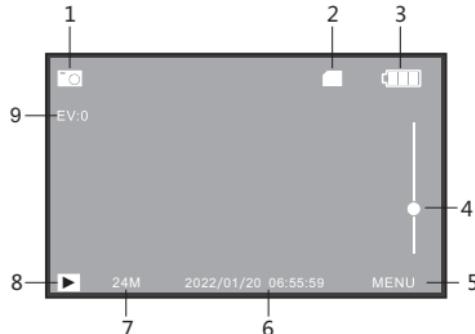

##### 3.2.1 Take Photo

Boot into the video mode, press **【MODE】** to enter the mode option, select "ordinary photo", press the **【PHOTO】** to enter the ordinary photo.

Focus the lens on the subject, adjust the angle and bearing, grip and hold steady. Tap **【PHOTO】** to pop up a focus frame. Keep pressing **【PHOTO】** down to the button, the photo will be taken until "click" is sounded.

In photo mode you can set various parameters to help you get better photos. If you're not familiar with the camera, you can also use the camera's default settings.

The following settings are carried out in photo mode.

### 3 Use the camera

#### 3.2.2 Resolution

Set the photo resolution. The higher the resolution the larger the size of the photo, the more storage space it takes up.

3.1.2 In photo mode, press 【Menu】 to bring up menu options, press 【W/T】 to select "Resolution", press 【PHOTO】 to enter into the sub-menu;

3.1.2.2 Press 【W/T】 to select desired resolution:48M、36M、24M、20M、16M、12M、8M、5M；

3.1.2.3 Press 【PHOTO】 to save, press 【Menu】 again to back to video mode.

This function supports touch screen operation:

A In photo mode, click the "MENU" icon in the lower right corner of the screen to enter the setting menu, click the "photo resolution" icon to pop up the resolution option:48M,36M,24M,20M,16M,12M,8M,5M

B Drag options and click the desired resolution to back to previous menu.

C Click the  icon to return to the video mode.

The following functions in this section support touch operations. The usage method is the same as 3.12.


#### 3.2.3 White balance

Adjust the color deviation of the photo according to the light source environment. Automatic mode is recommended.

3.2.3.1 Press 【Menu】 to bring up menu options, press 【W/T】 to select "White balance", press 【PHOTO】 to enter into the sub-menu;

3.2.3.2 Press 【W/T】 to select desired option: Auto / Daylight / Cloudy / Tungsten / Fluorescence

3.2.3.3 Press 【PHOTO】 to save, press 【Menu】 again to back to photo mode.

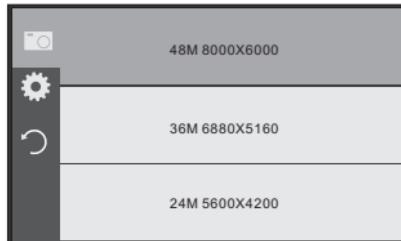

### 3 Use the camera

#### 3.2.4 Exposure

Adjust exposure value (EV) according to the environment. The higher the EV, the brighter the photo. This function is invalid when ambient brightness is low.

3.2.4.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Exposure", press **【PHOTO】** to enter into the sub-menu;

3.2.4.2 Press **【W/T】** to select desired value of exposure: -3/-2/-1/0/+1/+2/+3 ;

3.2.4.3 Press **【PHOTO】** to save, press **【Menu】** again to back to photo mode.

#### 3.2.5 Metering mode

Set the metering mode of the camera.

3.2.5.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Metering mode", press **【PHOTO】** to enter into the sub-menu;

3.2.5.2 Press **【W/T】** to select desired option: Average metering/central key metering/point metering/matrix testing ;

3.2.5.3 Press **【PHOTO】** to save, press **【Menu】** again to back to photo mode.

#### 3.2.6 Sharpness

Adjust the sharpness of the video to make the edges clearer or softer.

3.2.6.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Sharpness", press **【PHOTO】** to enter into the sub-menu;

3.2.6.2 Press **【W/T】** to select desired option: High/Middle/Low ;

3.2.6.3 Press **【PHOTO】** to save, press **【Menu】** again to back to photo mode.

#### 3.2.7 Sensitivity

Adjust photo sensitivity (ISO), automatic mode is recommended;

3.2.7.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Sensitivity", press **【PHOTO】** to enter into the sub-menu;

3.2.7.2 Press **【W/T】** to select desired option: Auto/100/200/400/800/1600/3200/6400

3.2.7.3 Press **【PHOTO】** to save, press **【Menu】** again to back to photo mode.

#### 3.2.8 Time watermark

Sets whether the time and date are displayed on the video

3.2.8.1 Press **【Menu】** to bring up menu options, press **【W/T】** to select "Time stamp".

3.2.8.2 Press **【PHOTO】** to select desired option: Turn on/Turn off

3.2.8.3 Press **【Menu】** to save, and back.

### 3 Use the camera

#### 3.3 Playback photo or video

##### 3.3.1 Enter into playback menu


Press **【W/T】** to turn the page and select files, "Video" icon displayed for video file, "Photo" icon displayed for photo file.

Select the video file and press **【PHOTO】** to play, during the play, press **【PHOTO】** to pause, press **【PHOTO】** again to continue playing.

During video playback, press **【W/T】** to adjust the volume. Press **【MODE】** to exit playback mode.

In playback mode, click the "**◀ ▶**" icon to turn the page. Click the "**▶**" icon to play the video.

Click the screen during playback to pop up "**⏸**" icon in the center of screen, Click the icon to pause. Click the "**✖**" icon to exit the playback mode.

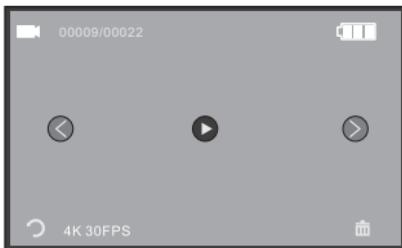

##### 3.3.2 Delete file

In playback mode, delete the videos or photos.

3.3.2.1 Press **【W/T】** to select the file need to be deleted.

3.3.2.2 Press **【MENU】** to pop the options: Confirm to delete the current file, press **【W/T】** to select: Confirm/Cancel.

3.3.2.3 Press **【MENU】** to perform the operation, press **【MODE】** to back to playback mode.

Touch screen operation:

Click the "**◀ ▶**" icon to turn the page. Click the "**✖**" icon in the lower right corner to pop up options: Confirm to delete the current file, click Confirm/ Cancel. Click the "**✖**" icon in the lower left corner to exit.

### 3 Use the camera

#### 3.4 System set


Set system parameters such as language, key tone, light frequency, time and date.

In photo or video mode, press **[MENU]** to enter the setup menu, press **[MODE]** to switch to system set menu, and the gear icon in the upper left corner of the screen will be highlighted, indicates that the system set menu is displayed. The following operations are performed in this menu. After setting, press **[MENU]** to exit system set.

Touch screen operation:

In photo or video mode, click the "MENU" icon in the lower right corner of the screen to enter the setup menu, and click the "⚙" icon to switch to system set.

Click the "↶" icon on the left side of the screen to exit system set.

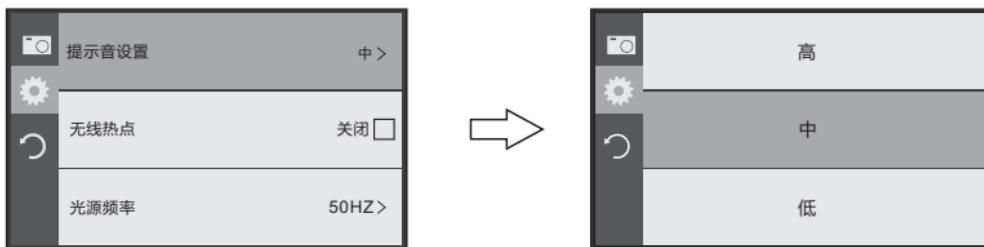

##### 3.4.1 Beep set

This function is to set whether the key sound is on.

3.4.1 In system set menu, press **[W/T]** to select "Beep set", press **[PHOTO]** to enter into the sub-menu;

3.4.2 Press **[W/T]** to select the desired operation: High / Middle / Low/Off.

3.4.3 Press **[PHOTO]** to save and back to system set.

Touch screen operation:

Click "Beep set" to enter into the sub-menu, click the desired operation: High / Middle / Low/Off. It will automatically back to the system set after setting.

The following operations are the same.

### 3 Use the camera

#### 3.4.2 WiFi

Turn WiFi on or off.

3.4.2.1 In system set menu, press 【W/T】 to select "Wi-Fi".

3.4.2.2 Press 【PHOTO】 to selct: Turn on /Turn off.

3.4.2.3 After the option is enabled, wait until the "Wi-Fi information" is displayed. Then, you can connect your mobile phone to the local computer.

#### 3.4.3 Light Source Frequency

Set the frequency of the local light source to avoid flickering in the lighting environment. For details, see using local power frequency.

3.4.3.1 Press 【W/T】 to select "Light Source Frequency " , press 【PHOTO】 to enter into the sub-menu.

3.4.3.2 Press 【W/T】 to selsct: Auto /50Hz/60Hz.

3.4.3.3 Press 【PHOTO】 to save and back to system set.

#### 3.4.4 Timing Off

Set automatic shutdown time of the unit. If not used within a certain period of time, the unit will automatically shut down to save power.

3.4.4.1 Press 【W/T】 to select "Timing Off " , press 【PHOTO】 to enter into the sub-menu.

3.4.4.2 Press 【W/T】 to selsct: Turn off /3minutes/5minutes/10minutes.

3.4.4.3 Press 【PHOTO】 to save and back to system set.

#### 3.4.5 Language

According to user requirements, set the operation language of the machine, which is more consistent with user habits.

3.4.5.1 Press 【W/T】 to select "Language " , press 【PHOTO】 to enter into the sub-menu.

3.4.5.2 Press 【W/T】 to selsct: English/ Francais/ Espanol/ Portugues/ Deutsch/ Italiano/简体中文/繁體中文/ Pyccknn/日语/Arabic

3.4.5.3 Press 【PHOTO】 to save and back to system set.

### 3 Use the camera

#### 3.4.6 Date-Time

Set the local system date format.

3.4.6.1 Press **【W/T】** to select “Date-Time” , press **【PHOTO】** to enter into the sub-menu.

3.4.6.2 Press **【W/T】** to selsct desired time format.

3.4.6.3 Press **【PHOTO】** to save and back to system set.

#### 3.4.7 Time Set

Set the system time of this machine.

3.4.7.1 Press **【W/T】** to select “Time Set” , press **【PHOTO】** to enter into the sub-menu.

3.4.7.2 In sub-munu, press **【MODE】** to switch among:Hour/Minute/Second, press **【MODE】** to adjust the value.3.4.7.3 Press **【PHOTO】** to save and back to system set.

#### 3.4.8 Date Set

Set the system time of this machine.

3.4.8.1 Press **【W/T】** to select “Date Set” , press **【PHOTO】** to enter into the sub-menu.

3.4.8.2 In sub-munu, press **【MODE】** to switch among:Year/Month/Day, press **【MODE】** to adjust the value.

3.4.8.3 Press **【PHOTO】** to save and back to system set.

#### 3.4.9 Formatting

This function can format memory card. After formatting, all files in the unit and memory card will be deleted and cannot be restored. Be cautious with this function.

3.4.9.1 Press **【W/T】** to select “Formatting” , press **【PHOTO】** to enter into the sub-menu.

3.4.9.2 Press **【W/T】** to selsct desired option: Format/Cancel.Select “Cancel” to do not perform formatting.

3.4.9.3 Select “Format” , and press **【PHOTO】** to execute. After formatting, the system automatically returns to system set.

**Notice:**

*Format operation deletes all files in the unit and memory card and cannot be restored. Use this function with caution.*

## 3 Use the camera

### 3.4.10 Version Information

View the software version of the local machine.

3.4.10.1 Press **【W/T】** to select “Version Information”.

3.4.10.2 Press **【PHOTO】** to enter into the sub-menu, the version information will be displayed on the screen, and then press **【PHOTO】** again to exit.

### 3.4.11 Factory Reset

Use this feature to restore the factory default settings, when incorrect settings prevent the machine from working properly.

3.4.11.1 Press **【W/T】** to select “Factory Reset” ,

3.4.11.2 Press **【PHOTO】** to enter into the sub-menu.

3.4.11.2 Press **【W/T】** to Select whether to restore factory settings: Cancel/Confirm

When selecting “Cancel”, the factory default settings will not be restored.

When selecting “Confirm”, press **【PHOTO】** to execute, and it will return automatically after execution.

**Notice:**

*Restoring factory settings does not delete files.*

## 4 使用WIFI功能

This machine has wireless function, It can be connected with the mobile phone via WIFI, and operate the machine with the mobile phone.

The name of APP is Roadcam, which can support Android system and IOS system. Before use, please install the APP according to your mobile phone first.

### 4.1 Installation of APP

4.1.1 Android system, scan the QR code, and download and install the "Roadcam" APP follow the phone prompt.

Android system



IOS system



4.1.2 IOS system, scan the QR code, and download and install the "Roadcam" APP follow the phone prompt.

### 4.2 Connect to mobile phone

4.2.1 Switch the machine to photo or video mode, long press **【DISP/Wi-Fi】**, The WiFi informations will be displayed on the screen: WiFi ID: Ultra-HD-4K, WiFi pwd: 12345678.

OSD



Mobile phone display



## 4 WiFi connection

4.2.2 Open setup menu of phone, click WiFi settings, and select "Refresh". The phone finds the device named "Ultra-HD4K", click connect to the device, enter the WiFi password: 12345678 in the prompt window, and click confirm to connect.

4.2.3 After successful connection, open the APP on the phone, operate as prompted by the APP.

4.2.4 After using, press 【DISP/Wi-Fi】 to turn off WiFi and back to the preview screen.

**Notice:**

*The operating method of Android system and IOS system may be a little different, please perform this operation based on the characteristics of different mobile phones.*

## 5 Appendix

### 5.1 Specification

Image sensor	CMOS 13MP CMOS sensor
Memory medium	Build-in 128MB flash, expandable SD /HCSD card up to 128GB
ISO	Auto, ISO100, ISO200, ISO400, ISO800, ISO1600, ISO3200, ISO6400
Lens	Fixed lens F:2.4, f=7. 35mm
Focal distance	1.0m~infinite
Photo	Format : JPEG Resolution : 5M, 8M, 12M, 16M, 20M, 24M, 36M, 48M (Interpolation)
Video	Format : MP4, H.264 Resolution : 4K/60fps,4K/30fps,2K/30FPS,1080P/60FPS,1080P/30FPS,720P/60FPS,720P/30FPS
Zoom	16X digital zoom
DIS	Yes , EIS anti-shake
IR night vision	Support
White balance	Auto/Daylight/Cloudy/Tungsten/Fluorescent
EV	-3.0EV~+3.0EV
Capture mode	Off/3S Timer/5S Timer/10S Timer/20S Timer
PC interface	USB2.0 (high speed)
LED screen	3. 0" IPS HD Touch Screen
Speaker	Built-in , Compatible with external microphone input
External MIC	Yes, 3. 5mm coaxial, output impedance : 0. 2KΩ~2. 2KΩ
Speaker	Built-in
HDMI output	Yes

## 5 Appendix

WiFi	Support, connect to mobile phone
Remote control	Yes, 6M
Battery	Li-ion NP-180
Adopter	Yes, USB Output DC 5V/1.5A
Language	English/ Francais/ Espanol/ Portugues/ Deutsch/ Italiano/简体中文/繁體中文/ Pyccknn/日语/Arabic
Dimension	123(L)×58(W)×67(H)mm
Weight	Approx 283±5g(battery exclude)

### 5.2 Common problems and solutions

Problem	Potential cause	Solution
Can't be powered up	Incorrect battery installation/Low power	Install the battery correct/Charge the battery
Black screen of death	Under Power-saving mode/Low power	Reboot the camcorder, turn off the power saving function /Charge the battery
Can't take pictures or videos	Memory card isn't formatted before use	Format the memory card
	Memory card speed is too low	Use class 10 or faster memory card
	Memory card with protection	Cancel the protection of memory card
Picture/video is ambiguous	Lens is dirty foreign body on it	Clean the lens and keep it clean
Prompt memory card error	Memory card with protection	Cancel the protection of memory card
	File format is wrong/memory card is damaged	Format the memory card /use qualified card

**Common problems and solutions**

<b>Problem</b>	<b>Potential cause</b>	<b>Solution</b>
Suddenly shut down	The memory card is not qualified	Use qualified memory card
Picture/video color derangement	Settings of White Balance/Color/Exposure are wrong	Set correct parameter. If user doesn't know how to set, just reset and back to factory default settings
The remote control doesn't work	The camera receive window is blocked	Remove the cover
	No battery in remote control/no power	Replace a new battery
	Too Long a distance	Use the remote in specified range
External MIC works abnormally	No battery in External MIC /no power	Install the battery full of electricity
	Eternal MIC connect incorrectly	Connect correctly
	External MIC parameter is wrong	Set correct parameters
Abnormal connection to PC	Wrong connection/USB cable is damaged	Reconnect/use a qualified USB cable
Videos doesn't play fluently	Computer configuration is low	Use a qualified computer

## FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## ISED Canada Statement:

This device contains licence-exempt trasnsmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada 's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Radiation Exposure: This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment

## RF Exposure Statement

To maintain compliance with IC's RF Exposure guidelines, The installation and operation of the device should meet the requirements for portable devices. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

## Déclaration du Canada:

Ce dispositif contient des transmetteurs/récepteurs trasnsmitters exemptés de licence qui sont conformes à l'innovation, à la Science et au développement économique

Les flux RSS du Canada exempts de licences. L'exploitation est soumise aux deux conditions suivantes:

- 1) cet appareil ne doit pas causer d'interférences et
- 2) ce dispositif doit accepter toute interférence, y compris toute interférence pouvant entraîner un fonctionnement indésirable du dispositif.

Exposition au rayonnement: cet équipement est conforme aux limites d'exposition au rayonnement établies par le Canada pour un environnement non contrôlé

## Déclaration d'exposition aux RF

Pour rester en conformité avec les lignes directrices d'exposition RF d'IC, Cet équipement doit être installé et actionné conformément aux exigences de l'équipement portable. Ce dispositif et ses antennes ne doivent pas être co-localisés ni fonctionner en conjonction avec une autre antenne ou un autre émetteur

The pictures in this manual are for reference only, please refer to the actual product.  
The company reserves the right of final interpretation.  
The data and parameters are subject to change without prior notice.