

# SHAKS S6i/S6b

This is a quick guide for setup SHAKS. For the full user manual, please visit our website (<https://shaksgame.com/en>). If any question, please contact us (<https://shaks.channel.io>)

Quick Guide v0.2



## Overview of LED Signals

	1		2		3		4
							Paring
							Reconnect
							Android
							Windows, macOS, Chrome
							iOS
							Mapping(Android)
							Wired
							Option on
							Charging
							Low Battery

## SHAKS GameHub App (Only for Android)

※ Please search for SHAKS Game Hub in Google Playstore or download and install app from the QR code.

※ While you do not need to install app on your mobile phone to use the gamepad, we highly recommend so you can benefit from the following features from the mobile app:

- Check gamepad keys and buttons
- Touch mapping (convert touch keys into controller keys)
- Turbo, sniper, mouse
- Firmware upgrade

※ Note) When upgrading the gamepad firmware, please connect the charging cable.



## Playing on Mapping Mode (for Android only)

- 1 Mode setting : Power off, change the mode to (  ) and power it on.
- 2 Check Mode: Check if all LED signals are off. If not, please repeat step above.
- 3 Bluetooth Pairing: Press [Select + Start] simultaneously for 3 seconds. On your device select "SHAKS S6i/S6b xxxx mapping". Once paired, gamepad will remember and will reconnect automatically.
- 4 Now you are ready to play games with mapped keys on your device! Only when you are in the mapping mode you can use touch keys as gamepad controllers that you set up.

※ NOTE ) If you wish to play on non-mapping mode on the same Android device, please delete "SHAKS S6i/S6b xxxx mapping" and follow "Connecting with an Android Device (Phone, Tablet, or TV Box)" to set up and reconnect the Android device.

## How to use mapping mode

- 1 Firstly, from Google Play, download SHAKS GameHub App.
- 2 Go to SHAKS GameHub App and make sure your pad is properly connected in mapping mode.
- 3 Click  at the bottom> Mapping Presets  the game you want to play to add it.
- 4 You can download the mapping data and play the game, or you can register without the data and play after creating the mapping data through editing.

## Wired connecting with a USB Cable for Windows, Android

- 1 Mode Set Up: When the power is off, press 'Start' button and connect USB cable to your device.
- 2 Check Mode: Check if all signals are off while  button is on.

※ Recommended to use Windows 10 or later. If you are using Windows 7, please install "Xbox 360 driver" driver first on your PC that you can find on our website.

## Resetting Gamepad Connections

Press and hold the 'Select' and 'Start' buttons on the gamepad for at least 6 seconds to remove all devices connected to the current mode. Then, on each computer or smartphone, please follow the steps below to manually remove and reconnect the devices.

- For Android devices, please repeat the Bluetooth device search two or three times before connecting to the gamepad.
- For Windows computers, please proceed as follows
  1. Do not connect the gamepad the first time it appears in the Bluetooth search bar.
  2. Power off your gamepad. Wait until the gamepad disappears from the list in the search bar.
  3. When it disappears from the list, power on the gamepad.
  4. When it reappears in the list, connect the gamepad.

If the connection is not successful, please delete the gamepad, turn the Bluetooth function off and on, or reboot your smartphone/computer.

## How to 3 step Setup

- 1 Select gamepad mode for your device in the table.
- 2 Power off (Press 'Power Button' for more than 3 sec) then, change the "Mode Switch"
- 3 Power on (Press 'Power Button' for more than 3 sec), pair Bluetooth, and enjoy!

Your Device	Gamepad Mode	Bluetooth Name	Mode Switch *
Android, Fire TV, Fire stick		SHAKS S6i xxxx Andorid SHAKS S6b xxxx Andorid	
Windows, Mac, Chrome		SHAKS S6i xxxx Win-Mac SHAKS S6b xxxx Win-Mac	
iPhone, iPad		SHAKS S6i xxxx iOS Xbox Wireless Controller	
Android (Mapping)		SHAKS S6i xxxx mapping SHAKS S6b xxxx mapping	

## Connecting with an Android Device (Phone, Tablet, TV Box, Fire TV, Fire Stick)

- 1 Mode setting : Power off, change the mode to (  ) and power it on.
- 2 Check Mode: Check if LED signals #1 and #2 are off, #3 and #4 are on. If yes, it is connecting to an Android device. If not, please repeat step above.
- 3 Bluetooth Pairing: Press [Select + Start] simultaneously for 3 seconds. On your device, select "SHAKS S6i/S6b xxxx Android". Once paired, gamepad will remember and will reconnect automatically.

※ NOTE ) If you wish to play on mapping mode on the same Android device, please delete "SHAKS S6i/S6b xxxx Android" and follow "Playing on Mapping Mode (for Android only)" to set up and reconnect the Android device.

## Connecting with a Windows, Mac OS, Chromebook

※ Please download utility on our website. ([https://shaksgame.com/manual/windows\\_eng](https://shaksgame.com/manual/windows_eng))

- 1 Mode setting : Power off, change the mode to (  ) and power it on.
- 2 Check Mode: Check if LED signals #1, #2, #3 are off, only #4 is on. If yes, it is connecting to a Windows /Mac OS, Chromebook device. If not, please repeat step above.
- 3 Bluetooth Pairing: Press [Select + Start] simultaneously for 3 seconds. On your device, select "SHAKS S6i/S6b xxxx Win-MAC". Once paired, gamepad will remember and will reconnect automatically.

※ Recommended to use Windows 10 or later. If you are using Windows 7, please install "Xbox 360 driver" driver first on your PC that you can find on our website.

※ Recommended to use Big Sur or later of Mac OS

※ While it is not required, we highly recommend to download utility application on our website ([https://shaksgame.com/manual/windows\\_eng](https://shaksgame.com/manual/windows_eng)) on your device. You can use our advanced features such as turbo and sniper including FW update from the app!

## Connecting with iOS Device (iPhone or iPad)

※ Minimum OS version : 13 or later.

- 1 Mode setting : Power off, change the mode to (  ) and power it on.
- 2 Check Mode: Check if LED signals #1, #2, #4 are off, only #3 is on. If yes, it is connecting to an iOS device. If not, please repeat step above.
- 3 Bluetooth Pairing: Press [Select + Start] simultaneously for 3 seconds. On your device, select "SHAKS S6i xxxx iOS" or "Xbox Wireless Controller". Once paired, gamepad will remember and will reconnect automatically.

## How to Customize Function Button

- Function button is set at default as a mouse.
- If you wish to change the function button into another feature besides mouse, run the app on your device. Go under "Setting > Function Key Setting" to choose from:

Features	Wireless BT Mode				Wired Xinput
	Android	Windows	MFi(iOS)	Mapping	
Virtual Mouse	Yes				
Turbo	Yes	Yes	Yes	Yes	Yes
Sniper	Yes	Yes	Yes	Yes	Yes
Camera	Yes				
Call/Media Button	Yes				

※ Customization of option button is not supported in iOS. We are developing now. Please check back at our website in '21 Q1 for updates.

## Set up Macro

Macro buttons (M1, M2) allow you to conveniently press multiple desired button combinations with a single button. To use them, go to Button Settings in the Game Hub app > Button Placement Settings > Tap the button you want to register for a macro, then select > Set Macro Keys > Select the macro you want to use to enable it.

※ The buttons can be set are A, B, X, Y, L, R, LB, LT, RB, RT, DPAD, L3 (stick click), R3, Select, and Start.

※ Joystick is not available.

## To adjust Trigger

The LT,RT stop gear allows you to adjust the RT, LT depth. Ultra-Fast, Medium, and Normal Mode can be adjusted in three stages.

1. Set the desired step and move the stopper.
2. Press Function 1 and Function 2 at the same time.
3. Verify that the change to vibration has been completed.

## How to charge

• Charge battery by charging cable from a computer or USB power charging device. You can play S6i while charging.

When battery low	When charging	When charged fully
 fast blinking	 slow blinking	 stops blinking

※ Input Voltage : 5V ==

## How to play with the SHAKS gamepad

For more information, scan the QR to the right to visit our homepage.

[https://www.shaksgame.com/game\\_list/english](https://www.shaksgame.com/game_list/english)



# SHAKS S6i/S6b


SHAKS 설정을 위한 빠른 가이드입니다. 전체 사용 설명서는 당시 웹 사이트(<http://shaksgame.com>)를 참조 해주세요. 질문이 있는 경우 당시에 문의해주세요 (<https://shaks.channel.io>)

## LED 상태



## 각 부위 명칭

LED #1,2는 연결과 충전상태를 나타내고, LED #3,4는 게임패드 모드를 나타냅니다.

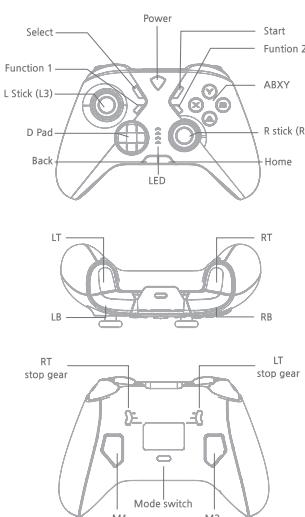

## 샥스 게임 허브 (안드로이드 전용)

※ 구글 플레이스토어에서 "샥스 게임허브"를 검색하거나 QR코드를 사용해주세요.

※ 샺스 게임허브 앱은 샺스 게임패드를 사용 시 선택 사항입니다.

다음 기능을 이용할 시 이 앱을 사용하는 것이 좋습니다.

- 게임패드 테스트, 펌웨어 업데이트, 게임패드 정보 확인
- 매핑 모드 (터치 키를 게임패드 키에 매핑)
- 터보, 스나이퍼, 가상 마우스 등의 기능 설정
- 빠른 가이드, 비디오 튜토리얼, 도움말 요청, 절전 시간

※ 참고) 게임패드 펌웨어 업그레이드 시, 충전 케이블을 연결해 주십시오.

Quick Guide v0.2



## 3단계 빠른 설정

① 표에서 장치의 게임패드 모드를 선택합니다.

② 전원을 끈 다음 ('전원 버튼'을 3초 이상 누름) "모드 스위치"를 변경합니다

③ 전원을 켜고 ('전원 버튼'을 3초 이상 누르고) 블루투스를 페어링 한 후 플레이해주세요

장치	LED 상태	블루투스 이름	단축키 *
Android, Fire TV, Fire stick		SHAKS S6i xxxx Andorid SHAKS S6b xxxx Andorid	
Windows, Mac, Chrome		SHAKS S6i xxxx Win-Mac SHAKS S6b xxxx Win-Mac	
iPhone, iPad		SHAKS S6i xxxx iOS Xbox Wireless Controller	
Android (Mapping)		SHAKS S6i xxxx mapping SHAKS S6b xxxx mapping	

## Android 장치 (휴대폰, 태블릿, TV Box, Fire TV, Fire Stick)와 연결

① 모드 설정 : 전원을 끄고 ()로 변경한 후 전원을 켭니다.

② 모드 확인 : LED 신호 # 1, # 2가 꺼져 있는지, # 3, # 4가 켜져 있는지 확인합니다. 그렇다면 Android 장치에 연결 중입니다. 아니라면 위의 단계를 반복하십시오.

③ 블루투스 페어링 : [Select + Start]를 동시에 3초 동안 누릅니다. 장치에서 "SHAKS S6i/S6b xxxx Android"을 선택합니다. 페어링되면 게임 패드가 기억하고 자동으로 다시 연결됩니다.

※ 동일한 Android 기기에서 매핑 모드로 플레이하려면 "SHAKS S6i/S6b xxxx Android"을 삭제하고 "Android 장치 (휴대폰, 태블릿 또는 TV Box)와 연결"에 따라 Android 기기를 설정하고 다시 연결하십시오.

## Windows, Mac OS, Chromebook과 연결

① 모드 설정 : 전원을 끄고 ()로 변경한 후 전원을 켭니다.

② 모드 확인 : LED 신호 # 1, # 2, # 3이 꺼져 있고 # 4만 켜져 있는지 확인합니다. 그렇다면 Windows / Mac 장치에 연결 중입니다. 아니라면 위의 단계를 반복하십시오.

③ 블루투스 페어링 : [Select + Start]를 동시에 3초 동안 누릅니다. 장치에서 "SHAKS S6i/S6b xxxx Win-MAC"을 선택합니다. 페어링되면 게임 패드가 기억하고 자동으로 다시 연결됩니다.

※ Windows 10 이상 사용을 권장합니다. Windows 7을 사용하는 경우 당시 웹 사이트에서 찾을 수 있는 "Xbox 360 드라이버"드라이버를 먼저 PC에 설치하십시오.

※ Mac OS의 Big Sur 이상 사용 권장

※ 필수 사항은 아니지만, 홈페이지 (<https://shaksgame.com/>)에서 SHAKS용 Windows 애플리케이션을 기기에 다운로드하는 것이 좋습니다. 앱에서 FW 업데이트를 포함한 터보 및 스나이퍼와 같은 고급 기능을 사용할 수 있습니다.

## iOS 장치 (iPhone 또는 iPad) 연결

※ 최소 OS 버전: iOS 13 이상

① 모드 설정 : 전원을 끄고 ()로 변경한 후 전원을 켭니다.

② 모드 확인 : LED 신호 # 1, # 2, # 4가 꺼져 있고 # 3만 켜져 있는지 확인합니다. 그렇다면 iOS 장치에 연결 중입니다. 아니라면 위의 단계를 반복하십시오.

③ 블루투스 페어링 : [Select + Start]를 동시에 3초 동안 누릅니다. 장치에서 "SHAKS S6i xxxx iOS" 또는 "Xbox Wireless Controller"를 선택합니다. 페어링되면 게임 패드가 기억하고 자동으로 다시 연결됩니다.

## 다기능(Function) 버튼 설정

• 다기능 버튼은 기본적으로 마우스로 설정되어 있습니다.

• 다기능 버튼을 마우스 이외의 다른 기능으로 변경하려면 기기에서 앱을 실행하세요. "설정" 기능 키 설정"으로 이동하여 다음 중에서 선택하십시오.

기능 / 모드	블루투스 모드				유선 모드
	Android	Windows	iOS	매핑	
마우스	o				
터보등락	o	o	o	o	o
스나이퍼	o	o	o	o	o
카메라	o				
전화수신	o				

※ 샷스 게임허브 앱은 iOS에서 지원되지 않으며 현재 개발 중입니다.

업데이트는 <http://shaksgame.com/>에서 확인해주세요.

## 마크로 설정하기

마크로 버튼(M1, M2)은 원하는 여러 버튼 조합을 버튼 하나로 편리하게 누를 수 있도록 합니다. 게임허브 앱에서 버튼 설정 > 버튼 배치 설정 > 마크로에 등록할 버튼을 누른 후 마크로 키 설정 > 사용할 마크로를 선택하여 사용이 가능합니다.

※ 설정 가능한 버튼은 A, B, X, Y, L, R, LB, LT, RB, RT, DPAD, L3(스틱 클릭), R3, Select, Start 입니다.

※ 조이스틱은 사용할 수 없습니다.

## 트리거 조정하기

Stop gear를 통해 RT, LT 깊이를 조정할 수 있습니다.

Ultra- Fast, Medium, Nomal Mode 총 3단계로 조정이 가능합니다.

1. 원하는 단계를 정하고 Stop gear를 움직입니다.

2. Function 1, Function 2를 동시에 누릅니다.

3. 진동으로 변경이 완료된 것을 확인합니다.

## 충전하는 방법

- 컴퓨터 또는 USB 전원 충전기를 통해 동봉된 USB 케이블을 사용하여 배터리를 충전할 수 있습니다. 전원 충전 상태를 확인해주세요 (충전 중에 게임패드 사용이 가능합니다)

배터리가 부족하면	배터리 충전중이면	충전이 완료되면

※ 입력 전압 : 5V ==

## 샥스 게임패드로 게임하는 방법

사세한 내용은 오른쪽 QR을 스캔하여 홈페이지를 참조해 주세요

[https://www.shaksgame.com/game\\_list/kor](https://www.shaksgame.com/game_list/kor)



FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device

must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.