

Gidbo

Smart AC controller


User Manual



1 Installation	1
2 Smart Phone App	2
2.1 Create an account	3
2.2 Login	4
2.3 Navigation Menu	5
2.4 My Homes	6
2.4.1 Create a new Home	7
2.4.2 Edit Home	8
2.4.3 Share a Home (add a guest)	9
2.4.4 Remove a guest	10
2.4.5 Delete a home	11
2.5 Add a new device	12
2.6 Control your AC	16
2.6.1 Select an AC unit	16
2.6.2 Control your AC	17
2.6.3 Schedule	18
2.6.4 Settings	19
2.7 User Settings	20

1 Installation

Attach the Gidbo controller onto the wall near the AC unit with the double side tape. There is no tool needed. Make sure there is no object in the way that may lower the quality of transmission

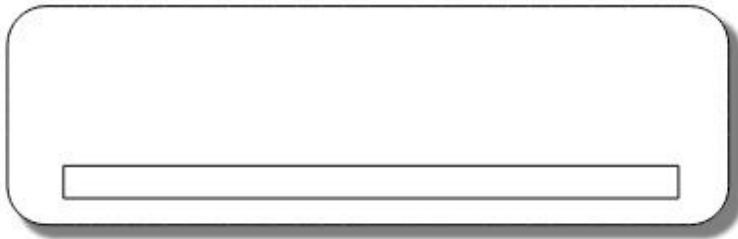

2 Smart Phone App

Download the app **Gidbo** on Google Play or Apple Store



2.1 Create an account

Create an account the first time you use the app: click “new user?” and enter you a username, email and password. Your username and email needs to be valid and different from any other users

Sign Up

Gidbo

Email Address

Username


Password [Show](#)

Sign Up

Already Have account?

2.2 Login

If you already created an account go to the login screen and enter your username or email and your password

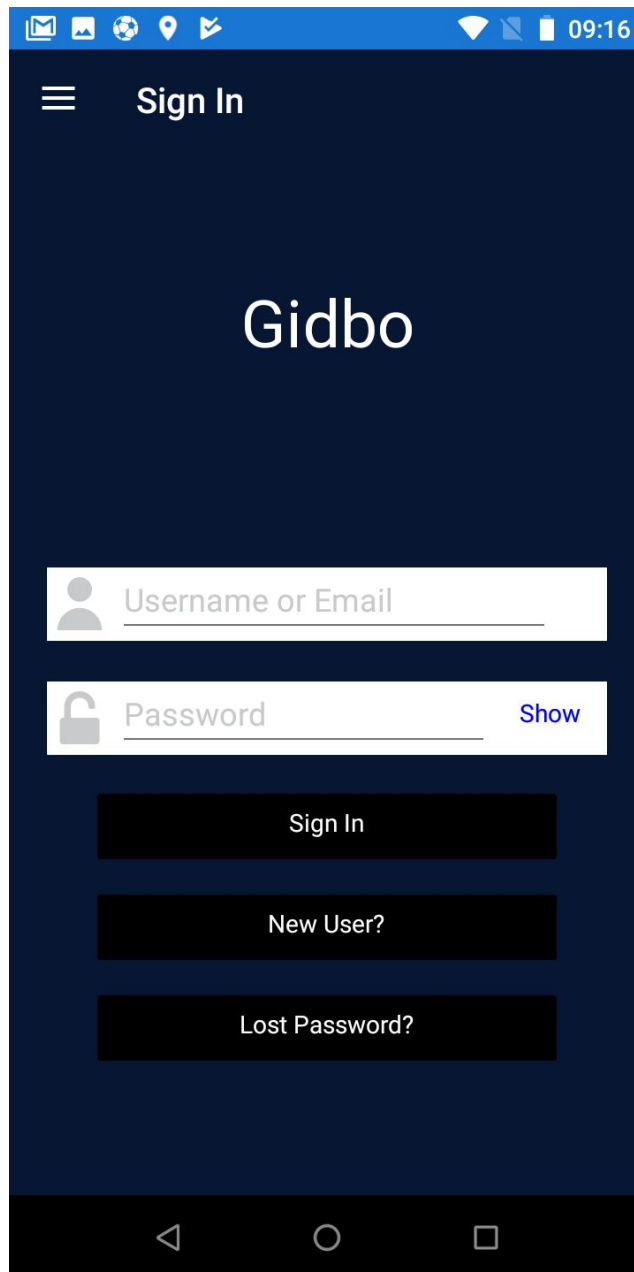

The screenshot shows a mobile application interface for 'Gidbo'. At the top, there is a blue status bar with various icons and the time '09:16'. Below this is a dark blue header with a hamburger menu icon and the text 'Sign In'. The main content area is dark blue with the 'Gidbo' logo in white. There are two input fields: 'Username or Email' with a person icon and 'Password' with a lock icon and a 'Show' link. Below the input fields are three buttons: 'Sign In', 'New User?', and 'Lost Password?'. The bottom of the screen shows the Android navigation bar.

09:16

Sign In

Gidbo

Username or Email

Password [Show](#)


Sign In

New User?

Lost Password?

2.3 Navigation Menu

When you are logged in, main functions can be accessed from a side menu

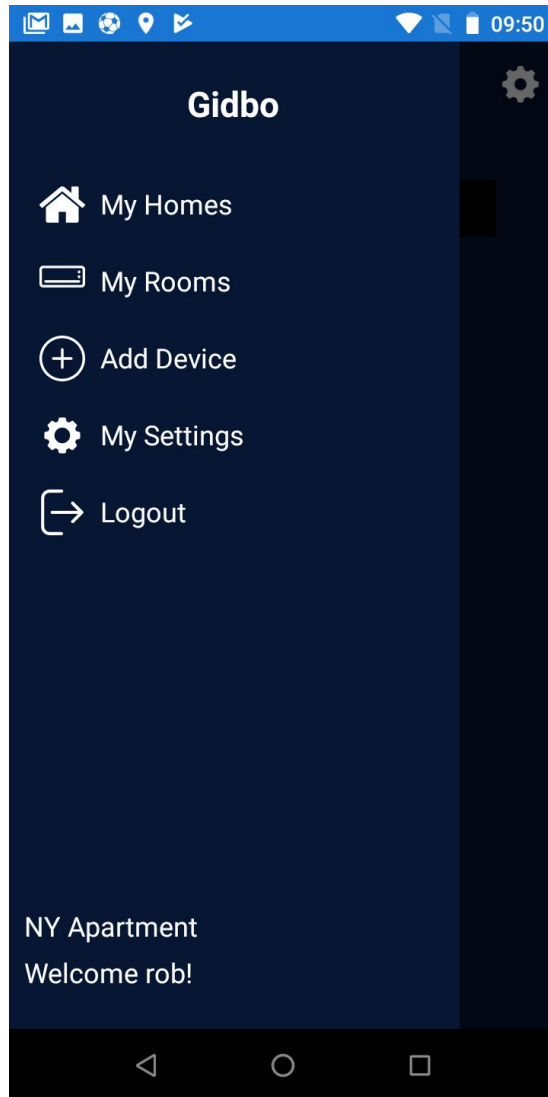

2.4 My Homes

Click “My Homes” in the side menu to access the list of your homes. When you first log in, a Default Home is created. You can select a home by clicking on it. The selected home will show in the side menu.



2.4.1 Create a new Home

Click “Add new Home” at the bottom of the “My Homes” screen. Enter the name of the home and the address. Get as detailed as possible for the address - street number and name, zip code, city, country. This information are used to precisely locate you home. Click “Confirm” when done

NY Apartment

Address

60 East 65th St NYC NY 10065

Guests

No any guests found at the moment.


Confirm

Share

Delete Home


2.4.2 Edit Home

From “My Homes” screen, click the home you want to edit. It will take you to the selected home screen. The name of the home appears on the top of the screen. In the top right corner, click the setting icon. You will then be able to change the name or address of the home and add eventual guest.

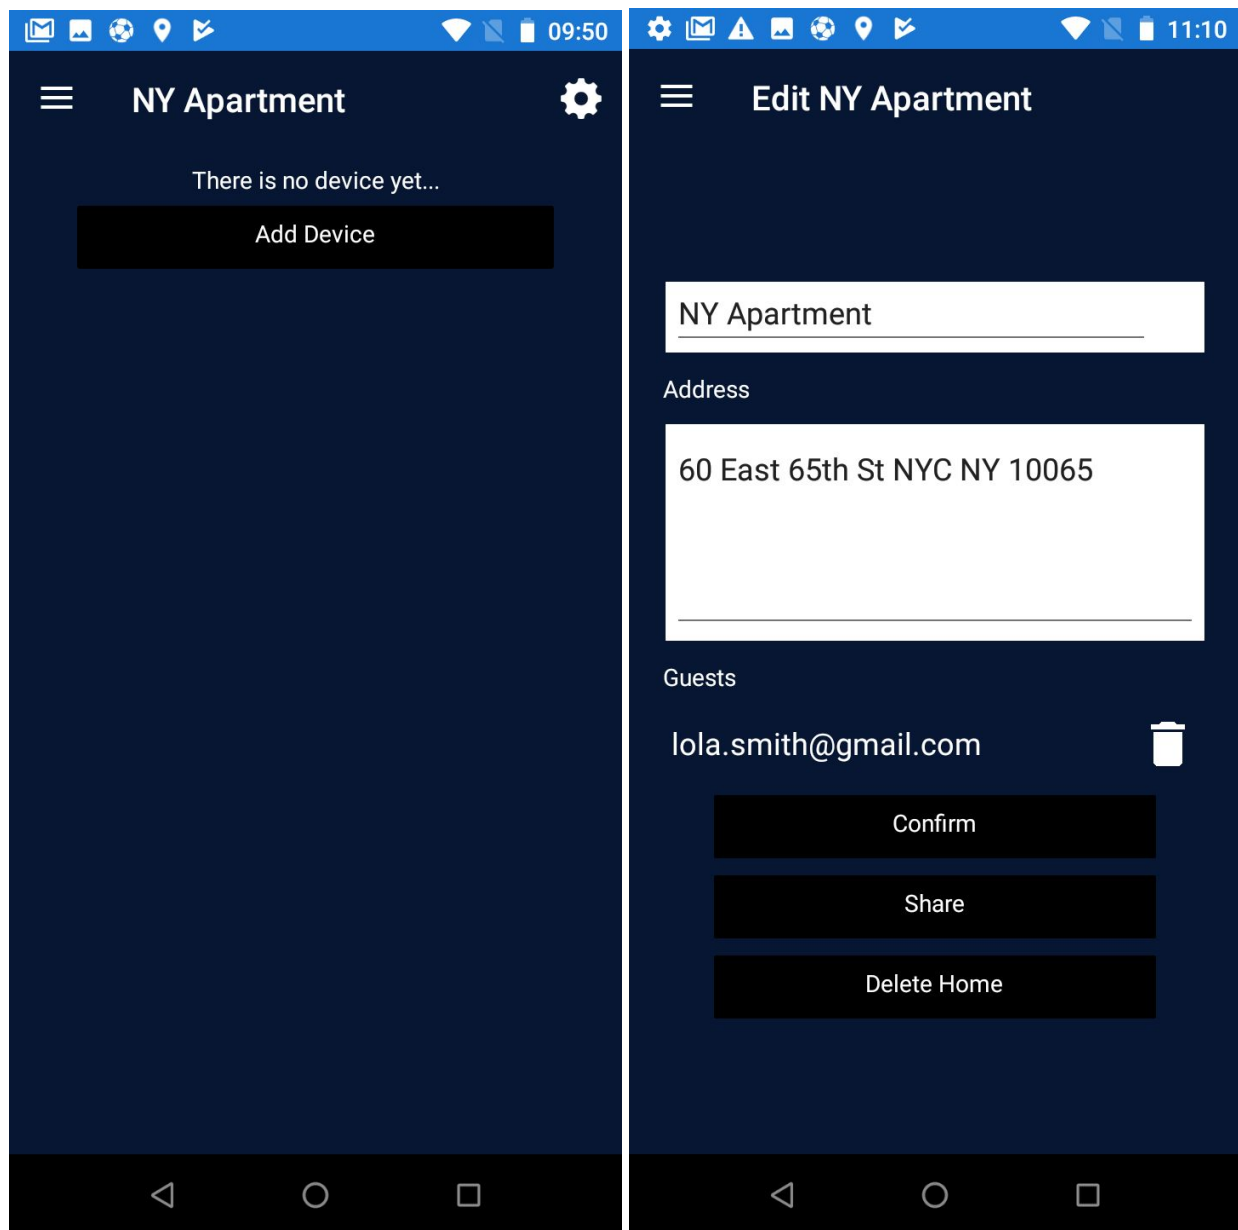


2.4.3 Share a Home (add a guest)

From the 'Edit Home" screen click the "Share" button. You are prompted to enter the email of the user you want to share the home with. Note that this user needs to create an account first. You can monitor the list of guests for a home in the 'Edit Home" screen.

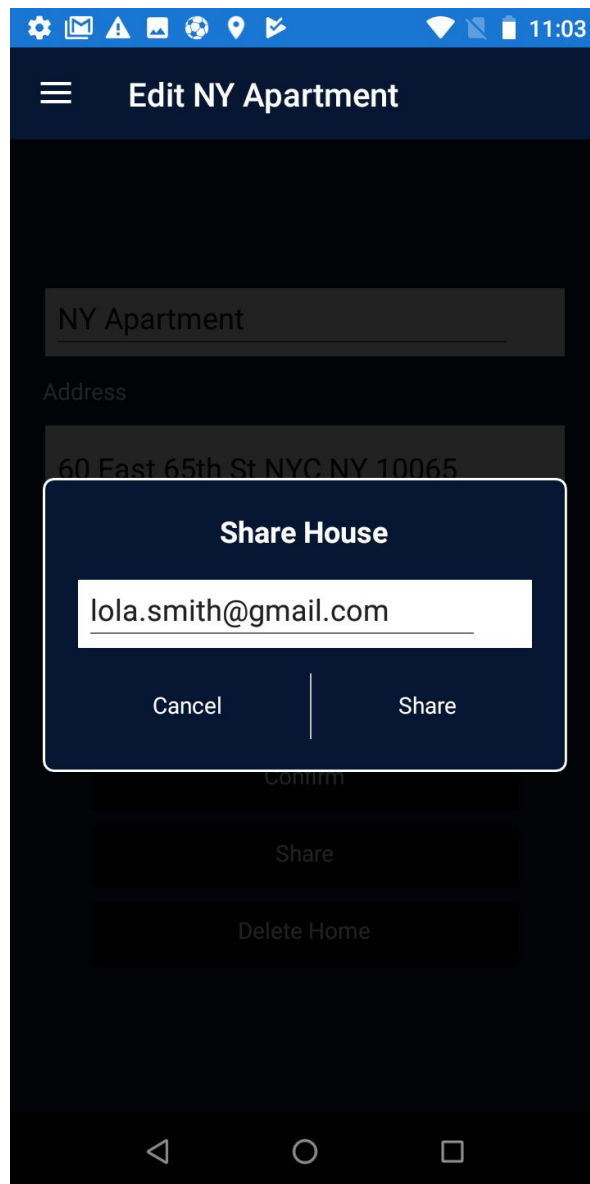


2.4.4 Remove a guest

In the “Edit Home” screen, click the basket icon on the right side of the guest email.

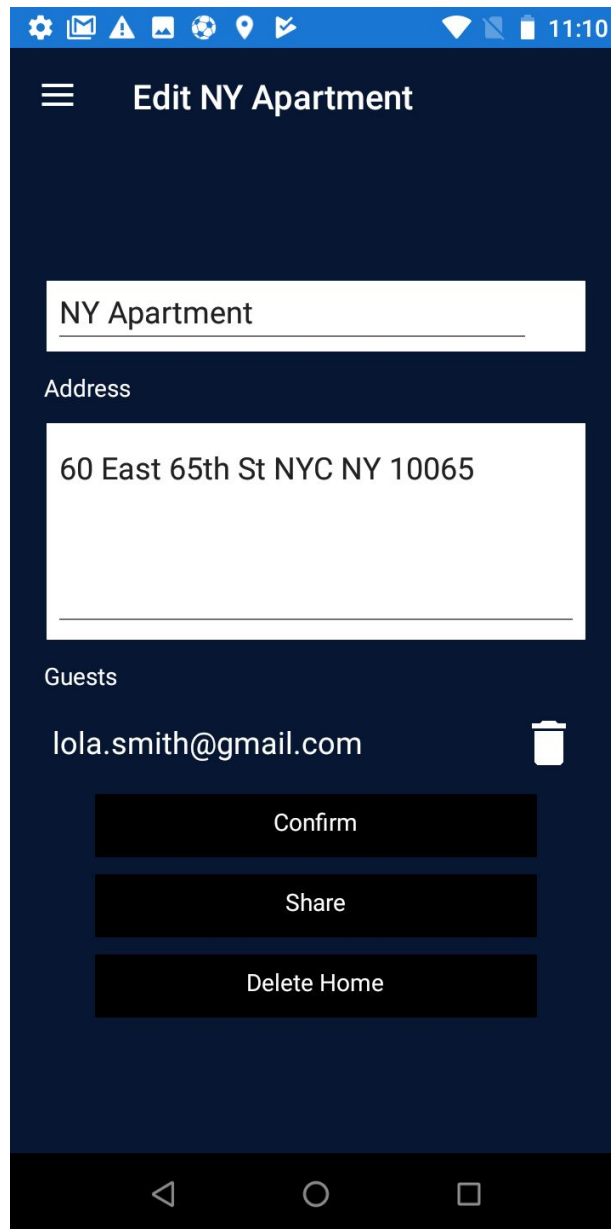

2.4.5 Delete a home

From the “Edit Home”, click the “Delete Home” button to remove a home. Note that you can only do so if there is no device linked to this home. You may transfer these device to another home or simply remove them before.

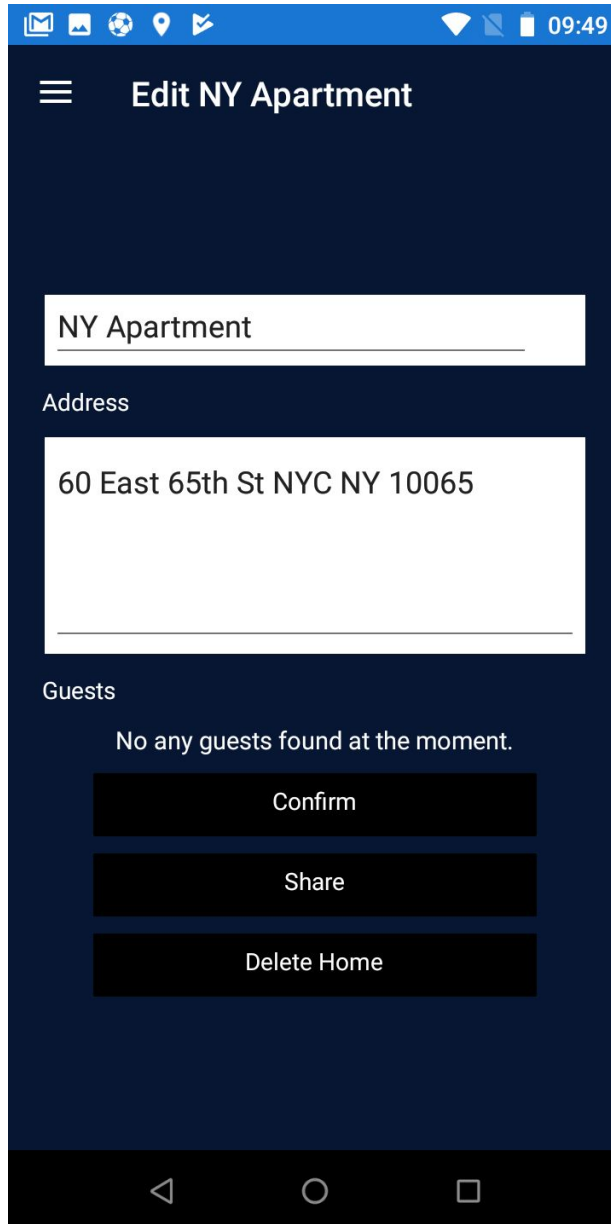


The screenshot shows a mobile application interface for editing a home. At the top, there is a blue status bar with various icons and the time 09:49. Below this is a dark blue header with a hamburger menu icon and the title "Edit NY Apartment". The main content area is white and contains a form with two text input fields. The first field is labeled "NY Apartment" and contains the text "NY Apartment". The second field is labeled "Address" and contains the text "60 East 65th St NYC NY 10065". Below the address field, there is a section titled "Guests" which displays the message "No any guests found at the moment." At the bottom of the form, there are three black buttons with white text: "Confirm", "Share", and "Delete Home". The bottom of the screen shows a black navigation bar with three white icons: a back arrow, a circle, and a square.

2.5 Add a new device

From the side menu, click “Add device”. You can also do it from “My Home” screen when the home has not any device linked yet. Scan the QR code on the back of the device. You can also tap on the bottom of the screen to enter manually the key that appears on the label.




You then select the WiFi name and password you want your device to operate. By default the Wifi of your smartphone is selected but more WiFi can be browsed by clicking on the Wifi name. Click connect when information are filled.

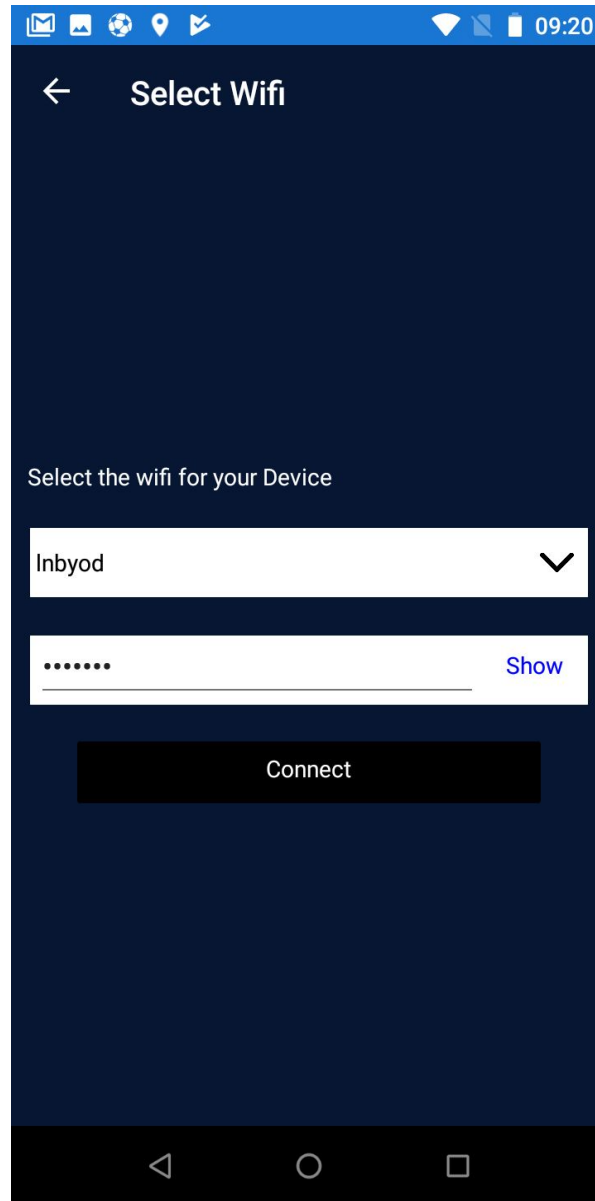


The screenshot shows a mobile application interface with a dark blue background. At the top, there is a status bar with various icons and the time 09:20. Below the status bar is a header with a back arrow and the text "Select Wifi". The main content area contains the instruction "Select the wifi for your Device". Below this is a white input field with the text "Inbyod" and a downward arrow icon. Underneath the input field is another white input field with a password mask of seven dots and a blue "Show" link to its right. At the bottom of the form is a black button with the text "Connect". The bottom of the screen shows the standard Android navigation bar with back, home, and recent apps icons.

You are prompted to switch your phone's WiFi to the hotspot of your device. Do so in the settings of your phone and come back to the App and hit "continue".

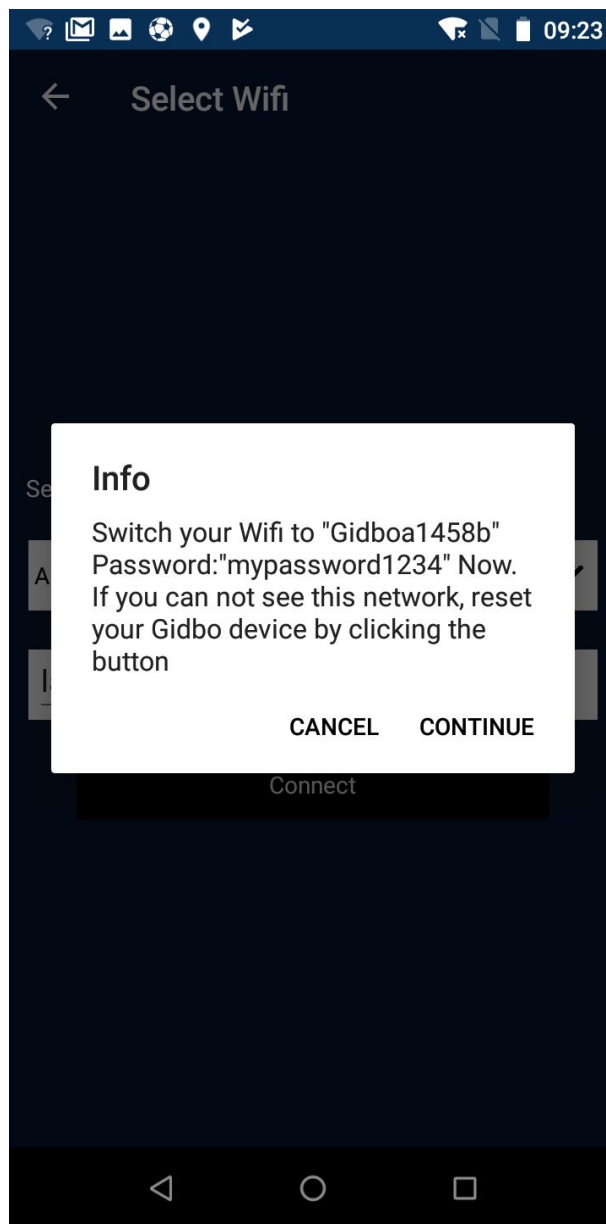

Enter a room name and then select the house you want to add the device to and hit "Confirm".

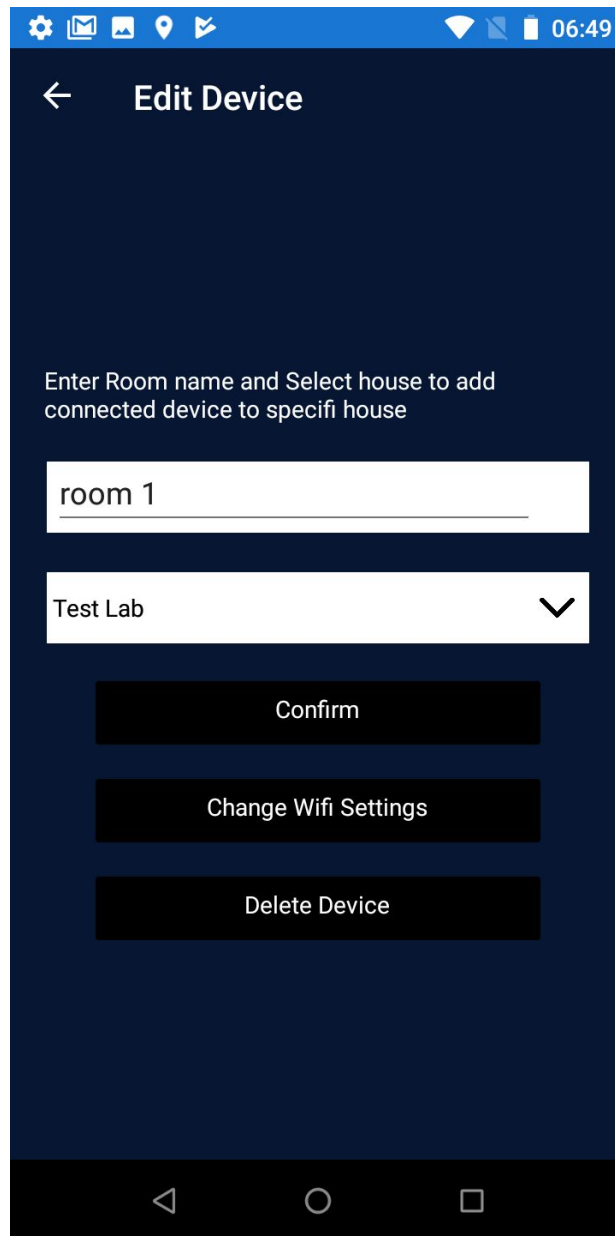

The screenshot shows a mobile application interface with a dark blue background. At the top, there is a status bar with various icons and the time 06:49. Below the status bar is a header with a back arrow and the title "Edit Device". The main content area contains a text input field with the text "room 1" and a dropdown menu with the text "Test Lab" and a downward arrow. Below these are three buttons: "Confirm", "Change Wifi Settings", and "Delete Device". The bottom of the screen shows the Android navigation bar with back, home, and recent apps icons.

06:49

← Edit Device

Enter Room name and Select house to add connected device to specifi house

room 1

Test Lab

Confirm

Change Wifi Settings

Delete Device

2.6 Control your AC


2.6.1 Select an AC unit

Select first a home by clicking “My Rooms” in the side menu and then selecting a home in “My Homes” screen. If you already selected a home, you can directly click “My Rooms” in the side menu. The list of all devices available for that home are listed. Click the device you want.




2.6.2 Control your AC

After selecting a particular device, click mode to set you unit to off, cool, heat. Adjust the temperature with the arrows, or adjust the fan speed by clicking “fan”

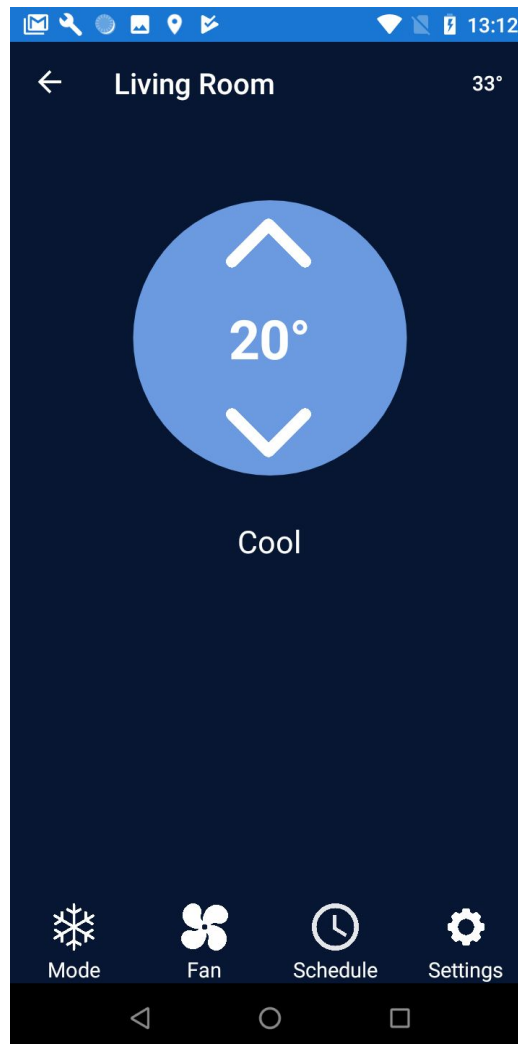

2.6.3 Schedule

Click the schedule icon to view or modify the schedule for a particular room: add a new time schedule by clicking “add new device time” or edit or remove any time schedule by clicking on it

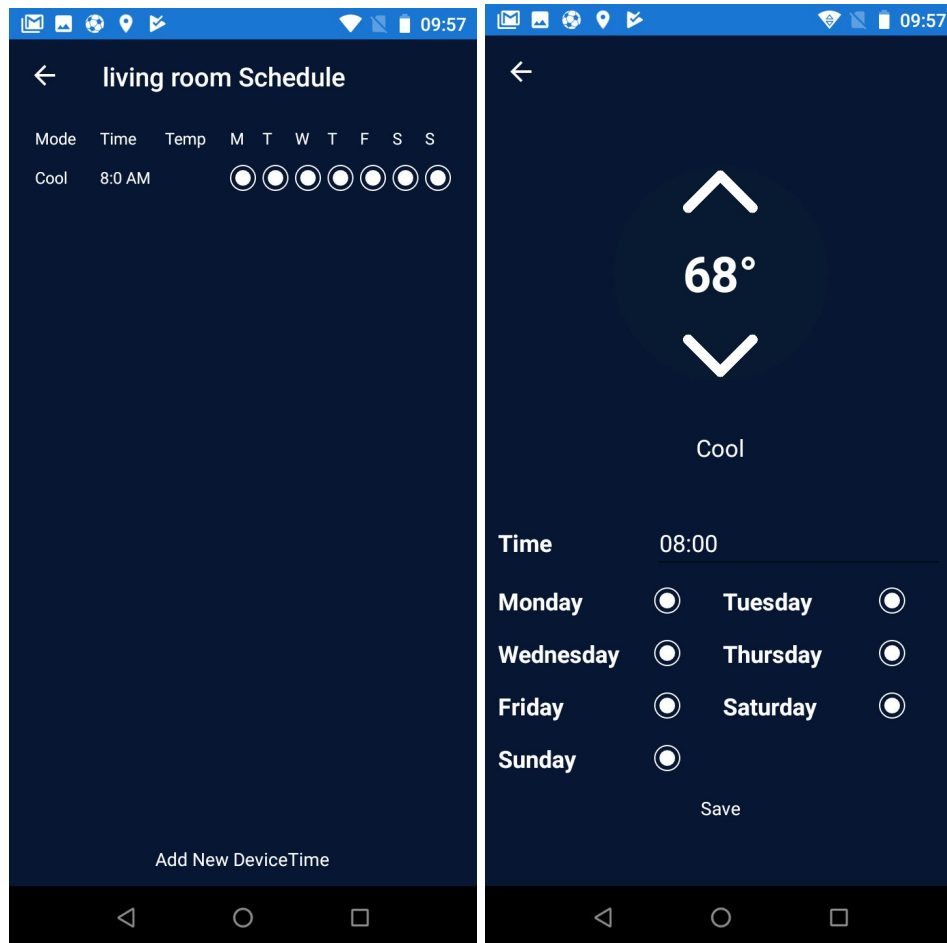

2.6.4 Settings

Modify any device settings by clicking the “settings” icon: you can link it to another room, change the room name or connect it to another device (see add a new device) or remove a device.

← Edit Device

Enter Room name and Select house to add connected device to specifi house

room 1

Test Lab ▼


Confirm

Change Wifi Settings

Delete Device

2.7 User Settings

Clicking “settings” in the side menu. Set the temperature unit (Celsius or Fahrenheit) change and reset your password. The new password is sent by Email

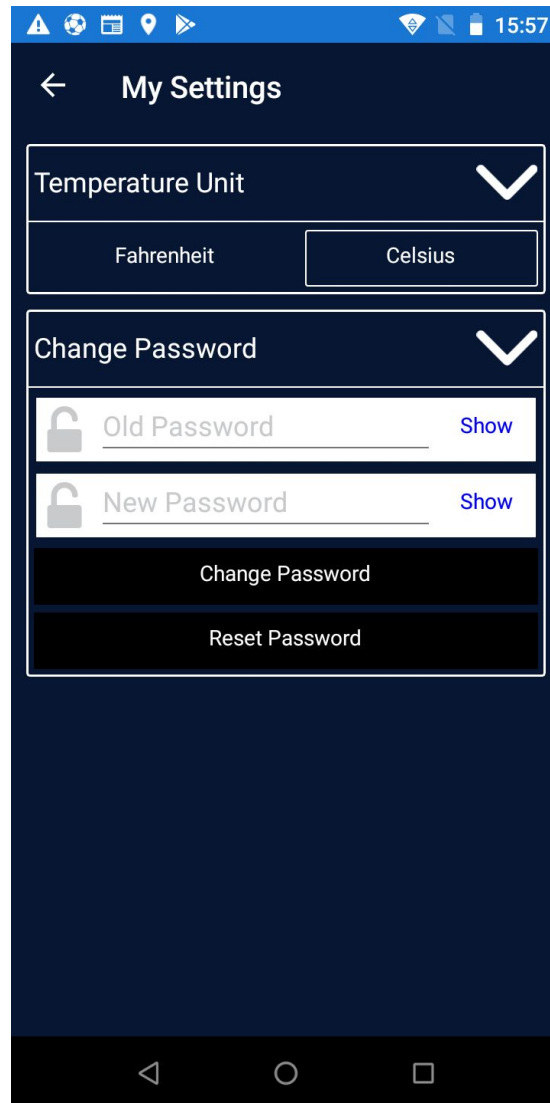

The screenshot shows a mobile application interface for 'My Settings'. At the top, there is a status bar with various icons and the time 15:57. Below the status bar is a dark blue header with a back arrow and the title 'My Settings'. The main content area is divided into two sections. The first section, 'Temperature Unit', has a dropdown arrow and two buttons: 'Fahrenheit' and 'Celsius'. The second section, 'Change Password', also has a dropdown arrow and contains two password input fields labeled 'Old Password' and 'New Password', each with a 'Show' link. Below these fields are two buttons: 'Change Password' and 'Reset Password'. The bottom of the screen shows the standard Android navigation bar with back, home, and recent apps icons.

FCC statement

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

*RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device is acting as slave and operating in the 2.4 GHz (2412 ~2462 MHz) band.

Ad Hoc function is supported but not able to operate on non-US frequencies. Do not use the device with the environment which below minimum -30 °C or maximum over 50°C .

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.