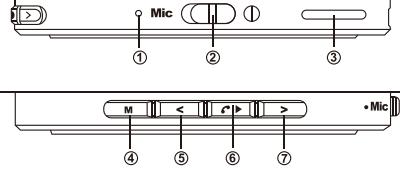


Wireless speaker user manual

Size: 201x70mm

Front

<p>KOHL'S Kohls.com Model: HLC84SY6</p> <p>Function Keys:</p>  <p>1. Mic 2. ON/OFF 3. TF Card Slot 4. Mode Switch/Restore to factory settings 5. Vol-/Previous song 6. Play/Pause/Phone 7. Vol+/Next song</p>	<p>1. ON/OFF Slide ON/OFF switch to the right to power on. The blue light will come on. Slide ON/OFF switch to the left; the blue light will blink and the unit will power off.</p> <p>2. Wireless Connection Follow the operating instructions of your wireless device for pairing with the speaker. Typically this is done by going to the "Wireless", "Set Up" or "Connect" menu and selecting the option to search for wireless devices.</p> <p>When pairing, the blue light will blink quickly; use cell phone or computer or other device. Search device name "LC SPEAKER", click to connect, blue light turn off when connection successful; blue light blink quickly when connection out of range.</p> <p>3. When you play music</p> <ol style="list-style-type: none">1. Short press "Play/Pause/Phone" key to pause music or pause music to answer a call. A second short press will resume playing music again;2. Short press "Vol-/Previous song", the speaker will play the previous song;3. Short press "Vol+/Next song", the speaker will play the next song;	<p>4. long press "Vol-/Previous song", reduces speaker volume; 5. long press "Vol+/Next song", increases speaker volume. You will hear a prompt when maximum volume is reached. Volume can also be controlled directly from your phone or device to reach higher volume.</p> <p>4. Hands free phone call operation</p> <ol style="list-style-type: none">1. When a phone call is incoming, the blue light remains on. Short press the "Play/Pause/Phone" key to answer; long press the "Play/Pause/Phone" key to reject the call.2. When on an active call, short press "Play/Pause/Phone" to hang up.3. When the Speaker is in standby /music mode, long press the "Play/Pause/Phone" key to re-dial the last call.4. Sounds from speaker in wireless mode, press "Play/Pause/Phone" for one second, the call will switch to mobile phone;5. Sounds from mobile phone in wireless mode, press "Play/Pause/Phone" for one second, the call will switch to speaker. <p>5. Mode Switch (Wireless-TF Card-AUX-FM) When speaker is on with TF Card inserted, click "M" key to switch through different modes one by one in this order. Wireless-TF Card-FM-AUX- Wireless. (FM Mode Connecting the USB cable to be FM Antenna, long press</p>
---	---	--

Back

<p>"play/pause" automatic search platform. Some items do not have AUX, FM modes).</p> <p>6. Charging Connect the Micro 5P charging cable to speaker's Micro USB port, insert the other end to the USB port of a 5V charger. A red light is illuminated when charging, and will switch off when full charge is reached.</p> <p>7. Restore to factory settings In wireless connection mode, long press "M" key for 3 seconds, the blue light will blink rapidly, restoring the speaker to factory settings.</p> <p>Quality Tips</p> <ol style="list-style-type: none">1. In order to avoid damage to your hearing and prolong the speaker's use-life, please don't listen to music for long time in a high volume environment.2. When a power short occurs, please immediately turn off the power switch, unplug the USB plug, to prevent speaker and other components becoming damaged.3. Overuse of battery will affect the wireless distance and use-life capabilities, please charge regularly and only when battery is fully depleted.	<p>This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>- "Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."</p> <p>- "NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.</p> <p>However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ol style="list-style-type: none">n Reorient or relocate the receiving antenna.n Increase the separation between the equipment and receiver.	<p>n Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</p> <p>Consult the dealer or an experienced radio/TV technician for help."</p> <p>FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.</p> <p>This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.</p>
--	---	---