

TOWER FAN

USER MANUAL

FZ10-25FRL

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. Consult with your dealer or manufacturer for details. The diagram above is just for reference. Please take the appearance of the actual product as the standard.

THANK YOU LETTER

Thank you for choosing Midea! Before using your new Midea product, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers in a safe way.

CONTENTS

THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	05
PRODUCT OVERVIEW	06
PRODUCT INSTALLATION	07
OPERATION INSTRUCTIONS	09
CLEANING AND MAINTENANCE	12
TROUBLESHOOTING	15
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	16
DATA PROTECTION NOTICE	17

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. Please check the packaging and appliance on arrival to make sure everything is intact to ensure safe operation. If you find any damage, please contact the retailer or dealer. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols

Danger



This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.

Warning of electrical voltage



This symbol indicates that there is a danger to life and health of persons due to voltage.

Warning



The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.

Caution



The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.

Attention



The signal word indicates important information (e.g., damage to property), but not danger.

Observe instructions



This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

READ AND SAVE THESE INSTRUCTIONS

⚠ CAUTION

- Read rules for safe operation and instructions carefully.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never insert fingers, pencils, or any other object through the grille when fan is running.
- Disconnect fan when moving from one location to another.
- Be sure fan is on a stable surface when operating to avoid overturning.
- Keep electrical appliances out of reach from children or infirm persons. Do not let them use the appliances without supervision.
- Household use only.

⚠ WARNING

- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- When the fan was assembled, the rotor blade guard shall not be taken off anymore.
- The appliance is only to be used with the power supply unit provided with the appliance.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- WARNING—To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

⚠️ WARNING

- a) "Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair."
- b) "Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over."
- Do not leave the fan running unattended.
- To Reduce the Risk of Fire, Electric Shock or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended by the Manufacturer (e.g., Parts Made at Home Using A 3D Printer).
- The fan shall not be modified by user. such as by adding supplemental filters to fans not intended to be used for air cleaning purposes.
- This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 - This device may not cause interference.
 - This device must accept any interference, including interference that may cause undesired operation of the device.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 2.1 This device may not cause harmful interference, and 2.2 This device must accept any interference received, including interference that may cause undesired operation. 3 Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.


Midea America Corp.
Parsippany, NJ 07054
TEL: 1-866-646-4332

SPECIFICATIONS

Product Model	FZ10-25FRL
Voltage	120V~
Frequency	60Hz
Power	45W

PRODUCT OVERVIEW

Part Name

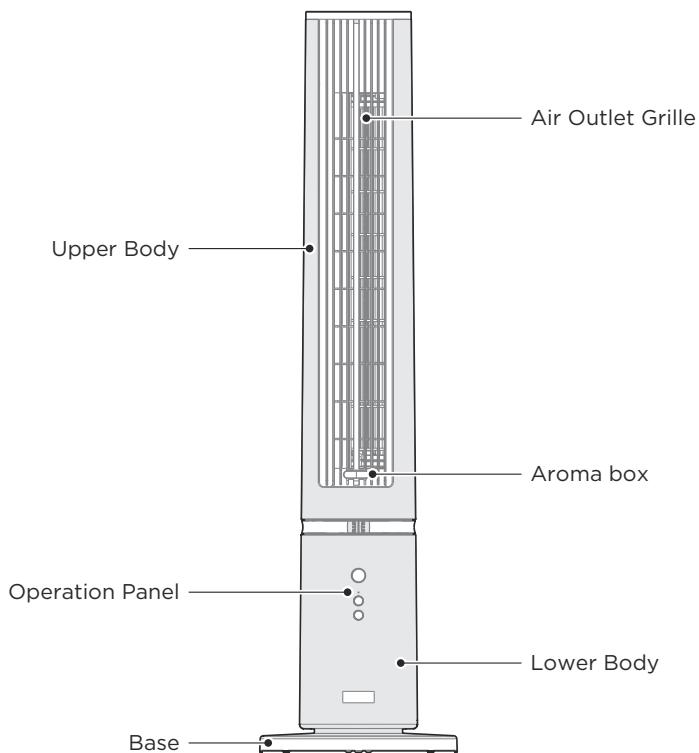


NOTE

All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real object.


PRODUCT INSTALLATION

Base Installation Method

1 Unpack the box, take out the base and chassis, turn the base upside down, pass the power cord through the middle round hole of the chassis, and then fix the base and chassis with a lock nut.

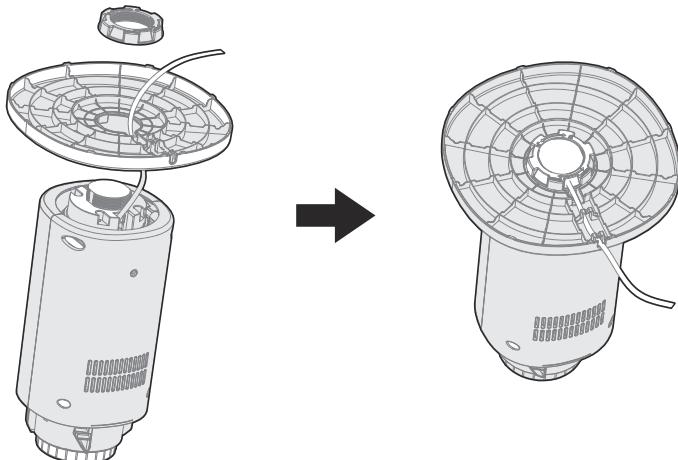


2 Press the power cord down along the chassis wire groove, so that the power cord is completely stuck in the slots at both ends of the wire groove.

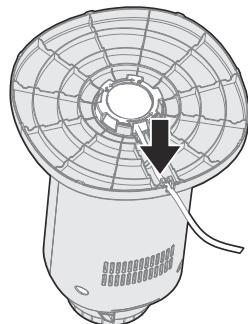


Body Installation

- 1 Place the base on a stable ground, pick up the body and align the air outlet side of the body with the side of the base switch, then press the body vertically downward and slightly hard to make the machine perpendicular to the ground, and the machine installation completes.

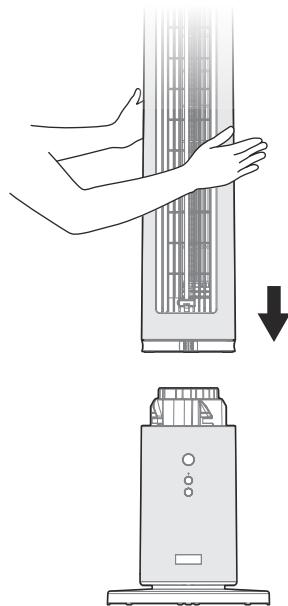

OPERATION INSTRUCTIONS

Operation Panel

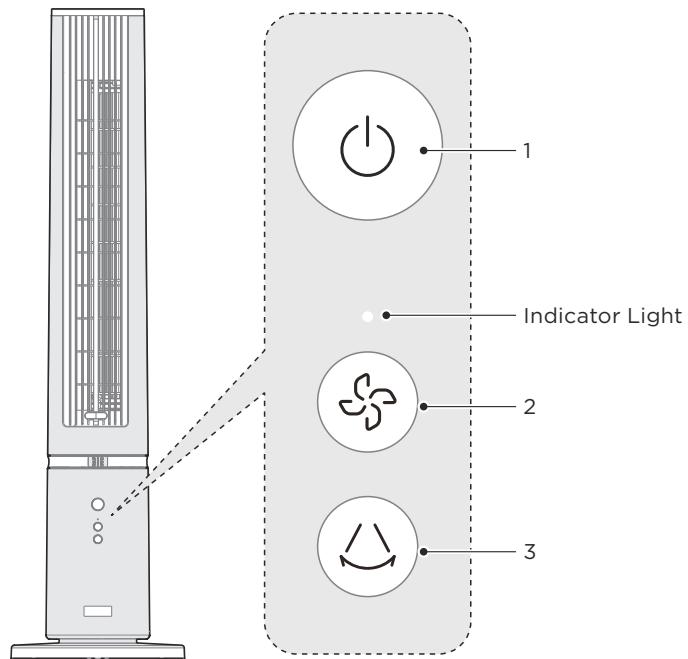


No	Button	Description
1	 On/Standby Button	<ul style="list-style-type: none">Click the button to turn on or off the power.
2	 Wind Speed Button	<ul style="list-style-type: none">Click the button to cycle through wind speed 1-2-3-4When using the wind speed adjustment button on the fan body to adjust the wind speed, the indicator light will flash and correspond to the number of times the fan speed has been adjusted. For example, if the fan speed is set to level 1, the indicator light will flash once; if the fan speed is set to level 2, the indicator light will flash twice.....and so on.
3	 Swing Button	<ul style="list-style-type: none">Click the button to turn on or off the swing function.

Steps to Activate the Remote Control

- Plug in the product.
- Install the battery to the remote control for automatic activation.
- If the activation fail ,Please disconnecting the product power supply and remove battery for remote control .1 minute later, Repeat the above steps to activate the remote control.

Description of Remote Control Buttons

- The remote controller should be normally used within 5m of the front of the product and 30 degrees of the deviation angle.
- The battery contains many heavy metals, acids and bases, etc., which may threaten human's health; Waste batteries should be recycled separately.

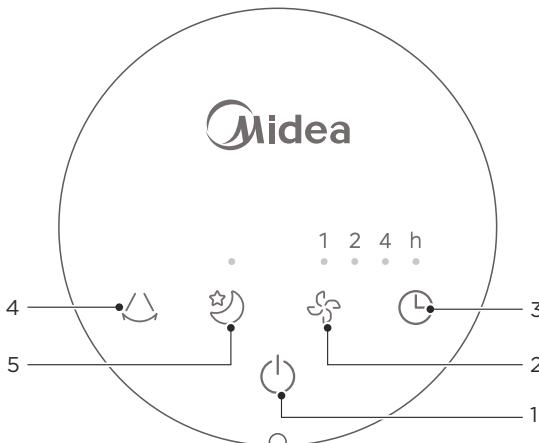

No	Button	Description																								
1		<ul style="list-style-type: none">• Click the button to turn on or off the power.																								
2		<ul style="list-style-type: none">• Click the button to cycle through wind speed 1-2-3-4.• Wind speed indicator light effect, indicates on:<table border="1"><tr><td>Speed 1</td><td>Speed 2</td><td>Speed 3</td><td>Speed 4</td></tr><tr><td>1 2 4</td><td>1 2 4</td><td>1 2 4</td><td>1 2 4</td></tr><tr><td></td><td></td><td></td><td></td></tr></table>	Speed 1	Speed 2	Speed 3	Speed 4	1 2 4	1 2 4	1 2 4	1 2 4																
Speed 1	Speed 2	Speed 3	Speed 4																							
1 2 4	1 2 4	1 2 4	1 2 4																							
3		<ul style="list-style-type: none">• Click the button to set the timer in the range of 1-7 hours.• Schedule time indicator light effect, indicates on:<table border="1"><tr><td>1h</td><td>2h</td><td>3h</td><td>4h</td></tr><tr><td>1 2 4 h</td><td>1 2 4 h</td><td>1 2 4 h</td><td>1 2 4 h</td></tr><tr><td></td><td></td><td></td><td></td></tr><tr><td>5h</td><td>6h</td><td>7h</td><td></td></tr><tr><td>1 2 4 h</td><td>1 2 4 h</td><td>1 2 4 h</td><td>1 2 4 h</td></tr><tr><td></td><td></td><td></td><td></td></tr></table>	1h	2h	3h	4h	1 2 4 h	1 2 4 h	1 2 4 h	1 2 4 h					5h	6h	7h		1 2 4 h	1 2 4 h	1 2 4 h	1 2 4 h				
1h	2h	3h	4h																							
1 2 4 h	1 2 4 h	1 2 4 h	1 2 4 h																							
5h	6h	7h																								
1 2 4 h	1 2 4 h	1 2 4 h	1 2 4 h																							

No	Button	Description
4	 Swing Button	<ul style="list-style-type: none"> Click the button to turn on or off the swing function.
5	 Sleep wind Button	<ul style="list-style-type: none"> Click the button to turn on or off the sleep wind.

NOTE

- Please use a manganese or alkaline battery of type “AAA” and do not use a non-recyclable battery.
- Do not mix new batteries with old.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc.) batteries.

CLEANING AND MAINTENANCE


NOTE

- Before cleaning this product, be sure to turn off the power and unplug it.
- After cleaning and maintenance, be sure to wait until it is fully dry before powering on or storing it.
- Do not rinse the base directly with water. You can gently wipe the surface with a soft cloth containing a little neutral detergent and then wipe it dry. Do not use solvents such as gasoline.
- Do not disassemble the product for modification. It is recommended to check and clean this product regularly to extend its service life.

Disassembly and Cleaning Method


How to disassemble the body and the base

Before disassembling the body and the base, please turn off the power and unplug, then push the lock on the front of the body to the far right, hold the handle hole on the back of the body and pull it up vertically to separate the body from the base.

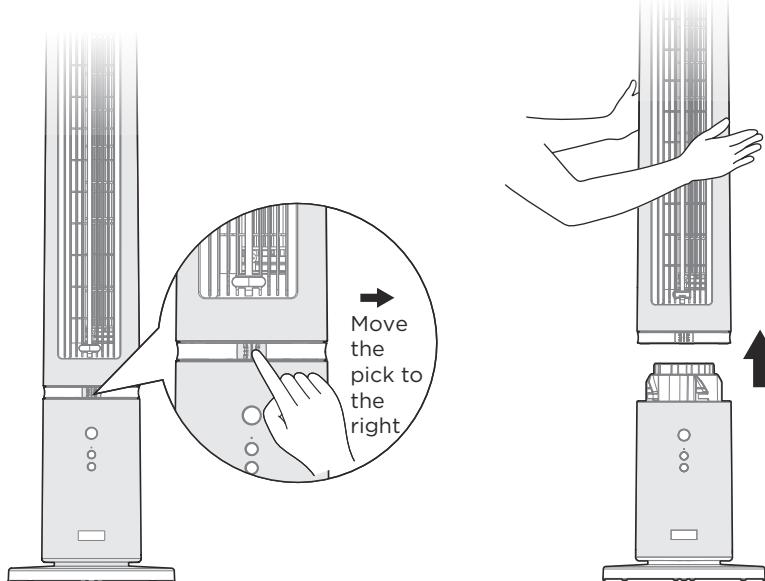


How to disassemble the chassis

Turn the base upside down, as shown in the figure below, push the chassis buckle inward, and then rotate the chassis counterclockwise to remove the chassis.

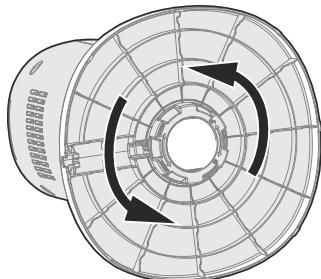

Cleaning method

Put the body flat and rinse it up and down and front and back with a faucet or shower. After rinsing, gently shake the water out of the body or let it stand until the water is drained before installation and powering on.

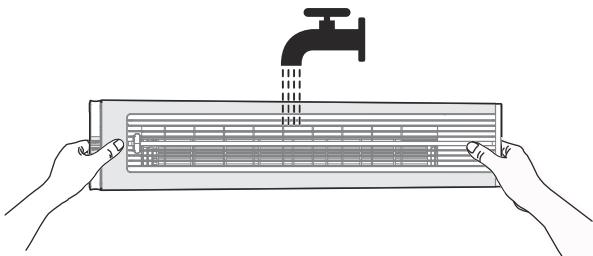


NOTE

When cleaning the body, make sure it is separated from the base.

User Servicing Instructions

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades. (Fig.①)
- c) Remove fuse carefully. Insert the tip of your tool into fuse slot(close with the terminal), then pry the fuse gradually and slowly, but not overexert. If you feel tight, you can try it at several times and pry the fuse little by little. When one side of the fuse has been pried, then you can get the fuse out entirely. (Fig.②)
- d) Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse. (Fig.③)
- e) Close fuse cover. Slide close the fuse access cover on top of attachment plug. (Fig.④)
- f) Risk of fire. Do not replace attachment plug. Contains a safety device(fuse)that should not be removed. Discard product if the attachment plug is damaged.
- g) When the fan suddenly does not work during normal operation, please check whether it is a problem with the fuse.

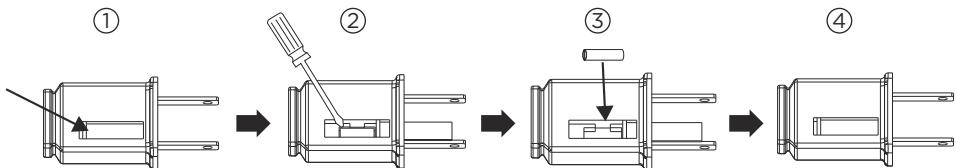

NOTE

- When you replace the fuse, please don't operate suddenly or overexert, or else the product will be damaged or cause accident.
- When you feel it hard to be operated, please make sure you have got the right way.
- Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

TROUBLESHOOTING

Operation of your appliance can lead to errors and malfunctions. The following tables contain possible causes and notes for resolving an error message or malfunction. It is recommended to read the table below carefully in order to save your time and money that may cost for calling to the service center.

Problem	Cause	Solution
The machine does not work properly after installed	<ul style="list-style-type: none">The power cable is not plugged in or has poor contact.	Make sure the plug is properly inserted into the socket.
	<ul style="list-style-type: none">The switch on the body is not turned on.	Turn on the switch on the body.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 **Midea** logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates ("Midea"), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information is provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal date being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.



make yourself at home



www.midea.com
© Midea 2022 all rights reserved