

MISTING FAN

USER MANUAL

FZ10-25TRD

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specific colors are subject to change without prior notice for product improvement. Configuration and appearance may vary by region. The diagram is just for reference. Please take the appearance of the actual product as the standard.

- Please note that any changes or modifications of this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Unplug the equipment from the power supply before servicing.
- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- Empty and clean the water tank before storage. Clean the water tank before each use.
- WARNING: Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.
- Clean the water tank every three days.

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation. Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Midea America Corp.
Parsippany, NJ 07054
TEL: 1-866-546-4352

04

SAFETY INSTRUCTIONS

Intended Use

The following safety guidelines are intended to prevent unforeseen risks or damage from misuse or incorrect operation of the appliance. Please check the packaging and appliance on arrival, please make sure it is intact to ensure safe operation. If you find any damage, please contact the retailer or supplier. Please note modifications or alterations to the appliance are not allowed for your safety concern. Unintended use may cause hazards and loss of warranty claims.

Explanation of Symbols

Danger	This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas
Warning of electrical voltage	This symbol indicates that there is a danger to life and health of persons due to voltage.
Warning	The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.
Caution	The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.
Attention	The signal word indicates important information (e.g. damage to property), but not danger.

Observe Instructions

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Read these operating instructions carefully and attentively before using/commissioning the unit and keep them in the immediate vicinity of the installation site or unit for later use!

Product Model	FZ10-25TRD
Voltage	120V~
Frequency	60Hz
Power	55W

02

IMPORTANT SAFETY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

CAUTION

- Read rules for safe operation and instructions carefully.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Keep electrical appliances out of reach from Children or infirm persons. Do not let them play with the appliance.
- Never insert fingers, pencils, or any other object through the grille when the fan is running.
- Disconnect the fan when moving it from one location to another.
- Be sure the fan is on a stable surface when operating to avoid overturning.
- Do not use the fan by a window as rain may create an electrical hazard.
- The rotor blade grille shall not be removed at any time. To clean the fan the following steps shall be followed:
 - Unplug the fan prior to cleaning.
 - DO NOT remove the rotor blade guard.
 - Wipe the fan fan enclosure and rotor blade guard with a slightly damp cloth.


WARNING

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- When the appliance has been used and before cleaning, unplug the appliance from the outlet.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, the plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- To Reduce the Risk of Fire, Electric Shock, Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer <99> Parts Made At Home Using a 3D Printer.

03

PRODUCT OVERVIEW

Part Name

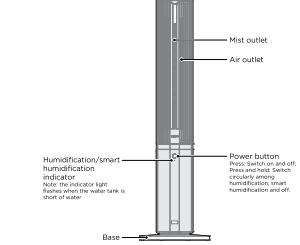

NOTE
The pictures contained in the Manual are for reference only, and it is subject to the physical product in the packing box.

06

PRODUCT INSTALLATION

Base Installation

- Take the two parts of the base out of the packaging box, align the centers of the two parts of the base and place them crosswise, then rotate one of the bases to align the holes and lock them.
- First unscrew the base lock nut from the bottom of the main unit; then pass the power cord through the main unit, and finally tighten the base lock nut clockwise.
- Press the power cord down along the base wire groove so that the power cord is completely stuck in the two ends of the wire groove.

07

Tank Water Filling Instructions

NOTE

- Unplug the power plug before adding water.
- DO NOT add chemical substances such as aromatherapy oil or essential oil to the water tank.
- Open the water tank cover under the grills on the back of the machine, and then pour out the water tank.

2 After pouring out the water tank, turn clockwise the water tank cover counter-clockwise, and then add water to the tank. It is recommended to use pure water!

Tank Water Filling Instructions

NOTE

- Open the water tank cover under the grills on the back of the machine.
- Open the silicone plug of the drain pipe under the water tank, and the residual water in the water tank will be discharged through the drain pipe.

 
2 Open the silicone plug of the drain pipe under the water tank, and the residual water in the water tank will be discharged through the drain pipe.

OPERATION INSTRUCTIONS

Remote Control Operation

• Use of the remote control. Please refer to the tower heater panel operation and display section for the key functions of the remote control.

• The remote control can be used in the product within 15 ft.



NOTE

- Please use a manganese or alkaline battery of type "AAA" and do not use rechargeable batteries.
- Do not mix new batteries with old.
- Do not mix different types of batteries (carbon, zinc, mercuric-zeolite, etc.-cad, ni-mh, etc.) batteries.

CAUTION

If there is no operation during the operation of the machine, it will automatically shut down after about 10 hours of continuous operation.

CLEANING AND MAINTENANCE

NOTE

- Before cleaning this product, be sure to turn off the power switch and pull out the plug.
- After cleaning and maintenance, be sure to wait until it is fully dry before powering on or storing it.
- Do not use sharp objects to clean the unit.
- Wipe the unit with a soft cloth containing a little neutral detergent and then wipe it dry. Do not use solvents such as gasoline.
- Do not use sharp objects to clean the product for modification. It is recommended to check and clean this product regularly to extend its service life.
- To avoid scale accumulation affecting the life of the machine, please clean the machine regularly according to the water quality in the area of use and the frequency of machine use.
- It is forbidden to use any organic solvents or other cleaning agents that can produce a large number of bubbles to clean the water tank.

Water Tank Descaling Instructions

- Please take out the water tank first. For specific steps, please refer to the water filling instructions.
- Turn the water tank cover counter-clockwise and drain the water in the tank.
- Add appropriate amount of water to the tank and soak for half an hour (Add descaling agent appropriately for better cleaning effect).

4 Drain the remaining water in the tank. If you use a descaling agent, please wash it again with clean water 1-2 times.



09

User Servicing Instructions

NOTE

- Close the fuse from the receptacle or other outlet device. Do not plug by pulling on the cord.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades. (Fig. ①)
- Remove carefully. Insert the tip of your tool into fuse slot/close with the terminal, then pry the fuse gradually and slowly, but not overexert. If you feel tight, you can do it several times and pry the fuse out by then one side of the fuse has been prised open you can then pull out entirely. (Fig. ②)
- Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse. (Fig. ③)
- Risk of fire. Do not replace attachment plug. Contains a safety device(fuse) that should not be removed. Discard product if the attachment plug is damaged.
- When the fan suddenly does not work during normal operation, please check whether it is a problem with the fuse.

NOTE

- When you replace the fuse, please don't operate suddenly or overexert, or else the plug will be damaged or cause accident.
- When you feel it hard to be operated, please make sure you have got the right way.
- Risk of fire. Do not replace attachment plug. Contains a safety device(fuse) that should not be removed. Discard product if the attachment plug is damaged.

5 If there is a problem with the fuse, please replace it with a new one.

6 If there is a problem with the fuse, please replace it with a new one.

7 If there is a problem with the fuse, please replace it with a new one.

8 If there is a problem with the fuse, please replace it with a new one.

9 If there is a problem with the fuse, please replace it with a new one.

10 If there is a problem with the fuse, please replace it with a new one.

11 If there is a problem with the fuse, please replace it with a new one.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates ("Midea"), to which Midea owns trademarks, copyrights and other intellectual property rights, and all goodwill derived from using any part of Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information can be provided on request. You can contact our Data Protection Officer via NedapDPO@midea.com. To exercise your rights such as right to access your personal data being processed for direct marketing purposes, please contact us via MideaDPO@midea.com. To find further information, please follow the Gdpr Code.

10

10

11