



PORSCHE SMARTWATCH
MODEL NUMBER: WAP0709010K

User Manual

Please refer to this manual before using the product

VOL. 1

1.1 The company reserves the right to modify the contents of this manual without any further notification. It is normal that some functions may vary in certain versions of software. The software can be upgraded online.

1.2 Please charge this product with the configured charger for not less than 2 hours before using it.

1.3 To ensure the longer battery life, you are recommended to close high power consumption functions if they are needless for you such as Wake-up gesture, GPS, WLAN, Bluetooth or other specific functions. It is normal that the watch temperature may increase mildly while it is connecting to Internet with WLAN because of higher power consumption.

2. Product Overview

2.1 Basic Operating

1. Long press the button to turn on the watch; it will be slower for app optimizing for the first time to enter into the Android OS:

I) Language settings.



II) Personal information settings.



2、 While the watch is working, the watch will enter the selection page by long pressing the button for around 2 seconds:



I) Power off



II) Reboot



III) Power save (The watch will enter into the power save mode automatically when the battery is very low)



IV) Recent Task



Swipe right to close the APP working

3. Menu Operating

- 1) Slide the watch face to the left to enter the main function menu



- 2) Slide the watch face to the right to enter the notification menu



- 3) Slide the watch face to the bottom to enter the status bars and short-cut settings



I) **First page:** Time, Date and Battery Life Percentage and showing charging line animation



II) **Second page:** Vibration, Wake-up gesture, Brightness, flight mode, Bluetooth, WLAN, GPS Switch, etc.



III) **Third page:** pedometer



IV) Slide the watch face to the top to view the weather information (network is requested)



5) Slide the menu to the left to return to the previous menu

2.2 Settings of watch faces

Long press the watch face for around 1 second to enter the watch faces selection pages, slide the watch faces to select the preferable one and click it.



3. User instructions

3.3 Functions introduction

Setting : Basic settings of the watch, such as Bluetooth, clock, volume, reset and etc..



1. Sound
2. Display
3. Switch Platform
4. App List Style
5. Connect
6. Measurement
7. Gesture
8. Power saving
9. Language & input
10. Date & time
11. Reset equipment
12. Uninstall application
13. About watch

Clock : Create and edit the alarm clock. Maximum 8 alarm clocks can be set.



Sound recorder: Record the sound



Calendar: Month, date and week can be displayed.



File: Manage the files in the storage of watch.




Browser



Music: Play the music in the memory of watch



Health : HeartRate, Pedometer checking

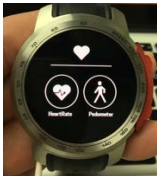

Weather: Local weather information (network is needed)



4. Precautions for use

4.1 Please charge the smart watch 100% before use. Charging time about 2 hours.

4.2 Please use phone charger adaptor or computer USB port to connect our

standard magnetic cable to charge the watch, Please make sure that the cable connecting is good during charging.

5. Common trouble shooting ways

In case there's a problem during the using of your watch, please solve it accordingly by the following ways. If the problem still exists, please contact seller or designated maintenance personnel.

5.1 Cannot turn on the watch

- 1)Long press the button at 2H
- 2)It is possible the battery is used up. Please recharge and start again.

5.2 The watch turn off automatically

It is possible the battery is run out. Please recharge and start again.

5.3 Short battery life

- 1.Not full charging battery; please make sure the enough time for charging your battery. (Not less than 2 hours).
- 2.Turn off unnecessary functions that are high power consumption such as GPS, WLAN, wake-up gesture etc.

5.4 Cannot be charged

- 1.Check whether the battery can be used. The performance of battery will be reduced after several years using.
- 2.Check whether the charger is workable, change another one.
- 3.Check whether all the connecting is good, try again.

5.5 Do not display caller's name

When watch is paired with your phone, please check whether the contacts on the phone are synced to watch. If not, release the connection and allow the contracts synchronization while pairing the watch and phone again.

5.6 Bad qualify calling

- a) The watch may not in the normal Bluetooth range of phone (about 10 Meters), please keep a stable Bluetooth connection to ensure a good quality for calling.
- b) The phone is in a weak reception area for cellular network.
- c) Microphone of watch maybe covered by wrist. Please adjust the wrist posture when making a Bluetooth call

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

FCC ID: 2AQPR-1035