

User Manual



T1810 DOORBELL

Function keyboard

Bell is the call button
TALK is the intercom key
VOL is volume key
SET is the code key
CH3 is channel selection
Charging indicator
TOT launch time limit
Automatic power saving mode
Low power indicator light
Launch indicator light

Open the package

Manual, doorbell outside, sunshade cover, battery, mounting screws; doorbell inner machine, battery holder adapter

Installation

Disassemble the battery cover from the external unit, put the battery into the battery slot in the direction of the socket, and cover the cover.
Put in a fixed place or screw it in a common use place.

Instructions

The factory doorbell outside machine and the internal machine have been matched. Press the bell in the doorbell outside machine to call the doorbell internal machine, and the internal machine receives the 'ding dong' or other string of music. The internal machine presses the TALK button to speak: "Hello! Who are you looking for?" After receiving the external unit, press the TALK keyboard to reply.

The external machine enters automatic power saving after 25 seconds without receiving or sending a speech at all. In the power saving mode, the internal unit cannot communicate with the external unit. Each use is initiated by the doorbell outside machine, and the doorbell internal machine can only reply after receiving it.

TOT transmission time limit: In order to effectively protect the circuit device and wireless frequency occupation, the transmission intercom limit does not exceed 60 seconds. When the time exceeds 60 seconds, the machine will come to the long beeping, the sounds will disappear after release the TALK key.

Volume setting

In the standby mode, press the VOL button, the volume will increase to the maximum volume output of 3 level; then press the volume to change the minimum output of 1 level; press 2 level again...

Factory default default 2 volume

Status light indicator

Press the TALK button or the  button, there is a red indicator light below the TALK key, indicating the sending status.

Charging indicator light: red light means charging, green light means charging done.

Low power indicator light: When the external machine is in low power, it will flash red under the  key, indicating that the doorbell is low battery level and needs to be charged in time.

The external machine needs to be recharged. The external machine is removed and placed in the internal charging stand to charge. Since the charging time may take several hours, the best way is to replace the battery, and the internal and external machine batteries are exchange.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment should be installed and operated with a minimum distance of 50mm between the radiator and any part of your body.