

KIDS'

WALKIE-TALKIES




W1

W3 USER'S MANUAL

Please read the manual carefully before use and keep it properly.

01 Annotation Button

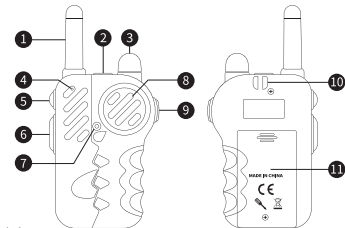

- 1. Antenna
- 2. Flashlight
- 3. Power/Volume Knob Button
- 4. Indicator light
- 5. Flashlight On-Off
- 6. Call/PTT

- 7. Microphone
- 8. Speaker
- 9. Call/PTT
- 10. Wristband connection
- 11. Battery compartment

02 Operating Instructions

Battery Installation

Use a screwdriver to remove the screws, then open the battery cover. Insert **three AAA batteries** (to be purchased separately) into the battery compartment correctly. Pay attention to the positive and negative polarity when installing the batteries.

Turning the Walkie-Talkie On/Off

To turn on the walkie-talkie, rotate the knob clockwise. In the "On" position, the device will emit a beep, and the indicator light will stay on.

To turn off the walkie-talkie, rotate the knob counterclockwise. In the "Off" position, the indicator light will turn off.

Volume Adjustment

After powering on, rotate the knob clockwise to increase the volume and counterclockwise to decrease it.

Flashlight Operation

Press and hold the  button on the left side to turn on the flashlight. Release the button to turn it off.

Call Alert

Press the PTT/ button briefly to send a call alert tone to the other party (to notify them to listen).

Communication

Hold down the PTT/ button to speak. Release the button after finishing the conversation.

Note: Two walkie-talkies should not hold the PTT/ button simultaneously. Doing so will prevent voice reception.

⚠ WARNING:

- The walkie-talkie uses a public frequency and may receive signals from other walkie-talkies.
- This product contains tiny devices. Do not let children under three years old play with it.
- This product is an electronic device and cannot be exposed to water or used in a wet place.
- If not used for a long time, it is recommended to turn off the device and remove the battery.
- Do not put the speaker of the walkie-talkie against your ear to avoid hearing damage.

03 Product parameter

Model: TW1
Modulation: FM
Frequency Error: $\pm 500\text{Hz}$
Output Power: $\leq 5\text{mW}$
Receiving Sensitivity: $\leq -120\text{dBm}$
Power Supply: 3 AAA batteries (not included)

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.