

## NO. 90170



# Instructions



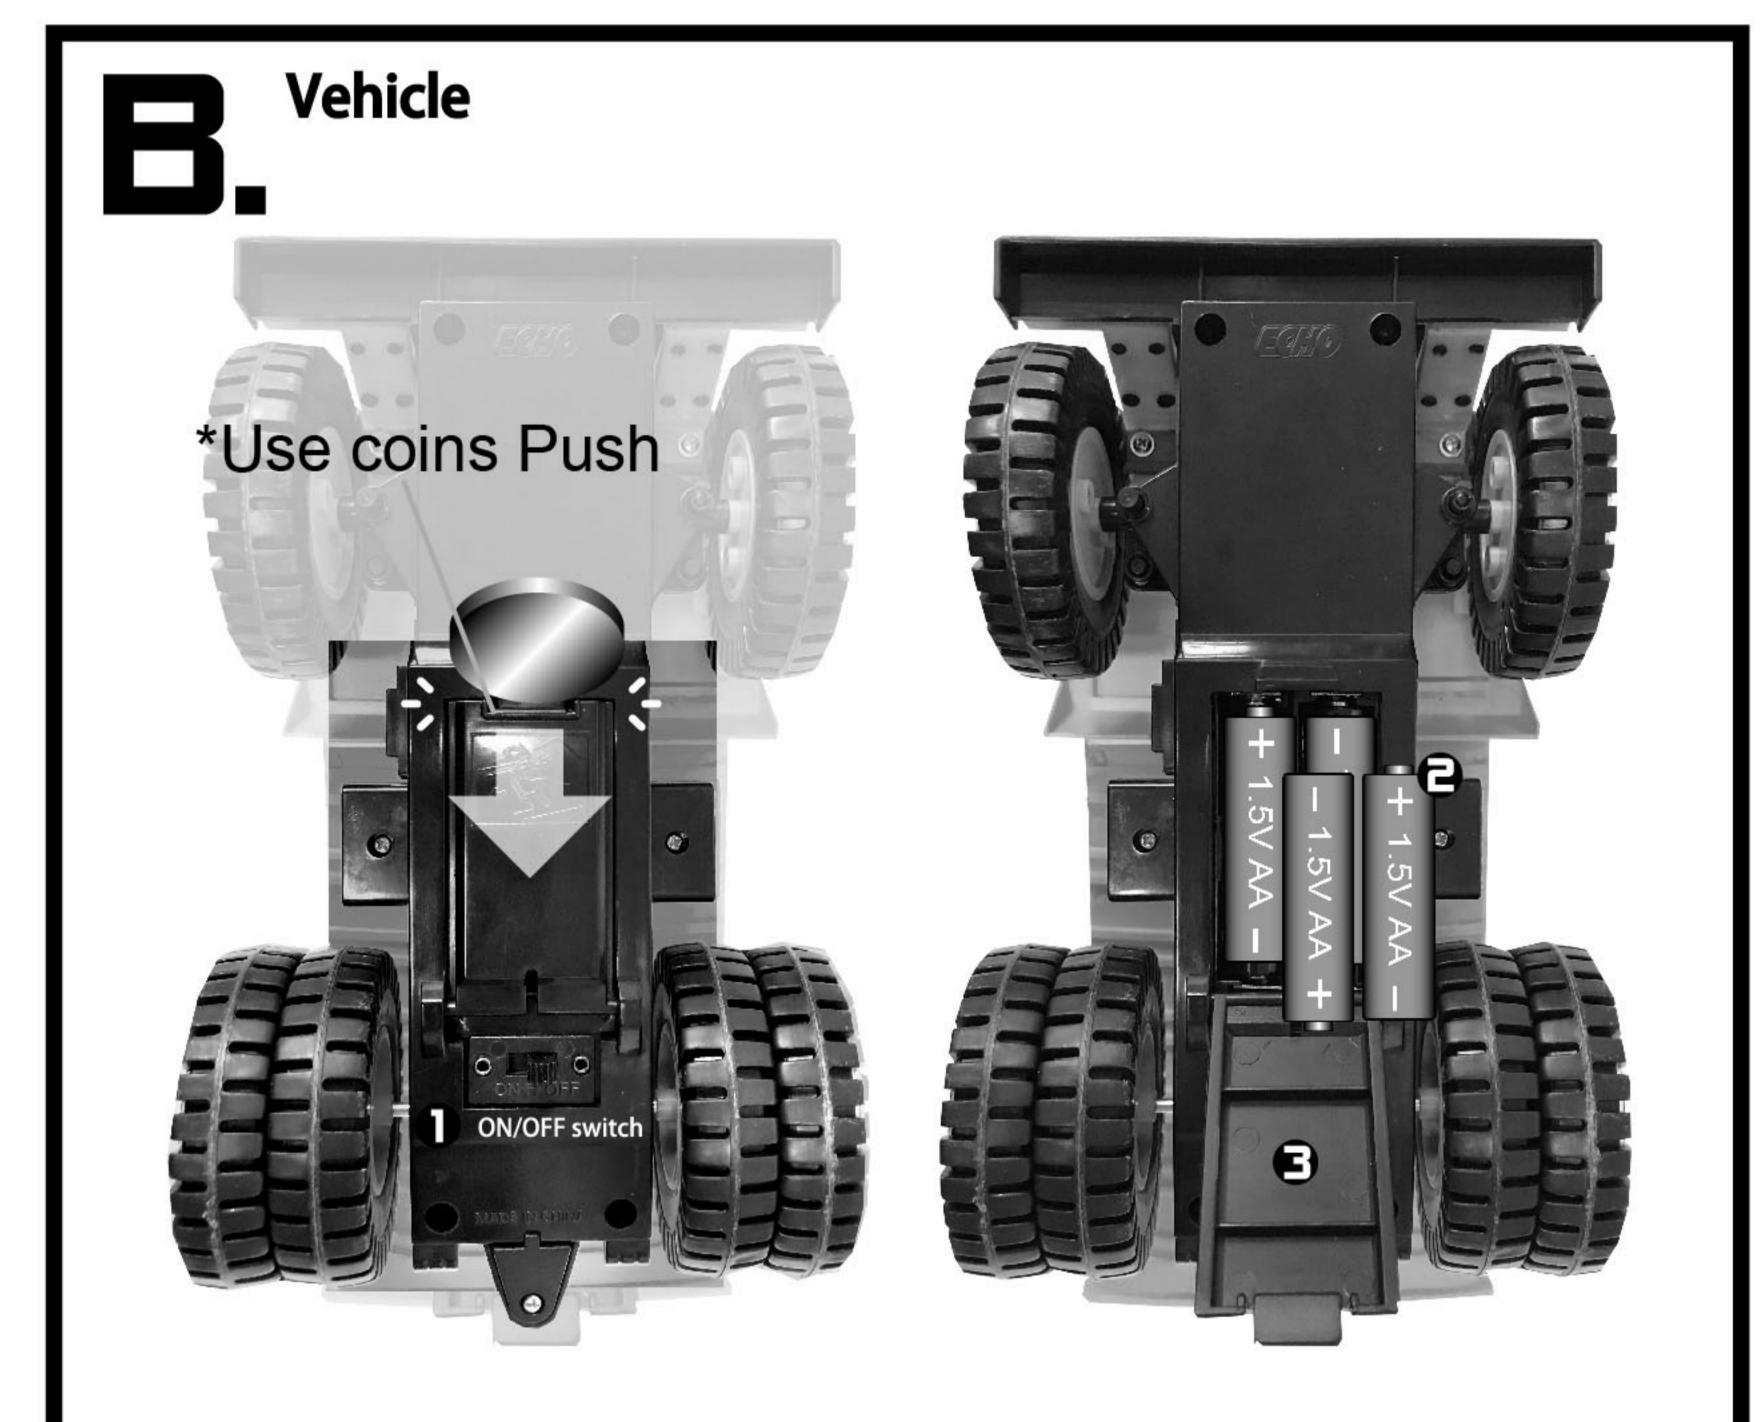

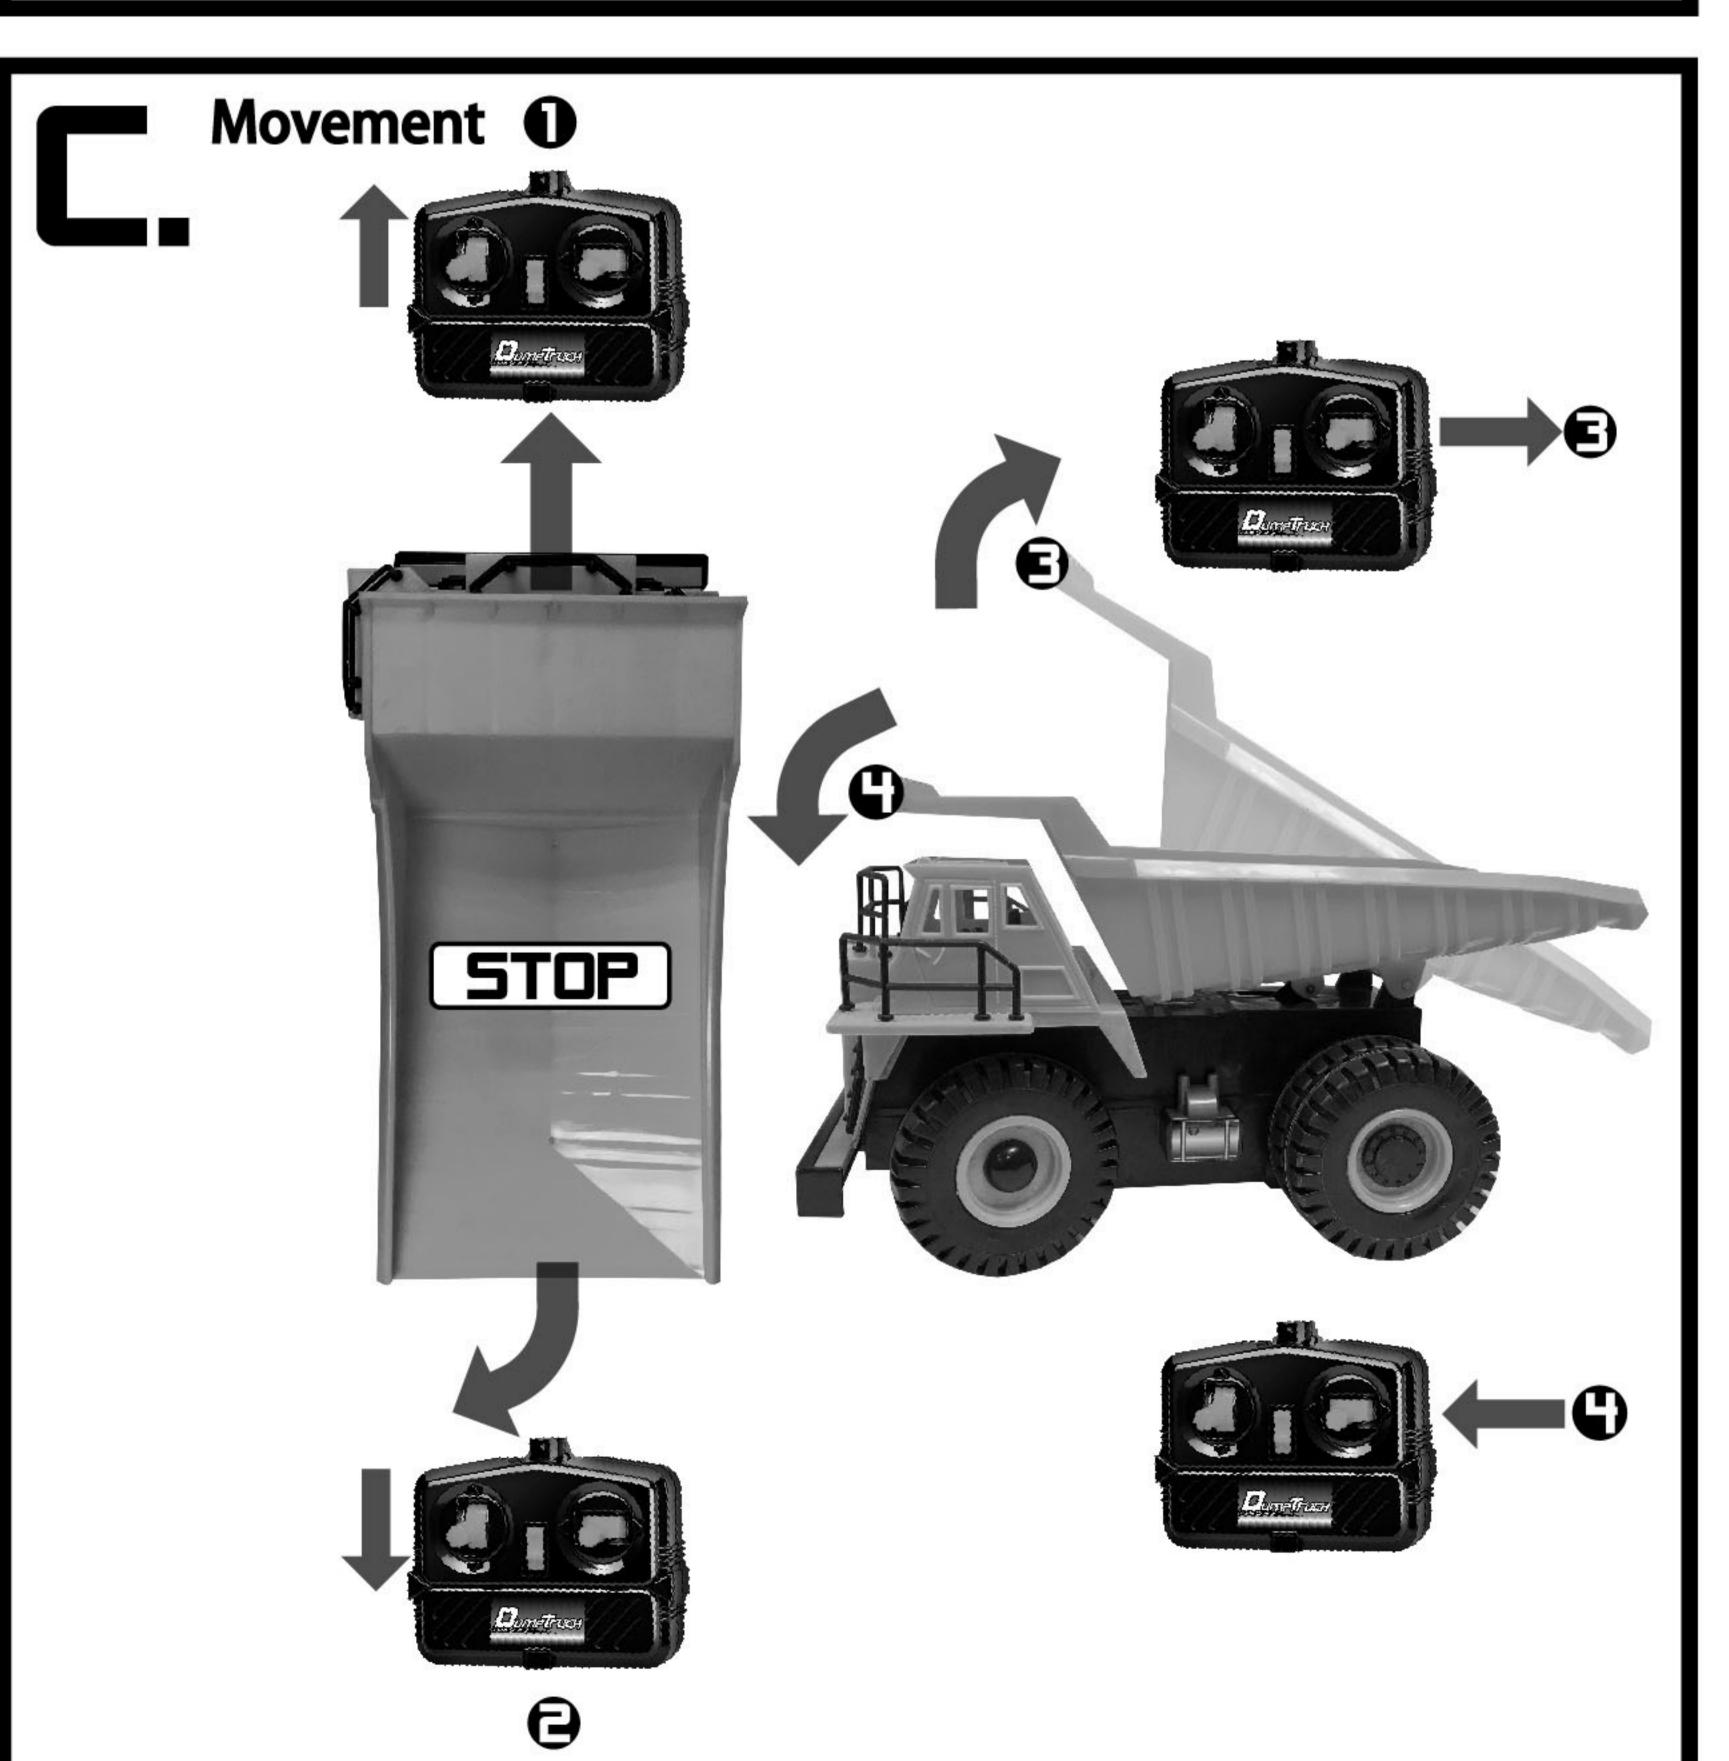

# WARNING: VI VIAMING. CHOKING HAZARD – Small Parts Not for Children Under 3 Years

# Contents and overview

#### A Controller

- On/off switch
- 2 Battery cover
- 3 Battery compartment

### **B** Vehicle

- On/Off switch
- ② Battery compartment

#### . Movement

- Forward
- ② Backward
- 3 Left
- 4 Right
- 5 Stop

### Battery requirement

- 4 × AA alkaline batteries for vehicle.
- $1 \times 9V$  battery for controller.

## Batteries are not included in this package.

# Assembly instructions

### **IMPORTANT:**

#### Controller

- . Slide ON/OFF switch to OFF. A 1
- 2. Grasp the tab of the battery compartment cover and lift the cover up. A 2
- 3. Put the 9V battery in the compartment according to the polarity symbols (+ and -) marked inside. A 3
- 1. Replace the battery compartment cover.

#### Vehicle

- . Make sure the ON/OFF switch on the vehicle is turned to the OFF position.(B)
- 2. Take out battery compartment.
- 3. Install 4 AA alkaline batteries into the battery compartment according to the polarity symbols (+and-) marked inside.
- . Insert the battery compartment into the original position.
- . Close the battery door.

# Operating instructions

- . Slide ON/OFF switch on the bottom of the vehicle to ON. **B** ①
- 2. Slide ON/OFF on the controller to ON. A 1
- . Follow the directions below to control the movement and direction of the

## **Left Control Lever**

- Push forward to go forward. **C** ①
- Pull backward to go backward. **C** ②
- Release to stop.

# **Right Control Lever**

- Push right to upward. C 3
- Push left to downward. C 4
- Release to stop.
- . Slide ON/OFF switches on both vehicle and controller to the OFF position and remove all batteries when not in use.

# Troubleshooting

## If the vehicle does not react:

- . Is the switch on the vehicle turned to on?
- . Have the batteries been inserted correctly?
- . Are the battery contacts bent or dirty? . Are the batteries exhausted or faulty?

### If the vehicle does not react correctly:

- . Are the batteries weak?
- Have the vehicle's wheels picked up lint, hair, threads or dust? Carefully remove such materials from the wheel bearings.
- . Are there other radio controlled vehicles being used in the same area, perhaps using the same frequency?
- . Are there metal grids or fence nearby? These may cause the vehicle to act in an uncontrolled way.
- . Are walkie talkies or CB radios being used in the area? These can cause interference.

# Attention!

- You cannot operate 2 vehicles in the same area when they both have the same operating frequency.
- 2. The vehicle's range varies depending on surroundings and operation.
- For maximum battery life rest the vehicle after 15 minutes of continuous operation. A rest period of 30 minutes is recommended.
- 4. Do not drive the vehicle on sand, mud, snow or through puddles, or use outside if raining.
- Do not store vehicle or controller near sources of heat or in direct sunlight for long periods.
- 6. Do not leave outside overnight as night dampness is harmful to interior mechanism.
- If there is any indication of thunder, do not play outside.
- 8. Do not attempt to pick up the vehicle when in motion.
- 9. Keep fingers, hair and loose clothing away from the tyres and wheel hub when the vehicle is switched on.
- 10. Vehicle can sometimes cause interference with television or radio reception. Move to another area if this happens.
- 11. Remove batteries from vehicle and controller when not in use.
- 12. Do not drop or attempt to crash the vehicle into walls or other obstacles.
- 13. Do not try to disassemble any part of the vehicle.
- 14. Do not use any type of chemical for cleaning purposes as the vehicle body could be damaged.
- 15. It is recommended that this toy and all accessories be periodically examined for potential hazards, and that any potentially hazardous parts be repaired or replaced.
- 16. IF THIS TOY IS BEING OPERATED IN THE PRESENCE OF CHILDREN UNDER 8 YEARS OF AGE, ADULT SUPERVISION IS RECOMMENDED.
- 17. Only operate the product and its accessories when fully assembled and in accordance with this manual.
- . This product and its accessories are not suitable for children under the age of 36 months, because of small part that can be swallowed.
- . Intended for children age 4 and older

# **CAUTION:**

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
- 2. 'DO not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.

If swallowed, seek medical attention immediately.

- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision.
- DO NOT RECHARGE OTHER TYPES OF BATTERIES. 8. As with all small items, these batteries should be kept away from children.

# FCC Statement

This device complies with Part 15 of the FCC Rules. Operation

- is subject to the following two conditions:
- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.


Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

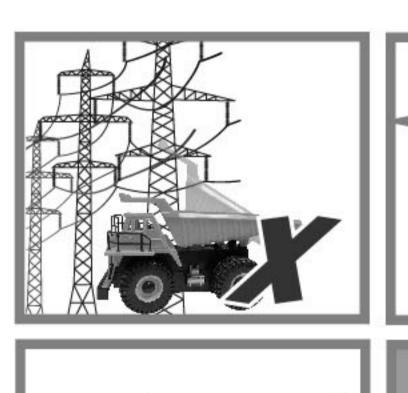













If any further question, please contact by e-mail address: general@echotoyshk.com



