 


Smartphone

A671

Thank you for choosing FOXXD product.
Please follow the instructions when start using this product.



Product Safety Information

	Do not use while re-charging.
	Do not use hand-held while driving.
	This device may produce a bright or flash light.
	For body-worn operation, maintain aspiration of 5 mm.
	Do not dispose of the phone in a fire.
	Small parts may cause a choking hazard.
	Avoid contact with magnetic media.
	This device may produce a loud sound.
	To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid extreme temperatures.
	Keep away from pacemakers and other personal medical devices.
	Avoid any contact with liquid. Keep it dry.
	Switch off when instructed in hospitals and medical facilities.
	Do not attempt to disassemble your phone.
	Switch off when instructed in aircrafts and airports.
	Do not rely on this device for emergency communications.
	Switch off in explosive environments.
	Only use approved accessories.

What are in the Box

The phone packaging box should contain the following items and accessories:
Phone, Charger, USB Type-C cable, Protective film (applied), Quick Start Guide.

Notices for the Use of Your Phone

Your phone should be treated with care. The following suggestions can help you extend the life of your mobile phone.

- 1) Place the mobile phone and its parts and components out of reach of young children.
- 2) Keep the phone dry. Rain, humidity and all types of liquids which contain minerals will corrode electronic circuits.
- 3) Don't touch the phone with wet hands when charging, it will cause an electric shock or damage the phone.
- 4) Avoid placing the device in high temperature environments. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

5) Avoid placing the device in a low temperature environment. When the temperature rises, the phone will produce water vapor that may damage electronic components.

6) Avoid placing the phone in dusty, dirty places, otherwise parts may be damaged.

7) Avoid placing the phone near a lit cigarette, open flame or any heat source.

8) Do not drop, knock or shake the phone. Rough handling can damage internal circuit boards.

9) Do not paint the phone. The paint may block the parts responsible for compliance could void the user's authority to operate the equipment.

10) Use a clean, soft, dry cloth to clean the camera, light sensor lenses. Prohibit the use of harmful chemicals and cleaning agents to clean the phone.

11) Pacemaker manufacturers recommend that a minimum separation of 5mm be maintained between a mobile phone and a pacemaker to avoid a potential interference with the pacemaker (when the device is used in the USA, the separation distance can be maintained at 10mm between user's body and handset). To achieve this use the phone on the opposite


ear to your pacemaker and do not carry it in a breast pocket.

12) Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

13) Turn off your mobile phone or wireless devices when in a blasting area or in areas posted turn off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

14) There is a risk of explosion if the battery is replaced with an incorrect type. Dispose of a used batteries according to the instructions.

Getting to Know Your Phone

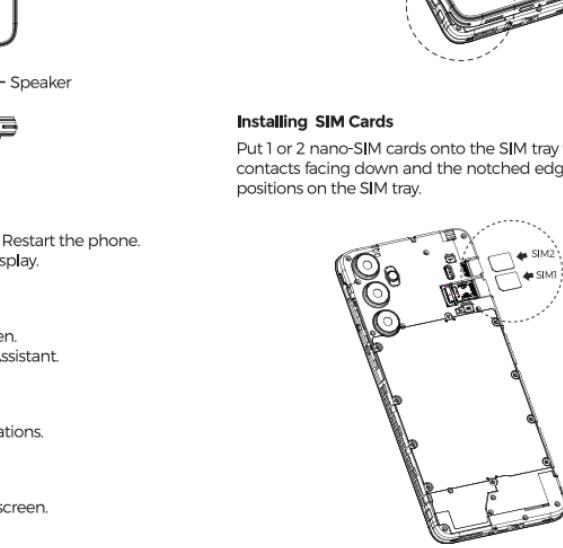

ear to your pacemaker and do not carry it in a breast pocket.

12) Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

13) Turn off your mobile phone or wireless devices when in a blasting area or in areas posted turn off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

14) There is a risk of explosion if the battery is replaced with an incorrect type. Dispose of a used batteries according to the instructions.

Getting to Know Your Phone



Before Getting Started

Installing a microSD Card (Not Included)

Display

Brightness: Brightness level: Adjust the screen brightness.

Lock display: Lockscreen: Customized when sleep or lock screen. Screen timeout: Adjust the time allowed before the screen goes to sleep after inactive.

Appearance: Dark theme: Turn on/off the dark background. Font size: Set the font size of the system. Display size: Set the display size of the screen.

Other display controls

Auto-rotated screen: Swipe to turn off. Screen save: Choose the screen saver and when to start.

NOTE: Some applications may require a microSD card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSD card installed and not remove or replace it randomly.

System

Language and input: Put 1 or 2 nano-SIM cards onto the SIM tray with the gold contacts facing down and the notched edges match the positions on the SIM tray.

Power Key

- Press and hold to Power on/off, or Restart the phone.
- Press to wake up or turn off the display.

Home Key

- Touch to return to the home screen.
- Touch and hold to open Google Assistant.

Menu Key

- Touch to see recently used applications.

Back Key

- Touch to go back to the previous screen.

Volume Keys

- Press or hold to turn the volume up or down.

Technical Specifications

Before Getting Started

Installing the Back Cover

Display

Brightness: Brightness level: Adjust the screen brightness.

Lock display: Lockscreen: Customized when sleep or lock screen. Screen timeout: Adjust the time allowed before the screen goes to sleep after inactive.

Appearance: Dark theme: Turn on/off the dark background. Font size: Set the font size of the system. Display size: Set the display size of the screen.

Other display controls

Auto-rotated screen: Swipe to turn off. Screen save: Choose the screen saver and when to start.

NOTE: Some applications may require a microSD card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSD card installed and not remove or replace it randomly.

System

Language and input: Put 1 or 2 nano-SIM cards onto the SIM tray with the gold contacts facing down and the notched edges match the positions on the SIM tray.

Power Key

- Press and hold to Power on/off, or Restart the phone.
- Press to wake up or turn off the display.

Home Key

- Touch to return to the home screen.
- Touch and hold to open Google Assistant.

Menu Key

- Touch to see recently used applications.

Back Key

- Touch to go back to the previous screen.

Volume Keys

- Press or hold to turn the volume up or down.

Technical Specifications

Before Getting Started

Installing the Back Cover

Display

Brightness: Brightness level: Adjust the screen brightness.

Lock display: Lockscreen: Customized when sleep or lock screen. Screen timeout: Adjust the time allowed before the screen goes to sleep after inactive.

Appearance: Dark theme: Turn on/off the dark background. Font size: Set the font size of the system. Display size: Set the display size of the screen.

Other display controls

Auto-rotated screen: Swipe to turn off. Screen save: Choose the screen saver and when to start.

NOTE: Some applications may require a microSD card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSD card installed and not remove or replace it randomly.

System

Language and input: Put 1 or 2 nano-SIM cards onto the SIM tray with the gold contacts facing down and the notched edges match the positions on the SIM tray.

Power Key

- Press and hold to Power on/off, or Restart the phone.
- Press to wake up or turn off the display.

Home Key

- Touch to return to the home screen.
- Touch and hold to open Google Assistant.

Menu Key

- Touch to see recently used applications.

Back Key

- Touch to go back to the previous screen.

Volume Keys

- Press or hold to turn the volume up or down.

Technical Specifications

Before Getting Started

Installing the Back Cover

Display

Brightness: Brightness level: Adjust the screen brightness.

Lock display: Lockscreen: Customized when sleep or lock screen. Screen timeout: Adjust the time allowed before the screen goes to sleep after inactive.

Appearance: Dark theme: Turn on/off the dark background. Font size: Set the font size of the system. Display size: Set the display size of the screen.

Other display controls

Auto-rotated screen: Swipe to turn off. Screen save: Choose the screen saver and when to start.

NOTE: Some applications may require a microSD card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSD card installed and not remove or replace it randomly.

System

Language and input: Put 1 or 2 nano-SIM cards onto the SIM tray with the gold contacts facing down and the notched edges match the positions on the SIM tray.

Power Key

- Press and hold to Power on/off, or Restart the phone.
- Press to wake up or turn off the display.

Home Key

- Touch to return to the home screen.
- Touch and hold to open Google Assistant.

Menu Key

- Touch to see recently used applications.

Back Key

- Touch to go back to the previous screen.

Volume Keys

- Press or hold to turn the volume up or down.

Technical Specifications

Before Getting Started

Installing the Back Cover

Display

Brightness: Brightness level: Adjust the screen brightness.

Lock display: Lockscreen: Customized when sleep or lock screen. Screen timeout: Adjust the time allowed before the screen goes to sleep after inactive.

Appearance: Dark theme: Turn on/off the dark background. Font size: Set the font size of the system. Display size: Set the display size of the screen.

Other display controls

Auto-rotated screen: Swipe to turn off. Screen save: Choose the screen saver and when to start.

NOTE: Some applications may require a microSD card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSD card installed and not remove or replace it randomly.

System

Language and input: Put 1 or 2 nano-SIM cards onto the SIM tray with the gold contacts facing down and the notched edges match the positions on the SIM tray.

Power Key

- Press and hold to Power on/off, or Restart the phone.
- Press to wake up or turn off the display.

Home Key

- Touch to return to the home screen.
- Touch and hold to open Google Assistant.

Menu Key

- Touch to see recently used applications.

Back Key

- Touch to go back to the previous screen.

Volume Keys

- Press or hold to turn the volume up or down.

Technical Specifications

Before Getting Started

Installing the Back Cover

Display

Brightness: Brightness level: Adjust the screen brightness.

Lock display: Lockscreen: Customized when sleep or lock screen. Screen timeout: Adjust the time allowed before the screen goes to sleep after inactive.

