

Test model: AKZ-ML-XGS

Ehome plug instruction manual

Understanding intelligent sockets



Function keys and indicator lights

Keys:

Short press the power switch button, blue light on indicate it is working, blue light off indicate it is not working.

Long press the power switch button for 5 seconds, blue light flicker, enter configuration mode.

Smart Socket can be used as a repeater, which has a more than 400kbps communication bandwidth.

Indicator lights:

The blue light is in a slow flash state, indicating that the network connection is abnormal. Please check the router or network configuration.

Blue light on indicate it is working, blue light off indicate it is not working.

Technical Parameter

Model: EHome

Product size: 12*9.5*3 cm

AC Channel:2

DC Channel:2

AC Output Maximum current: 10A

DC Output Maximum Current: 2A

Input Voltage: AC 90-250V

AC Output Voltage: AC 90-250V

DC Output Voltage: 5.0V

Maximum Load: 4400W 20A Working temperature: 0 - 40

Wireless Type: Wi-Fi 2.4GHz Wireless standard: IEEE 802.11 b/g/n

Support System: Android\iOS

How to start

1.Download software

Scan QR code download Smart Socket APP, register an account and login.



2. Connect the product to the power supply

 
Long press the power switch button for 5 seconds, blue light flicker.



3.Add device

Confirm that the mobile phone is connected to the available WIFI network and click Add socket.


(Note: the WIFI network of the 5G band is not supported)

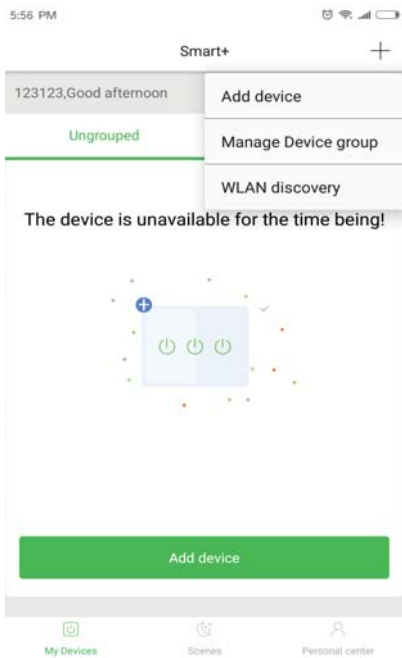


Make sure the device blue light is flashing fast.

4. Network configuration

 Enter the WIFI router password for the current connection of your cell phone. Click confirm.

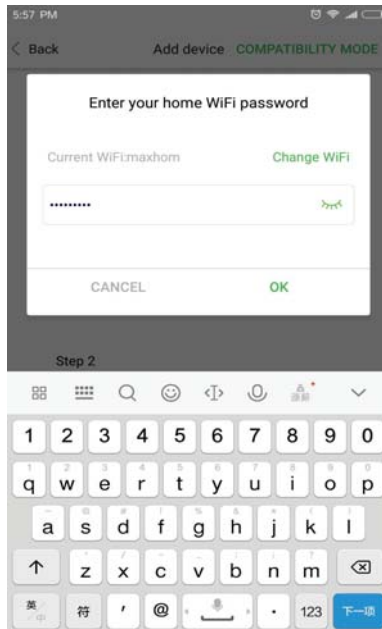


Wait for configuration to complete

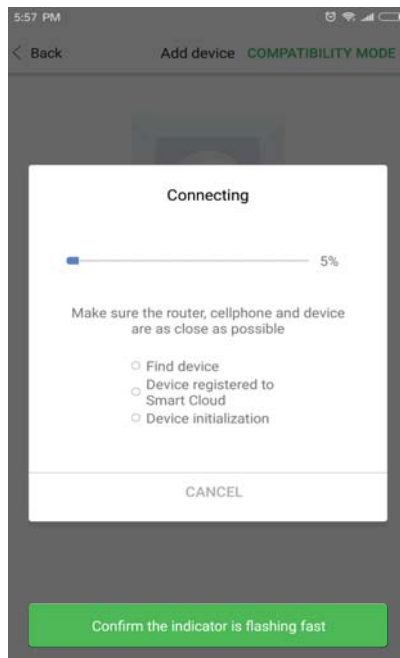 

5. Configuration Complete

 The blue light changed from flicker to light. Click "Done" to add the device successfully.

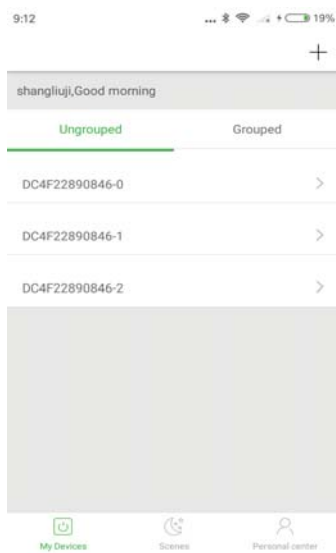


Here are THREE plugs. xxxxxxxx-0 and xxxxxxxx-1 are two AC output plugs, and xxxxxxxx-2 is the two USB output. And the control is shown in below picture.



6. Repeater mode

 Switch the button in the picture below in "ON" mode, the socket can be used as a repeater. The repeater SSID is " ", and the default password is "12345678". The repeater can supply more than 400 kbps communication bandwidth for ONE client.

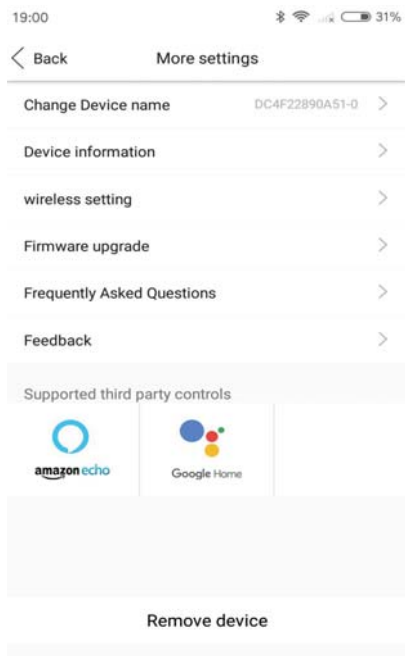

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter