

WIRELESS PB-304



Important Safety Precautions

When using your Bluetooth Speaker, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not use your speaker near water. Clean using a soft cloth or paper towel.
3. Do not place your speaker on any wet surfaces.
4. Do not allow children to play with your speaker without adult supervision.
5. Do not expose your speaker to excessive heat, flames or fire.
6. Use moderate force when pressing buttons. Excessive force may cause damage to your speaker.
7. Do not use in extremely dry environments, as this can lead to static discharge during usage.
8. Do not expose your speaker to temperatures above 104°F (40°C). Keep out of direct sunlight.
9. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
10. Do not drop, puncture or expose your speaker to excessive trauma.
11. Your speaker is not intended for commercial use.
12. Do not place near objects that generate a strong magnetic field.
13. Use only the supplied chargers and cables. Unplug this device when not in use for long periods of time or during lightning storms.

Introduction

Thank you for purchasing your Bluetooth Speaker. You can use your speaker with Bluetooth devices such as most smartphones, laptops, and tablets to stream music and enjoy hands-free calling. In order to get the best results when using this device, please read this manual first before using.

Package Contents

- a.) Bluetooth Speaker
- b.) USB Charging Cable
- c.) AUX Cable
- d.) User's Manual with Warranty Information
- e.) Power Charging Adapter (5V/1A)


Specifications

Bluetooth Range: Up to 33 feet (10 meters)
Power Supply: DC 3.7V
Battery Type: 1,800 mAh lithium-ion battery
Charge Time: Approximately 3 hours
Music Playback Time: Approximately 6-8 hours
Dimensions: 4" H x 11" W x 4" D

The above specifications are applicable at 80% of the maximum volume. Results will be lower when volume is higher and can vary depending on usage.

A Quick Look at Your Device

- (1) LED Indicator Light
- (2) Next Track/Volume +Button
- (3) Previous Track/Volume - Button
- (4) Play/Pause/Answer/Bluetooth Reset Button
- (5) Microphone
- (6) Auxiliary Port
- (7) Charging Port
- (8) ON/OFF Switch

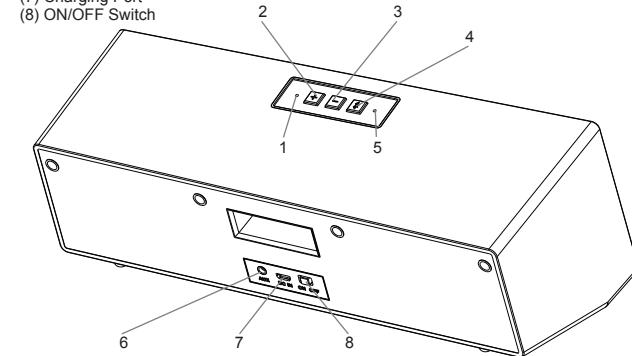

Charging Your Speaker

Your speaker has a built-in, rechargeable lithium-ion battery. To avoid damage, do not attempt to remove the battery. Full performance of the battery is only achieved after a few charging-discharging cycles. Charge the battery fully before first use. To do so, follow the steps below:

STEP 1: Connect the corresponding end of the included USB charging cable to the Charging Port (6) on your speaker. Then plug the other end of the USB charging cable into a USB port on your computer or a suitable power adapter in order to recharge your speaker.

NOTE: The internal battery of your speaker takes approximately 3-4 hours to charge when completely drained.

STEP 2: When the battery is charging, the LED Indicator Light (1) on your speaker will turn red. The LED Indicator Light will turn off when the battery is fully charged. Unplug when charging is complete.

NOTE: Overcharging could reduce the battery life of your speaker. Also, a charged battery will lose its capacity if it is not used on a regular basis.

IMPORTANT! To avoid a complete discharge of the battery, charge your speaker at least once every three months.

Using Your Speaker

Powering Your Speaker ON and OFF

STEP 1: Slide the ON/OFF Switch (8) on your speaker to the ON position in order to power on. If you have already paired your speaker to your Bluetooth device, they will automatically remain paired each time you power on your speaker.

STEP 2: Slide the ON/OFF Switch to the OFF position in order to power off your speaker.

Pairing Your Speaker with a Bluetooth Device

Your speaker can be paired with Bluetooth devices such as most smartphones, laptops, and tablets. In order to pair your speaker with a Bluetooth device, follow the steps below:

STEP 1: Slide the ON/OFF Switch to the ON position in order to power on your speaker. The LED

Indicator Light will alternately blink blue and red. This indicates that your speaker is in the process of pairing.

STEP 2: Go to the Bluetooth Manager of your Bluetooth device.

STEP 3: Search Bluetooth devices and select your speaker (most frequently listed as "PB-304") to start connecting.

STEP 4: Enter "0000" if your device asks for the PIN code.

STEP 5: Once paired, the LED Indicator Light will remain blue.

NOTE: To unpair your speaker from your phone, press and hold the Play/Pause/Answer/Bluetooth Reset Button (4) on your speaker for several seconds until the connection is reset.

Listening to Music

Quickly tap	To play or pause a track
Press and hold	To increase volume
Press and hold	To decrease volume
Quickly tap	To skip to next song in a playlist
Quickly tap	To go back to previous song in a playlist

NOTE: You can also adjust volume and playback settings directly from your Bluetooth device. When connected using the Auxiliary Port (6) on your speaker, the speaker's buttons to advance to the next track or return to the previous track may not have full functionality.

Using the Phone Function

Quickly tap	To answer an incoming call
Quickly tap	To end a call

NOTE: The phone function can only be used when there is a Bluetooth connection between your speaker and phone.

Maintenance and Care

Before using your speaker, inspect the ports and jacks to make sure that they are clear of dust and debris before inserting USB Charging Cable or AUX Cable.

Never use any harsh chemicals or detergents when cleaning your speaker. Wipe down with a soft cloth. Make sure your speaker is dry before using.

Store your speaker in a cool, dry place when not in use.

Never tug or yank on the USB Charging Cable or AUX Cable while they are connected to your speaker. Connect and disconnect these cables by holding speaker in place and firmly inserting or pulling cables by the plug, not the wire.

Never expose your speaker to high temperatures, extreme cold, high humidity or excessive moisture or water.

Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact your local recycling facilities for further information.

Warnings

1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The transmitter must not be co-located or operating in conjunction with any other antenna or transmitter