

English

Operation manual

This product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at: www.nomadsaudio.com/declaration-of-conformity/bringone

2  3

NOTES BEFORE USE

This product is designed with full attention for safety performance. To ensure safe operation, please follow the following rules:

1. Place the speakers in a stable position avoid fall and cause damage or personal injury.
2. Do not drop, disassemble, open, crush, bend, puncture or burn the speaker.
3. Do not place close to any heat source (such as radiators, heating equipment, stoves, or other heat-generating equipment).
4. Please send to a professional maintenance staff to repair the speaker for any reason damaged.
5. Before wiping with a dry cloth to clean the speakers, set the power switch to the off position and unplug the power cord from the power outlet.
6. Health considerations, please adjust the sound to a suitable level.

SAFETY INSTRUCTIONS

Read all instructions

Only charge with devices rated and marked with 5V to avoid damage to the speaker.

Do not open up the speaker, it voids the warranty and may damage the product.


Rechargeable batteries have a limited number of charge cycles. Battery life and number of charge cycles varies by use and settings. Never place the speaker close to high temperature heat sources. To keep the warranty valid, never try to repair the product yourself.

English

PACKAGE INCLUDING

- 1 x Wireless speaker
- 1 x Product manual
- 1 x Micro USB cable

PARTS AND FUNCTIONS

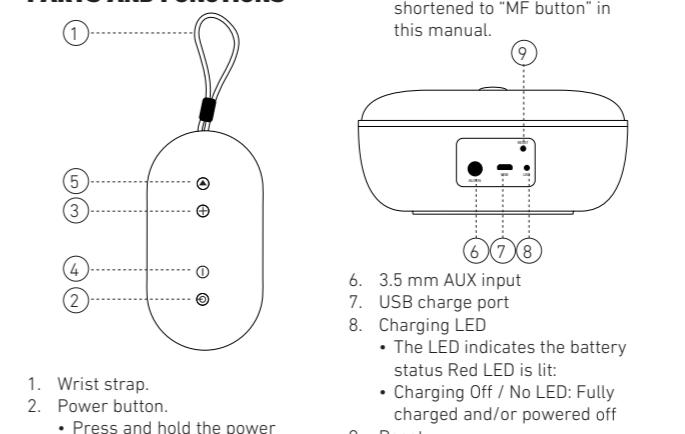

1. Wrist strap.
 2. Power button.
 3. 3.5 mm AUX input
 4. USB charge port
 5. Charging LED
 6. 3.5 mm AUX input
 7. USB charge port
 8. Charging LED
 9. Reset

power the speaker on or off.
 3. Next song / Increase Volume
 4. Previous song / Decrease Volume
 5. Multi-function button:
 • Multi-function button, is shortened to "MF button" in this manual.

THE SPEAKER'S BATTERY

A built-in rechargeable battery powers the speaker.

CHARGING

Connect the supplied charging cable to the charge input and to a USB port on your computer or a USB charger. The charging LED is lit red during charging. The LED turns off when fully charged. It is recommended to charge 10 minutes before powering on if not used for 7 days, then you can continue to use BRINGOne while charging.

DISCONNECT THE SPEAKER

On your device, disconnect the Bluetooth connection with the speaker.

POWER ON/OFF

- Power on: Long press power on the speaker, then the Bluetooth indicator light is on and you can connect
- Charging Off / No LED: Fully charged and/or powered off
- Power off: Long press power on the speaker, and then the Bluetooth indicator will turn off.

English

RECONNECT THE SPEAKER

Some Bluetooth devices support automatic reconnection, with those devices the speaker will automatically reconnect. The speaker will not automatically reconnect on devices that does not support automatic reconnection.

AUDIO CABLE CONNECTION

Power the speaker on. Connect a 3.5 mm audio cable to the speaker and your device. The speaker is now connected to your device.

THE MF BUTTON'S FUNCTIONALITY

Play / pause / answer incoming call / end call

- Short press on the MF-button.

CHANGE VOLUME AND SONG

When listening to music

- Increase volume: Short press on the "+" button.
- Decrease volume: Short press on the "-" button.
- Previous song: Long press on the "-" button.
- Next song: Long press on the "+" button.

DURING A CALL

- Increase volume: Long press on the "+" button.
- Decrease volume: Long press on the "-" button.

TECHNICAL PARAMETERS

- Model: BRINGOne
- Speaker: Ø40mm 4Ω 5W x 2
- Charging time: 2.5 hours
- Input: 5.0V 1.0A
- Product Weight: 295g
- Bluetooth: 4.2+EDR compliant
- Built-in rechargeable battery: Li-on, 3.7V, 2200mAh
- Playing time: 12 hours
- Product Size: 168 x 90 x 40mm
- Range: Up to 10m
- IPX5

TWS CONNECTION

1. Turn on both speakers
2. Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound.
3. Release Play/Pause button on one of the speakers for about 2 seconds. It can take a few more seconds before the speakers connect to each other. If you are connected to both speakers without the TWS

HANDS-FREE FUNCTIONALITY

1. Connect your phone via Bluetooth, the speaker will play ringtones when a call is incoming.

English

connection between them, then you have to disconnect from one of the speakers.

EXPLANATION

First fault: connection failed.

Solution:

1. Please check whether the multifunction indicator light flashes blue. Please power on your speakers if the light isn't on. Please charge the speaker if the light is still not on.
2. Note: Please use the same type or equivalent type of battery to replace if the battery is scrapped. Otherwise an explosion may occur.
3. The lithium battery may not be exposed to fire or excessive heat.

TWS DISCONNECTION

Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound.

NOTE

When speakers are previously paired with each other:

If they do not automatically pair with each other when you turn them on, press and hold the Play/Pause button on one of the speakers for about 2 seconds. It can take a few more seconds before the speakers connect to each other. If you are connected to both speakers without the TWS

FAULT AND MAINTENANCE

There is poor sound quality?

Move the device closer to the speaker or try removing obstacles between them.

Cannot connect the device with the speaker?

Disconnect other connected devices and then try again. You can force a disconnection by moving out of Bluetooth range (8-12 m).

There is no sound?

- Adjust the volume.
- Make sure that your Bluetooth device is within range.
- Ensure there is no obstacles in the way that can block/disturb the signal.
- Check via the device's Bluetooth connection if the speaker is connected with the device.

English

10 English

11 English

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.