

# Fast Wireless Charging Pad Instruction Manual



## Features:

1. Wireless Charging Pad
2. Micro USB Input
3. LED Indicator

## What's included:

- 1 x Wireless Charging Pad
- 1 x Micro-USB Cable
- 1 x Instruction Manual
- 1 x Gift Box Packing

## Tech Specifications

- Input power: DC 9V/1.67A
- Output power: 5W/7.5W/10W

## INSTRUCTIONS:

- a. Ensure that your phone supports wireless charging. It will be listed in the manufacturer's specifications. (See also the last page of this manual). If not, add wireless receiver to your phone to enable it with wireless charging function.
- b. Peel backing off of the round sticker Place the charging pouch on desired clean/ smooth surface.
- c. Connect the wireless charging pad to a USB adapter with the provided cable. Place the enabled device on the wireless charging pad. Device will automatically begin to charge.
- d. The LED indicator displays red when power is on. LED indicator displays in blue color while wireless charging is on. It will blink red and blue alternately when product is with foreign object damage position.

\* Note: To charge devices, use only the accessory cable or the cable included with your own device by the manufacturer.

## WIRELESS CHARGING ENABLED DEVICES:

iPhone 8/8Plus/X, Samsung Galaxy S8/S8+/S7/S7 Edge/S6/S6 Edge, Nokia Lumia 1020/920/928, HTC 8X, HTC Droid DNA, HTC Rzound, HTC Incredibly 4G LTE, Moto Droid Turbo, Motorola Moto 360 Smart Watch, Moto Droid Maxx, Droid Mini, Google Nexus 6/4/5/7 (2013), LG D1L, LG LTE2, LG G2 (Verizon), Blackberry Z30 (Verizon)

## SAFETY PRECAUTIONS:

Read all the instructions before using the product.

1. Do not use on an aircraft or in a hospital.
2. To reduce the risk of injury, close supervision is necessary when the product is used near children.
3. Do not expose the device to any moisture.
4. Do not use the device in excess of its output rating. Overloaded outputs above rating may result in a risk of fire or injury.
5. Do not use the device if damaged or modified. Damaged or modified device may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
6. Do not disassemble the device. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury.
7. Do not expose the device to fire or excessive temperature. Exposure to extreme heat may cause explosion.
8. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
9. This device is not a toy.
10. Do not overcharge Phone. Unit may get hot with excessive use. Remove Phone when it is fully charged. Never charge for more than 7 hours at a time

\*\*\* KEEP OUT OF REACH OF CHILDREN\*\*\*

## FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

\* Warning:  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC Caution:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.