### **WIRELESS HEADPHONE**

### **RBK5001 User Manual**

## **Package Contents**

- Wireless Headphone
- USB-C Charging Cable
- User's Manual with Warranty Information

## **Specifications**

Bluetooth Version: 5.4

Bluetooth Range: Up to 33 feet (10 meters)


Charging Input: DC5V 180mA

Battery Type: Li-ion Polymer Battery Charge Time: Approximately 2 Hours Play Time: testing, will advise later\*\*

\*\*Applicable at 50% of maximum volume. Results will be lower when volume is

higher

### **A Closer Look**

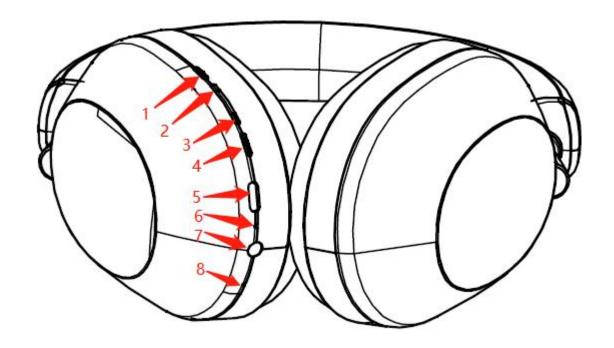

- 1. Play/Pause
- 2. Volume + Button
- 3. Volume Button
- 4. Power Button
- 5. Type-C Charging Port
- 6. Indicator Light
- 7. AUX-IN Jack
- 8. MIC

### **Charging**

- 1. The included USB charging cable has a USB-C plug and a standard USB plug.
- 2. Insert the USB charging cable's USB-C plug into the charging port on your headphones.
- 3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable USB charging adapter.
- 4. The Indicator Light will turn on red while the headphones are charging, and turn to blue when charging is complete.

#### NOTES:

- -- Remove the charging cable once charging is complete.
- -- Overcharging could reduce the life of the battery.
- -- A charged battery will lose its capacity if it is not used on a regular basis.

Important: To avoid a complete discharge of the battery, charge your headphones at least once every six months.

#### **Bluetooth Pairing**

- 1. Press and hold the Power Button for 3 seconds to turn on the headphones.
- 2. You will hear a voice "Pairing" indicating the headphones are in pairing mode, and the Indicator Light will flash red and blue.
- 3. On your phone, go into the Bluetooth page in the Settings app. Make sure Bluetooth is turned on before connecting to the available device 'RBK5001 Wireless Headphone'.
- 4. You will hear a voice "Connected" and the Indicator Light will slowly flash blue indicating the headphones are paired with your phone.

# **Music/Phone Controls**

1. Play/Pause Button: Press to play/pause music or answer/end calls. Press and hold

to decline a call. Double press to activate the siri/google voice assistant.

- 2. Volume + Button: Press to increase the volume. Press and hold to go to the next track.
- 3. Voume Button: Press to decrease the volume. Press and hold to go to the previous track.
- 4. Power Button: Press and hold to power on/off the headphones.

#### **AUX Mode:**

Insert an auxiliary cable (not included) into the AUX-IN Jack to listen music from another device. Your headphone will automatically turn to AUX mode.

NOTES: You can play music through AUX mode when your headphone battery is low or depleted, although headphone functions and controls will be unresponsive. To turn back the Bluetooth mode, remove the auxiliary cable, press and hold the power button on the headphone for restart.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction